

USER MANUAL UcD-supply-ST JBE-docfile: ucdsupplyst Ver 1.0

## **User Manual Hypex UcD Supply ST**

### **Preface**

We thank you for selecting a **Hypex UcD Supply ST** and recommend that you read these instructions carefully before installation and start-up of the supply. Please keep this manual in a safe place for future reference.

### **Tested**

Committed to quality, Hypex individually tests each product to ensure reliable performance for the user. All units have passed the quality control standards of Hypex Electronics B.V. and conform within tolerance to the enclosed specifications.

# **About Hypex Electronics B.V.**

Hypex Electronics B.V. is located in Groningen, the Netherlands.

Hypex Electronics B.V. has been designing, manufacturing and supporting audio amplifier equipment since 1995. Hypex Electronics B.V. main markets are the EC Countries, United States and Australia.



### Hypex Electronics B.V.

Kattegat 8 9723 JP GRONINGEN The Netherlands Phone: +31 (0)50 5264993

Fax: +31 (0)50 5254591 Email: info@hypex.nl http://www.hypex.nl

Copyright Hypex Electronics B.V. All rights reserved; reproduction without permission prohibited. This manual may be subject to change; no liability can be accepted for any error or omission.

## 1 Safety Rules

#### 1.1 General

This equipment can be operated by anyone with basic knowledge of Electronics and understands the danger of AC and especially DC voltages.

#### WARNING: RISK OF ELECTRICAL SHOCK.

- Dangerous voltages are present during operation. The DC-output voltage may be more than 2 x 60 Volt (120 Volt DC total).

#### 1.2 Installation

- The amplifier power supply is intended to be used in normal domestic situations.
- Do not use the power supply in an excessively humid environment or near water.
- The unit must be placed in a sufficiently ventilated area; the ambient temperature should not exceed 30 °C.
- Do not connect any equipment other than the intended amplifiers to the power supply.
- All hazardous voltages may never be accidentally touched after installation and during use.

## 2 Functional explanation

## 2.1 The Principles of Operation

The UcD-supply ST converts the AC voltage into suitable DC-voltage for powering the UcD amplifiers.

The typical AC input voltage depends on the DC voltage requirements of the connected amplifier and must come from a double wound class-2 approved isolation transformer for safety reasons. This transformer must be primary fused. In case of high inrush current a current limiter PCB is recommended.

#### 2.2 Normal Conditions

The DC output voltage will vary depending on output power and transformer and should not exceed the limits of the connected amplifier for normal use.

Typical AC-input voltage for UcD180 Amplifier: 2 x 31 Vac Typical AC-input voltage for UcD400 Amplifier: 2 x 42 Vac

## 3 Functional description

See diagram last page.

The main input voltages from the transformer are wired to Faston connectors J7/J8/J9. A LED may be connected as POWER-ON indicator.

The UcD-supply has two separate DC-protection devices thus allowing two amplifiers to be connected.

The amplifier can be controlled switched on/off by the UcD-supply; completely 'popfree'.

Two fuses are mounted to protect in case of over current in the main power circuit. These fuses must be rated 4 Amp/250Volt fast type.

### 4 SPECIFICATIONS

Type : UcD-Supply-ST Output power : 400Watt

AC input voltage : Typical 2 x 46 Vac

Input frequency : 50/60 Hz

DC output voltage : 2 x 57 Vdc (at typical input voltage)
Main PCB fuses F1, F2 : maximum 4 Amp fast/250V - 5x20mm

### GENERAL DESIGN CRITERIA

Humidity : 95% non-condensing

Safety : EN 60065 EMC : EN 55103