

RUE-4191

Universal Remote Controller

Owner's Manual

WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN. Swallowing them may result in serious injury. If swallowed, consult a physician immediately

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING.

Failure to do so may result in an accident.

CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

DO NOT MIX NEW BATTERIES WITH OLD BATTERIES. INSERT WITH THE CORRECT BATTERY POLABITY

When inserting the batteries, be sure to observe proper polarity (+ and -) as instructed. Rupture or chemical leakage from the battery may cause fire or personal iniurv

Handling Precautions .

Do not drop or apply shock to the unit. It may get permanently damaged.

Keep the unit away from water and moisture, direct sun and heat, and excessive dust. Never use scouring pads, steel wool, abrasive powders or harsh chemical agents,

such as lye solution, for cleaning Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water

Do not operate this unit in a manner that could distract you from driving safely

ALPINE ELECTRONICS MARKETING, INC. 1-1-8 Nishi Gotanda, Shinagawa-ku Tokyo 141-0031, Japan Phone 03-5496-8231


ALPINE ELECTRONICS OF AMERICA, INC. 19145 Gramercy Place. Torrance. California 90501, U.S.A. Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC. 7300 Warden Ave., Suite 203, Markham, Ontario L3R 9Z6. Canada

Phone 1-800-ALPINE-1 (1-800-257-4631)


Installation of Remote Control Holder _

• Do not leave the remote control mounted on the holder, if it is direct sunlight. Remove the remote control from the holder and put it in the glove compartment. • If double-sided adhesive tape cannot install the holder securely, use screws.

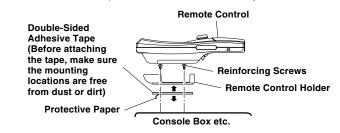


Battery Replacement

Applicable battery: Use two "AAA" sized dry batteries or equivalent.

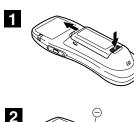

 Opening the battery cover. Push on the cover and slide it as indicated by the arrows then the cover will be removed

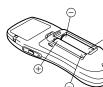

Replacing the batteries. Remove the old batteries. Insert new ones matching the (+) and (-) polarities as shown in the diagram inside the remote control

Closing the cover Push the cover in the arrow direction until a click is heard.

In Case of Difficulty

3

Problem	Cause	Solution
Remote Control Inoperative.	Reverse placement of battery.	Place the battery correctly into its cradle in the compartment.
	Dead battery.	Replace the battery with a new one.
	Remote Control not pointed toward the head unit or monitor.	Point the remote control directly toward your head unit or monitor.

Specifications

Screv

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.

6-8 Fiveways Boulevarde Keysborough

Victoria 3173. Australia

Phone 03-9769-0000

ALPINE ELECTRONICS GmbH

Kreuzerkamp 7,

40878 Ratingen, Germany

Phone 02102-4550

ALPINE ELECTRONICS OF U.K. LTD.

Alpine House

Fletchamstead Highway, Coventry CV4 9TW, U.K.

Phone 0870-33 33 763

Battery Type	AAA size batteries
Battery Quantity	
Dimensions (W \times H \times D)	
	(2-1/4" × 5-5/8" × 1-7/16")
Weight (without battery)	72 gr (2.6 oz)
Accession	
Accessories	
Battery (AAA)	
Remote Control Holder	1 set
Double-Sided Adhesive Tape	1 set

ALPINE ELECTRONICS FRANCE S.A.R.L.

(RCS PONTOISE B 338 101 280) 98, Rue de la Belle Etoile, Z.I. Paris Nord II, B.P. 50016, 95945 Roissy Charles de Gaulle Cedex, France

Phone 01-48638989 ALPINE ITALIA S.p.A. Viale C. Colombo 8, 20090 Trezzano


> Sul Naviglio (MI), Italy Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.

Portal de Gamarra 36, Pabellón, 32 01013 Vitoria (Alava)-APDO 133, Spain Phone 945-283588

> 68P20877Y89-A Printed in China (Y)

18	¬(1)
19		2)
۱» \		3)
(N NAV AUDIO EXTONO	
		4
20		5)
2)		6
23		2
29		8)
25		9)
23		y
26		_
		0
27	REAR RETURN DISP	1)
28		
		3
29	450	
		4
30		
31	CAUDIO SUBT. ANGLE	5
-	DELDEST	
32	() RUE-4191	6
		7

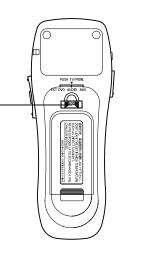

Head Unit Control Mode

When energing the AV/ Lload When operating the Head Unit, set the EXT DVD/ AUDIO/NAV. Switch to the "AUDIO" side 1 Remote Control Transmitter Status indicator for AUDIO mode BAND button Radio mode: Preset Selection Changer mode: Disc Selection MP3 mode: Folder Select Tape mode: Programme Sensor SOURCE button VOLUME UP/DOWN button MUTE buttor _ 13 -14 -_ A.PROC. button PLAY/PAUSE button Power ON/OFF button Radio mode: SEEK UP/DOWN CD/MD/Changer mode: Music Sensor, BW/FF (press and hold) Tape mode: REW/FF 23 24 LIGHT Button for Remote Controller Display Angle UP/DOWN button 30 — _

25

(26)

- 3 FXT DVD/AUDIO/NAV Switch
 - TV/MONI, button (Push)
- Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit

Map/Arrow type Navigation Control Mode

Remote Control Transmitter

When operating the navigation, set the EXT DVD/ AUDIO/NAV. Switch to the "NAV." side

MODE button VOLUME UP/DOWN button (When connected with the Ai-NET Head Unit) MUTE button (When connected with the Ai-NET Head Unit) NENU button button (MAP Type only) POS. button VOICE button Numeric Keypac OK/M.PT button DEL. DEST. button Status indicator for NAV. mode 21 Power ON/OFF button 24 LIGHT button for Remote Controller Zoom (Wide/Detail) button (Map Type only) 26 Joystick/ENTER button 27 I O PT button 28 RETURN button 29 ROUTE button

- 30 DEL./DEST. button TEL. button (Map Type only)
- 3 EXT DVD/AUDIO/NAV. Switch TV/MONI. button (Push)

Notes

31)

- Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.
- After pressing the MODE button, press the following buttons while the status indicator is blinking: Numeric Keypad (0 to 9). DEL. button, OK button

AV Head Unit Control Mode

	hen operating the AV Head /D/AUDIO/NAV. Switch to th
1	Remote Control Transmitte Status indicator for AUDIO
3 4 5	BAND button Radio mode: Preset Select Changer mode: Disc Select
6 7 8	SOURCE button
9 10 11	MUTE button
(12) (13) (14)	— — Function button (1 to 7)
15 16 17	
18 19 20	— A.PROC. button Audio mode Selection (VOI FAD)
21 22	Press and hold for 2 secon Power ON/OFF button Radio mode: SEEK UP/DO CD/MD/Changer mode: Mu
23 24 25 26	BW V.SEL. button LIGHT button for Remote C Display Angle UP/DOWN b —
27 28 29 30	_ _ _ _
31 32	

33 EXT DVD/AUDIO/NAV. Switch TV/MONI. button (Push)

Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's

Manual for the unit.

I /BASS/TRE/BAL/ nds to LOUD ON/OFF OWN usic Sensor, N/FF (press and hold) Controller button

TV/Monitor Control Mode

When controlling the Monitor, press the EXT DVD/ AUDIO/NAV. Switch to activate the TV/MONI. mode.

Check which TV Tuner or Monitor functions corresponds to which buttons on the remote control and attach the appropriate seal (supplied).

Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.

Jnit, set the EXT e "AUDIO" side.	
mode	

tion ctior

io Adjust button

DVD Player/DVD Changer Control Mode

When operating the External DVD Player/DVD Changer, set the EXT DVD/AUDIO/NAV. Switch to the "EXT DVD" side.

- Remote Control Transmitter
- Status indicator for EXT DVD mode
- DVD Changer mode: Disc Selection Audio SOURCE button
- (When connected with the Ai-NET Head Unit) ■ (STOP) button
- VOLUME UP/DOWN
- (When connected with the Ai-NET Head Unit) (9) MUTE button (When connected with the
- Ai-NET Head Unit) 10 MENU button
- Press and hold for 2 seconds to display the setup menu.
- (11) Searching by Title/Chapter/elapsed time Press and hold for 2 seconds to display the DVD menu/Title menu.
- (12)
- Numeric Keypad
- ANGLE button
- (17) SUB T. (Subtitle) button Press and hold this for 2 seconds to turn the
- subtitles ON and OFF
- (18) (19) A.PROC. button
- (When connected with the Digital Audio Processor) 20 Playback,
- Press and hold for 2 seconds to playback the slow motion
- Power ON/OFF button 22
- Chapters and tracks skip Press and hold for 2 seconds to BW/FF.
- 23
- LIGHT button for Remote Controller 24
- 25 Display angle UP/DOWN button
- (When connected with the Ai-NET Head Unit) (26 Joystick/ENTER button
- **RETURN** button
- 29

- 32
- AUDIO button EXT DVD/AUDIO/NAV. Switch 33
- TV/MONI, button (Push)
- Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.