


DIGITAL INPUTS BOARD FOR CD PLAYERS CDSE-2

Enclosed :
1 Digital Inputs board

Careful : before any intervention, switch off your appliance and unplug all cables.


1°) Unscrew the back cover.

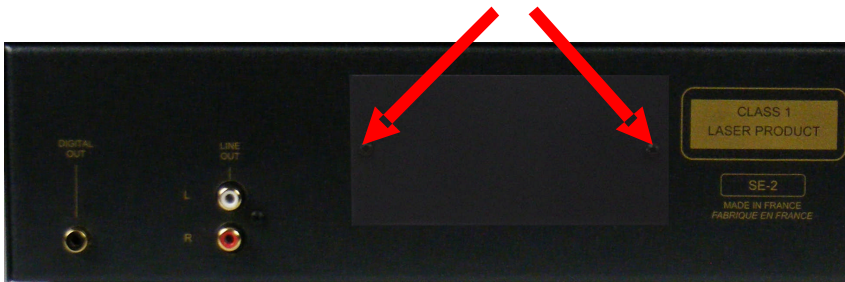

2°) Get off the top cover.

3°) Put the board at its place and screw it on the main chassis with the screws of the back cover.

4°) Fix the ribbon flex of the digital board on the connector of the main board.

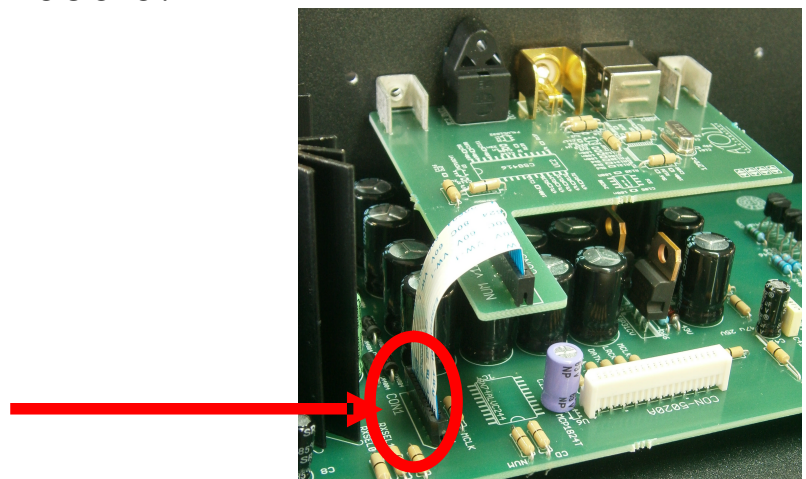

5°) Close the appliance.

Using : see owner's manual