


Setting Up the Unit and Using the Top Panel

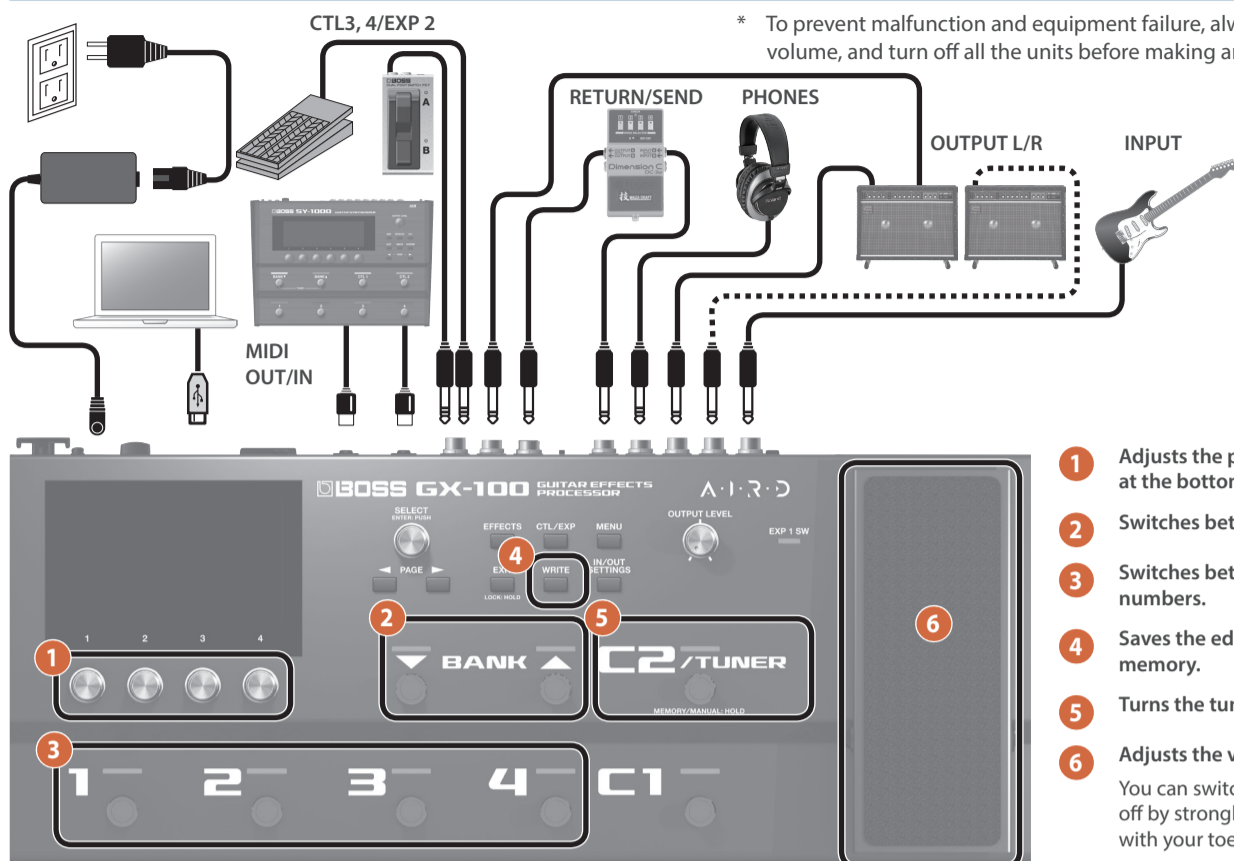

* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.


- 1 Adjusts the parameters shown at the bottom of the screen.
- 2 Switches between banks.
- 3 Switches between memory numbers.
- 4 Saves the edited sound to memory.
- 5 Turns the tuner on/off.
- 6 Adjusts the volume. You can switch the pedal FX on/off by strongly pressing down with your toes.

Turning the Power On

- * Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.
- * Once everything is properly connected, be sure to follow the procedure below to turn on their power. If you turn on equipment in the wrong order, you risk causing malfunction or equipment failure.

1. Turn on the [POWER] switch of this unit first, and then turn on any equipment that are connected to this unit. Turn on your amps and speakers last.
2. Adjust the volume of the connected equipment.
3. Use the [OUTPUT LEVEL] knob to adjust the overall volume of this unit.

- * The power to this unit will be turned off automatically after a predetermined amount of time has passed since it was last used for playing music, or its buttons or controls were operated (Auto Off function). If you do not want the power to be turned off automatically, disengage the Auto Off function. For detail, refer to the "Reference Manual" (Web).
 - Unsaved data is lost when the power turns off. Before turning the power off, save the data that you want to keep.
 - To restore power, turn the power on again.
- * Use the cord hook to secure the cord of the AC adaptor as shown in the illustration.

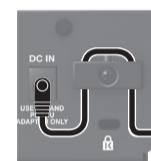

- * Connect the ground terminal to an external earth or ground if necessary.


- * When you operate the expression pedal, please be careful not to get your fingers pinched between the movable part and the unit. In places where small children are present, make sure that an adult provides supervision and guidance.
- * When connecting an external expression pedal, use only the specified expression pedal. By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit. Expression pedals you can use (sold separately): EV-30, FV-500L, FV-500H, Roland EV-5

Basic Onscreen Operations


Play screen

First, try playing some notes on your guitar.

Memory number display mode

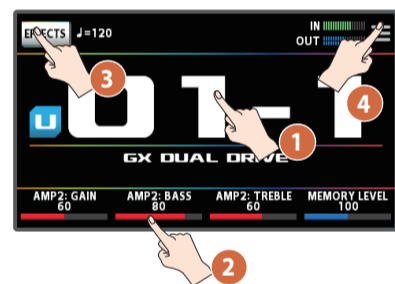

Memory name display mode

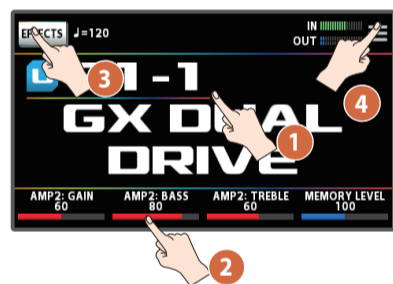


- 1 Swipe the memory number or memory name up and down or left and right to switch between memories.
- 2 Drag the respective parameters at the bottom of the screen to left or right to change their values.
- 3 Touch <EFFECTS> to switch to the effects chain screen.
- 4 Touch [≡] to display the menu screen.

MEMO


You can press the PAGE [◀] [▶] buttons to switch between display modes on the play screen.
(Memory number display mode ↔ Memory name display mode ↔ Control mode ↔ Chain mode)

Control mode

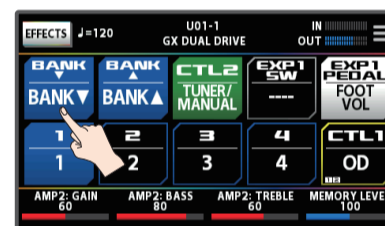



You can touch the screen to switch between banks and memories, in the same way as when you use the footswitches on the top panel.

Chain mode

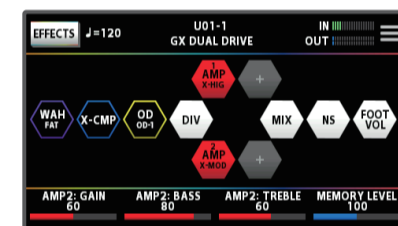

Shows how the effects are arranged together for the selected memory.


Chain screen

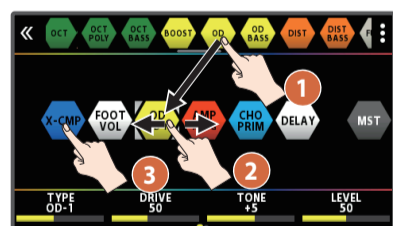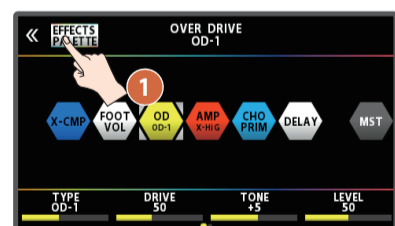


- 1 Touch <EFFECTS PALETTE> to show the icons for all effects that can be used on the GX-100.
- 1 Drag the effect icons from the top row of the screen to where you want to place them in the effects chain.
- 2 Drag the icons from left to right to change their order in the effects chain.
- 3 Touch an effect icon to turn it on/off. Long-press an icon to display the edit screen.

Edit screen

Displays all parameters that you can edit for each effect.

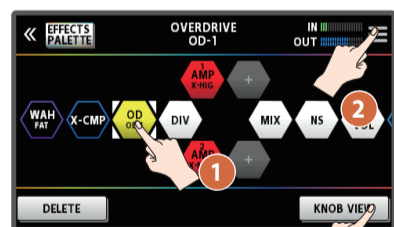

- 1 Touch the icon of the effect you want to edit in the effect chain, shown in the center of the screen.
- 2 Touch the [≡] mark.
- 3 Touch <KNOB VIEW>. The edit screen (KNOB VIEW) appears.

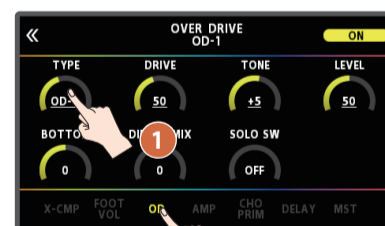

- 1 Drag the parameter icons up and down to change their values.
- 2 Touch an effect name at the bottom of the screen to edit that effect.

MEMO

Press the [WRITE] button on the top panel to save the sound you edited to memory.

Reference Manual (Web)

Refer to the website listed below for detailed documentation on how to operate this unit.

https://roland.cm/gx-100_om



BOSS TONE CENTRAL

You can download memories for this unit from our dedicated BOSS TONE CENTRAL website.

<http://bosstonecentral.com/>

