 


# ELECTRONIC KEYBOARD

## Owner's Manual

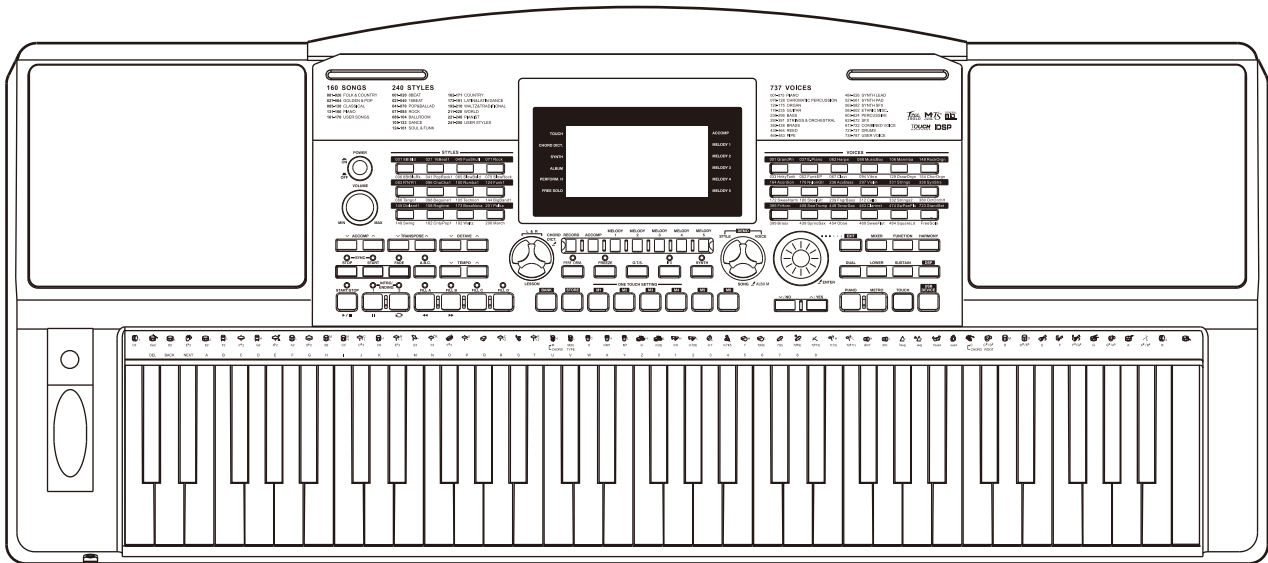

# INFORMATION FOR YOUR SAFETY!

## THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

### CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

## PRECAUTIONS

### PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

#### Power Supply

Please connect the designated DC adaptor to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the DC power adaptor when not using the instrument, or during electrical storms.

#### Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

#### Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

#### Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

#### Cleaning

Clean only with a soft, dry cloth.

Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

#### Handling

Do not apply excessive force to the switches or controls.

 
Do not let paper, metallic, or other objects into the instrument. If this happens, remove the electric plug from the outlet. Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

<b>Panel &amp; Display Description</b>		<b>Pedal Function</b>	
Front Panel.....	4	Volume Pedal.....	24
Rear Panel.....	6	Sustain Pedal (Assignable).....	24
Display.....	6		
<b>Setup</b>		<b>Album</b> .....	24
Power Supply.....	7		
Setting a Music Stand.....	7	<b>Other Functions</b>	
Connecting a Sustain Pedal.....	7	Tune.....	25
Connecting a Volume Pedal.....	7	Beat.....	25
		Split Point.....	25
		Pedal Assign.....	26
		Fade In.....	26
		Fade Out.....	26
		Harmony.....	26
		Reverb Level.....	26
		Chorus Level.....	27
		MIDI In.....	27
		MIDI Out.....	27
		Auto Power Off.....	27
<b>Connections</b>			
Connecting a pair of Headphones.....	8	<b>Registration Memory</b>	
Connecting an Audio Equipment.....	8	Registering the Panel Settings.....	28
Connecting an MP3/CD Player.....	8	Recalling the Registered Panel Settings.....	28
Connecting a Computer.....	8	Selecting a Registration Bank.....	28
Connecting a MIDI Device.....	8	Freezing the Accompaniment Parameter.....	28
Connecting a USB Flash Drive.....	8		
<b>Playing the Demos</b> .....	9	<b>Song Recording</b>	
		Start Recording.....	29
		Stop Recording.....	30
		Play back Recording.....	30
		Delete Recording.....	30
<b>Playing Voices</b>		<b>Song</b>	
Playing Voices.....	9	Listening to the Songs.....	31
Playing Two Voices Simultaneously-DUAL.....	10	Song Control.....	31
Playing Different Voices with Both Hands-LOWER.....	10	Lesson Mode.....	31
Touch.....	10		
Sustain.....	11	<b>Chord Dictionary</b>	
Pitch Bend.....	11	DICT1 (Chord Learning Mode).....	33
Modulation.....	11	DICT2 (Chord Testing Mode).....	33
Transpose.....	11		
Octave.....	11	<b>Connecting USB Flash Drive</b>	
Piano Mode.....	12	Common Operation.....	34
Metronome.....	12	Play.....	34
Freesolo.....	12	Load.....	35
		Save.....	36
		Delete.....	36
		Format.....	36
		Keyboard and ASCII Character Relative Table.....	36
<b>Auto Accompaniment</b>			
Playing Auto Accompaniment (rhythm track only).....	13	<b>MIDI</b>	
Playing Auto Accompaniment (all tracks).....	13	What's MIDI?.....	37
Accompaniment Sections.....	13	MIDI Terminals.....	37
Playing Different Accompaniment Sections.....	14	Downloading Data from the Computer.....	37
Fade In/Out.....	14		
Accompaniment Volume.....	15	<b>Troubleshooting</b> .....	38
Chord Fingering.....	15		
Tempo.....	16	<b>Specifications</b> .....	39
One Touch Setting.....	16		
<b>Harmony</b> .....	17	<b>Appendices</b>	
		Voice List.....	40
<b>IFX</b> .....	18	Style List.....	47
		Song List.....	50
		Demo List.....	52
		Album List.....	53
		Chord List.....	54
		MIDI Implementation Chart.....	55
<b>Performance Assistant</b>			
What's the performance assistant?.....	19		
Enter the Performance Assistant.....	19		
Guitar Mode.....	19		
Playing in the Guitar Mode.....	20		
Piano Mode.....	20		
Playing in the Piano Mode.....	21		
Exit the Performance Assistant.....	21		
<b>Synth</b>			
Enter the synth.....	22		
Create user voice.....	22		
Exit the synth.....	22		
<b>DSP Effect</b> .....	23		
<b>Mixer</b> .....	23		

# Panel & Display Description

## Front Panel

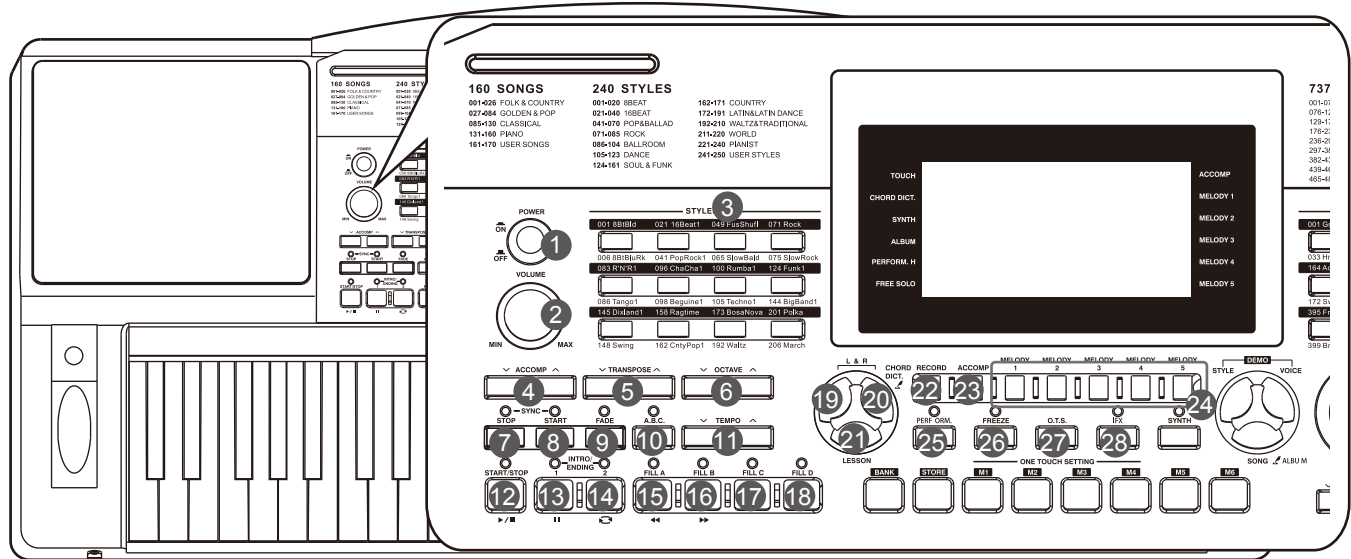

### 1. POWER BUTTON

Turn the power on and off.

### 2. VOLUME Knob

Adjust the master volume.

### 3. STYLE SELECT BUTTON

Select directly a preset style

### 4. ACCOMP +/- BUTTON

Adjust the Accompaniment volume.

### 5. TRANSPOSE +/- BUTTON

Adjust the Transpose value.

### 6. OCTAVE +/- BUTTON

Adjust the Octave value.

### 7. SYNC STOP BUTTON

Turn the Sync Stop on and off.

### 8. SYNC START BUTTON

Turn the Sync Start on and off.

### 9. FADE BUTTON

Turn the Fade in or Fade out on.

### 10. A.B.C. BUTTON

Turn the A.B.C. function on and off.

### 11. TEMPO +/- BUTTON

Adjust the current tempo.

### SONG MODE :

#### 12. START/STOP BUTTON

Start or stop playing the song.

#### 13. PAUSE BUTTON

Pause or continue playing a song.

#### 14. REPEAT A/B BUTTON

Set the beginning and the end for a loop section of a selected song.

#### 15. REW BUTTON

Rewind the song.

#### 16. FF BUTTON

Fast forward the song.

### STYLE MODE :

#### 12. START/STOP BUTTON

Start or stop playing the style.

#### 13. INTRO1/ENDING1 BUTTON

Play the Intro or Ending 1.

#### 14. INTRO2/ENDING2 BUTTON

Play the Intro or Ending 2.

#### 15. FILL A BUTTON

Play the fill-in pattern A.

#### 16. FILL B BUTTON

Play the fill-in pattern B.

#### 17. FILL C BUTTON

Play the fill-in pattern C.

#### 18. FILL D BUTTON

Play the fill-in pattern D.

### 19. LEFT HAND BUTTON

Choose to practice the left hand part in Lesson Mode.

### 20. RIGHT HAND BUTTON

Choose to practice the right hand part in Lesson Mode.

### CHORD DICTIONARY BUTTON

Hold the button to enter the Chord Dictionary.

### 21. LESSON BUTTON

Enter the lesson mode.

### 22. RECORD BUTTON

Enter the record mode.

### 23. ACCOMP BUTTON

Select the accomp track to record.

### 24. MELODY 1-5 BUTTON

Select the melody1-5 track to record.

### 25. PERFORM. BUTTON

Turn the Performance Assistant function on and off.

### 26. FREEZE BUTTON

 
Freeze the style's parameter when a memory is recalled.

### 27. O.T.S. BUTTON

Enter the One Touch Setting Mode.

### 28. IFX BUTTON

Turn the Insert Effect on and off. Hold the button to enter the Insert Effect menu.

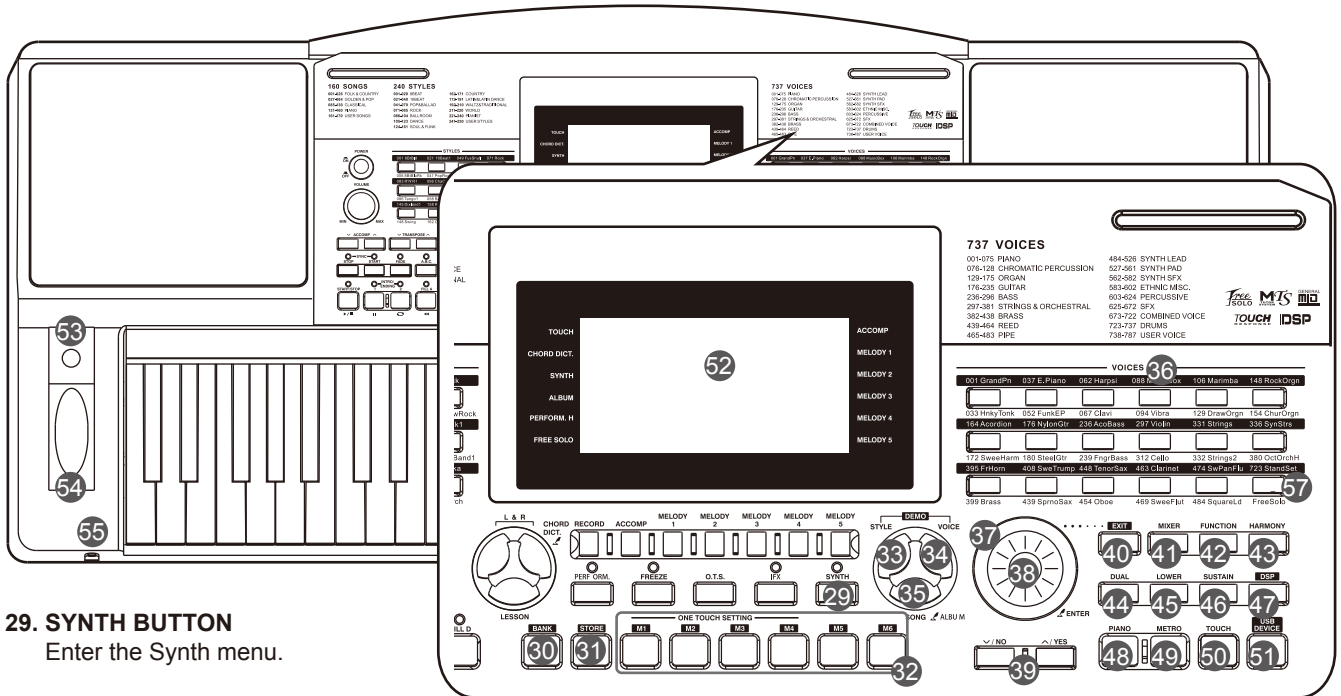

## 29. SYNTH BUTTON

Enter the Synth menu.

## 30. BANK BUTTON

Select a bank.

## 31. STORE BUTTON

Save current panel settings to one of the memories.

## 32. M1-M6 BUTTON

Register the panel settings.  
**ONE TOUCH SETTING**  
 Recall voice settings for the current style.

## 33. STYLE BUTTON

Enter the Style Mode.

## 34. VOICE BUTTON

Enter the Voice Mode.

## 35. SONG BUTTON

Press it to enter the Song Mode.  
 Hold it to turn on the Album function.

## 36. VOICE SELECT BUTTON

Select directly a preset voice.

## 37. DATA DIAL

Increase and decrease the value.

## 38. ENTER BUTTON

Enter Menu or Confirm.

## 39. - / NO,+ / YES BUTTON

Decrease or Increase the value.

## 40. EXIT BUTTON

Exit Menu or Cancel.

## 41. MIXER BUTTON

Enter mixer menu.

## 42. FUNCTION BUTTON

Enter function menu.

## 43. HARMONY BUTTON

Turn the harmony effect on and off.

## 44. DUAL BUTTON

Turn the Voice R2 on and off.

## 45. LOWER BUTTON

Turn the Voice L on and off.

## 46. SUSTAIN BUTTON

Turn the sustain on and off.

## 47. DSP BUTTON

Turn the DSP effect on and off.

## 48. PIANO BUTTON

Turn the piano mode on and off.

## 49. METRO BUTTON

Turn the metronome on and off.

## 50. TOUCH BUTTON

Enter the Touch Setting menu.

## 51. USB DEVICE BUTTON

Enter the USB Device menu

## 52. LCD Display

show all the important settings for the current operation.

## 53. MODULATION BUTTON

Apply a vibrato effect.

## 54. PITCH BEND

Bend notes up or down.

## 55. PHONES

 
Connect headphones to the unit.

## 56. USB Port

Connect a USB flash drive.


## 57. FreeSolo

Turn the FreeSolo function on and off.

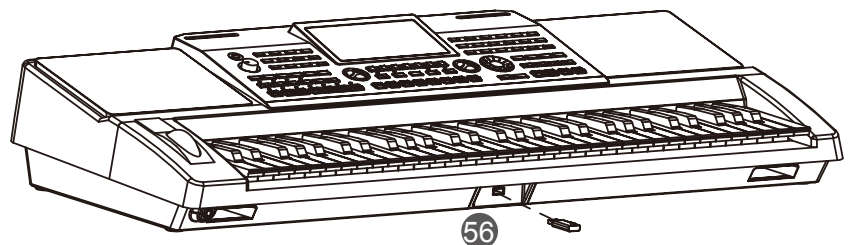

# Setup
 
## Rear Panel

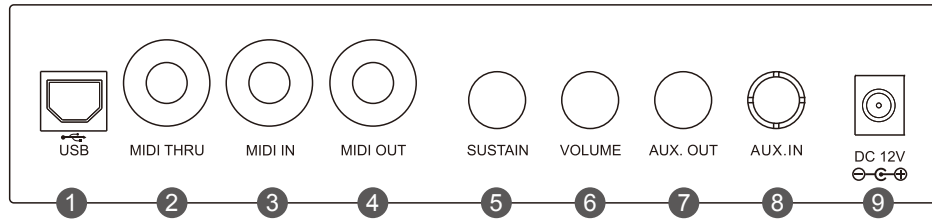

### 1. USB JACK

Connect to a computer.

### 2. MIDI THRU

Relays MIDI message it has received at the MIDI IN Jack.

### 3. MIDI IN

Receive MIDI messages from an external MIDI device.

### 4. MIDI OUT

Transmit MIDI messages to an external MIDI device.

### 5. SUSTAIN JACK

Connect a sustain pedal.

### 6. VOLUME JACK

Connect a volume pedal.

### 7. AUX. OUT

Connect the audio equipment.

 
### 8. AUX. IN

Connect an external audio source, such as an MP3 or CD player.

### 9. DC 12V

Connect DC 12V power adaptor.

## LCD

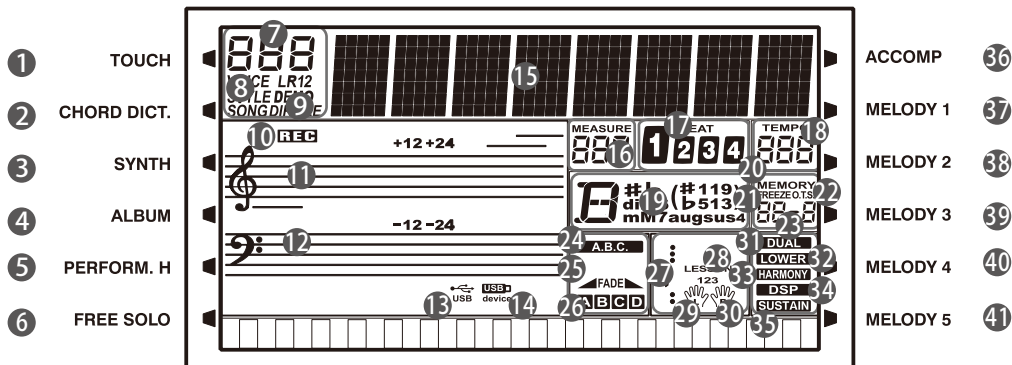

### 1. TOUCH

2. CHORD DICT.

3. SYNTH

4. ALBUM

5. PERFORM. H

6. FREE SOLO

7. SERIAL NUMBER

8. VOICE/STYLE/DEMO/SONG

9. DIR/FILE

10. RECORD

11. TREBLE CLEF

12. BASS CLEF

13. USB

### 14. USB DEVICE

15. STRING

16. MEASURE

17. BEAT

18. TEMPO

19. CHORD

20. MEMORY

21. FREEZE

22. ONE TOUCH SETTING

23. MEMORY BANK

24. A.B.C.

25. FADE

### 26. SECTION A/B/C/D

27. NUMBERED NOTATION

28. LESSON

29. LEFT HAND

30. RIGHT HAND

31. DUAL

32. LOWER

33. HARMONY

34. DSP

35. SUSTAIN

36. ACCOMP

37-41. MELODY 1-5

This section contains information about setting up your instrument and preparing to play. Please go through this section carefully before turning the power on.

## Power Supply

1. Before connecting to power supply, please set the [POWER] switch to OFF and set the master volume to minimum level.
2. Connect the AC adaptor to the DC 12V jack of this keyboard.
3. Plug the AC adaptor into an AC outlet.
4. Press the [POWER] button, the LCD will be lit, which indicates the instrument is powered on.
5. If you are ready to turn off the instrument, press the [POWER] switch again.

### Notes:

1. In order to save energy, the instrument will automatically shutdown in 30 minutes if it is not used. (Please refer to Auto Power Off).
2. For your safety, please unplug the instrument when it is not in use or during a thunderstorm.

## Setting a Music Stand

 
 
 
 
A music stand is supplied with the instrument. You can easily attach it to the instrument by inserting it into the slots at the rear of the panel.

## Connecting a Sustain Pedal

An optional footswitch can be plugged into the sustain jack and be used to switch sustain on or off. Simply by pressing the pedal, you will have a natural sustain as you play.

## Connecting a Volume Pedal

An optional volume control can be plugged into the volume jack for adjusting the volume of sound.

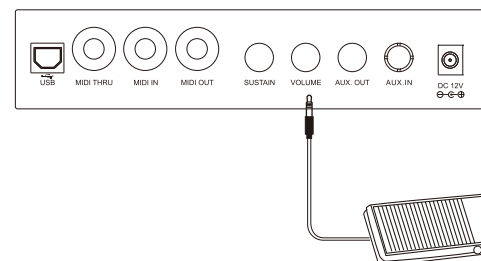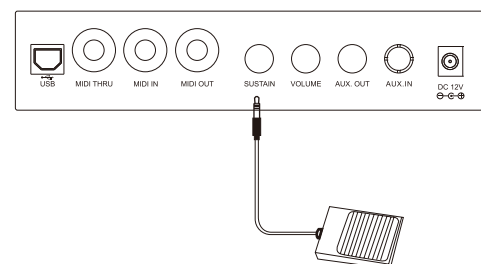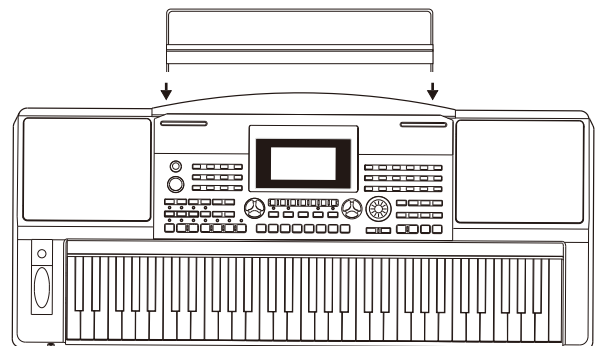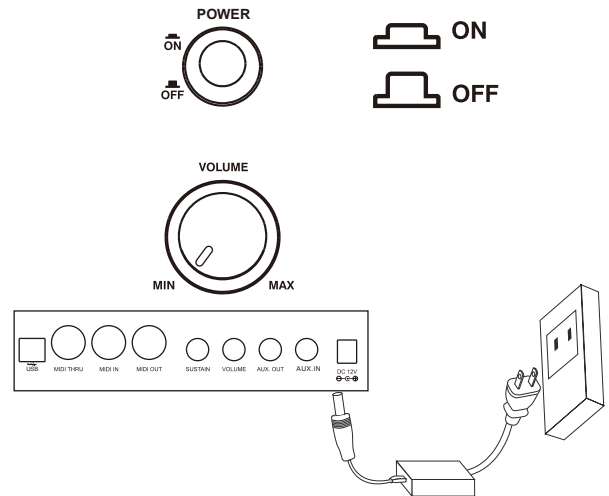


# Connections

## Connecting a pair of Headphones

A standard pair of stereo headphones can be plugged in here for private practice or late-night playing. The internal stereo speaker system is automatically shut off when a pair of headphones is plugged into the PHONES jack.

### Note:

 Do not listen with the headphones at high volume for long periods of time. Doing so may cause hearing loss.


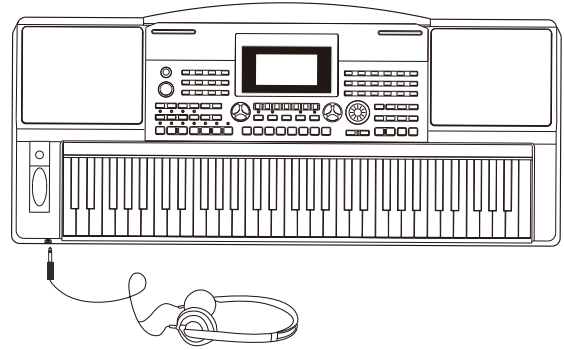


## Connecting an Audio Equipment

The rear-panel AUX.OUT jack delivers the output of the instrument to a keyboard amplifier, stereo sound system, a mixing console, or tape recorder. Use an audio cable to connect the AUX OUT jack of the instrument to the audio INPUT jack of the external equipment.


### Note:

  To avoid damaging the speakers, please set the master volume to minimum level before connecting the power and other devices.



## Connecting an MP3/CD Player


 
Connect the audio output of an MP3/CD player or other audio source to the stereo AUX.IN jack on the rear panel. The input signal is mixed with the instrument signal, allowing you to play along.



## Connecting a Computer

The instrument receives and transmits MIDI messages via the USB connector. Please use a standard USB cable to connect the USB jack of the instrument to the USB port of a computer.

 
 
Alternatively, use a commercially available MIDI interface to connect the instrument to a computer via the MIDI connectors.

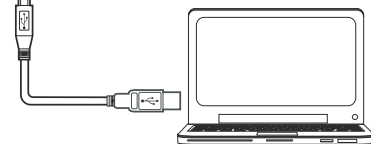

## Connecting a MIDI Device

Connect the MIDI OUT of other Device to the MIDI IN jack on the rear panel, the instrument will receive MIDI messages from the external device and work as a sound source.

  Connect the MIDI IN of other Device to the MIDI OUT jack on the rear panel, the instrument will transmit MIDI messages to the external device and work as a MIDI controller.




## Connecting a USB Flash Drive

Connect a USB flash drive to the instrument, you can save the data you've created such as memory settings, recorded data to the USB flash drive, or load and play back files saved in the USB flash drive on the instrument.

### Note:

 To avoid error or damaging the USB flash drive, do not remove it when reading or writing is in progress.

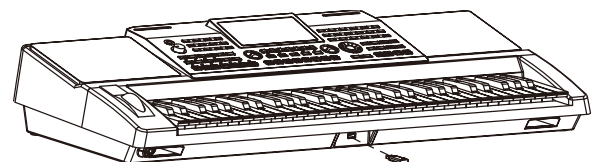





# Playing the Demos

The instrument features several wonderful demos. Please refer to DEMO LIST.

1. Press the [STYLE] and [VOICE] buttons simultaneously to start playing the demo.
2. Select a demo song.  
Use the data dial, the [+ / YES] button or the [- / NO] button to select a demo song.
3. Set a volume level with the [VOLUME] knob.
4. Press the [STYLE] and [VOICE] buttons simultaneously again or press the [START/STOP] button to stop playing and exit the demo mode.

## Note:

  In the DEMO mode, only the following buttons will work: START/STOP, TEMPO+, TEMPO-, + / YES, - / NO, VOLUME, POWER ON/OFF.

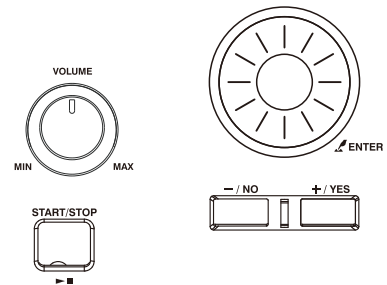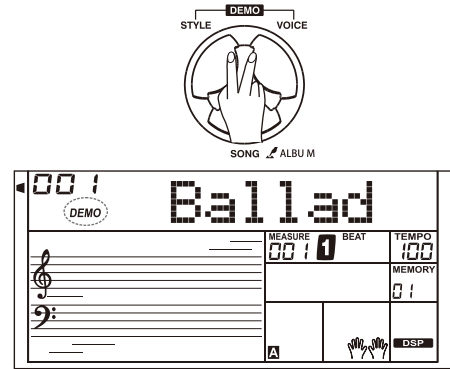

# Playing Voices

The keyboard has a variety of remarkably realistic built-in voices. Please refer to Voice List.

 
 
## Playing Voices

1. Press the [VOICE] button.  
Enter the VOICE mode. LCD shows VOICE R1 and the current voice number and name.
2. Select a voice.  
Use the data dial, the [+ / YES] button, the [- / NO] button to select the voice you want to play. You can also use the Voice Select Button to select a preset voice.
3. Play the voice.  
You can play the keyboard and listen to the wonderful voice.


## Note:

Each Voice Select button has two preset voices. Press it repeatedly to shift between the upper and lower preset voice.

In voice selection, if you have selected the upper voice of a Voice button, pressing another button will directly select its upper voice. In the same way, if you have selected a lower voice, pressing another button will select its lower voice.

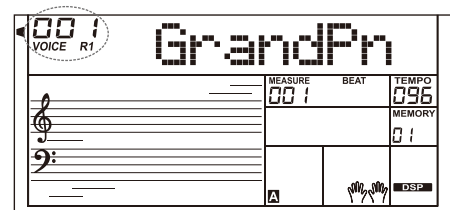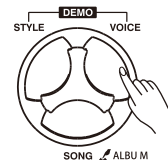



VOICES					
001 GrandPh	037 E.Piano	062 Harps	088 MusicBox	106 Marimba	148 RockOrgn
033 HnkyTonk	052 FunkEP	067 Clavi	094 Vibra	129 DrawOrgn	154 ChurOrgn
104 Accordion	176 NylonGtr	236 AccoBass	297 Violin	331 Strings	336 SynStrs
172 SweeHarm	180 SteelGtr	239 FngrBass	312 Cello	332 Strings2	380 OctOrchH
395 FrHorn	408 SweeTrump	448 TenorSax	463 Clarinet	474 SwPanFlu	723 StandSet
399 Brass	439 SprnoSax	454 Oboe	469 SweeFlut	484 SquareLd	FreeSolo

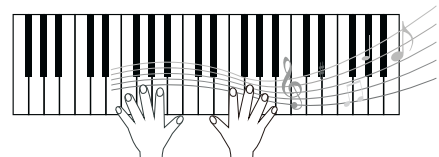 

# Playing Voices

## Playing two Voices Simultaneously-DUAL

  1. Press the [DUAL] button.  
It turns on the Dual function. "VOICE R2" and "DUAL" light up on display. LCD shows the current dual voice number and name.
2. Selecting a voice for VOICE R2.  
Use the data dial, [+ / YES] and [- / NO] button, or Voice Select buttons to select a dual voice.
3. Play the voices.  
Play the keyboard, and you will hear two different voices being played together, just like two different instruments being played at the same time.

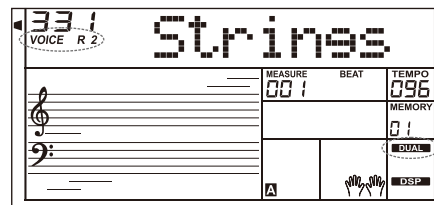



### Note:

When the keyboard is split, only the right hand area will have the Dual voice function.


## Playing Different Voices with Both Hands-LOWER

  1. Press the [LOWER] button.  
It turns on the Lower function. The keyboard is split into the left and right areas, each with a different voice. "VOICE L" and "LOWER" light up on display. LCD shows the current lower voice number and name.
2. Selecting a voice for VOICE L.  
Use the data dial, the [+ / YES] button or the [- / NO] Button to select a lower voice.
3. Play the voices.  
Play the keyboard with both hands, and you will hear two different voices from the two areas.

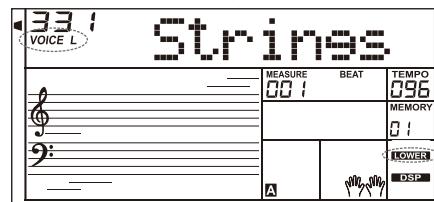

### Split Point



 
The key that separates voice L and voice R1/R2 is called the "split point". The split point is set to F#3 at the factory setting. However you can assign it to any other key. Please refer to Other Functions.

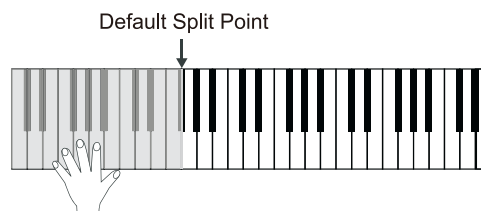

## Touch

The keyboard is equipped with a touch response feature that lets you dynamically and expressively controls the level of the voice with your playing strength, just as on an acoustic instrument. The keyboard features 5 touch types to choose from: off, 1-5.

   1. Press the [TOUCH] button. The LCD shows the current touch level.
2. Use the data dial, the [+ / YES] button, the [- / NO] button or the [TOUCH] button to change the touch response level. Default level of touch response is 3.  
If the value is set to OFF, that means no touch response to keyboard.

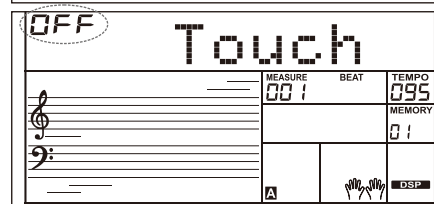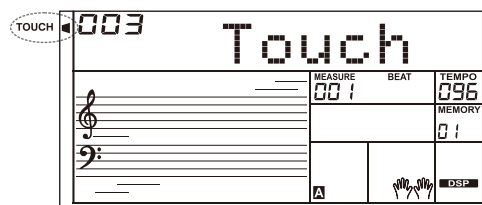



## Sustain

1. When the sustain is turned on, "SUSTAIN" lights up on display, and all notes you play will have a longer sustain.

2. Press the [SUSTAIN] button to turn the SUSTAIN effect ON or OFF.

### Note:

  
When using a sustain pedal, you can produce a much stronger and more natural sustain effect than by using the [SUSTAIN] button.

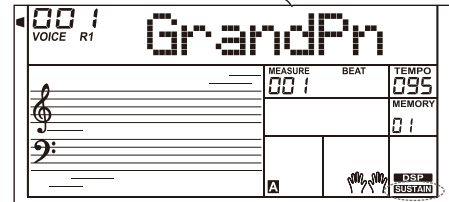

## Pitch Bend

Use the pitch bend wheel to bend notes up (roll the wheel away you) or down (roll the wheel toward you) while playing the keyboard. The pitch bend wheel is self-centering and will automatically return to normal pitch when released.

 With the pitch bend wheel, you can easily imitate the pitch bend effect of the guitar, violin, saxophone or other instruments, and make your performance more vivid.

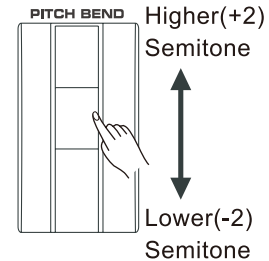

## Modulation

The Modulation function applies a vibrato effect to notes played on the keyboard. Press the [MODULATION] button while playing the keyboard then you will hear the vibrato effect.

MODULATION



 
- TRANSPOSE +



## Transpose

Transpose function allows the overall pitch of the instrument to be transposed up or down by a maximum of one octave in semitone steps.

1. Press [TRANSPOSE +] or [TRANSPOSE -] to adjust the value from -12 to +12 semitones.
2. Press [TRANSPOSE +] and [TRANSPOSE -] or press [+ / YES] and [- / NO] simultaneously, it will set the value to default: 0.

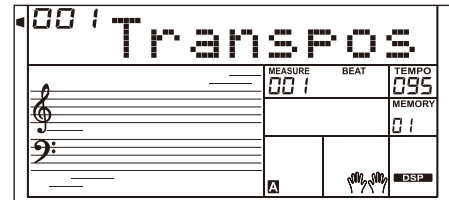



## Octave

The Octave function will shift the pitch up or down by 2 octaves for voice R1, R2 and L respectively.

1. Press [OCTAVE +] or [OCTAVE -] to change the octave value over the range of -2 to +2.
2. Press [OCTAVE +] and [OCTAVE -] or press [+ / YES] and [- / NO] simultaneously, it will set the value to default: 0.

### Note:

  After adjusting the octave, notes in the highest and lowest keyboard range may not sound normally. This is normal.

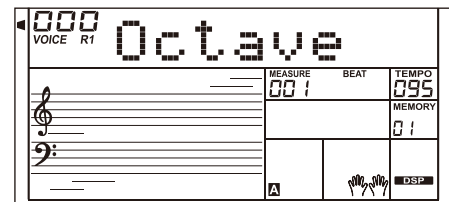

# Playing Voices

## Piano Mode

The Piano Mode will set instantly the entire keyboard to piano voice. All parameters will be optimized for piano performance just by pressing a single button.

1. Press [PIANO] button to enter or exit the piano mode.
2. In the PIANO mode, if you start a style, it only plays the rhythm part.

## Metronome

The metronome provides a steady beat to help you practice at a preset tempo.

1. Press the [METRO] button to turn the metronome on.
2. Press the [METRO] button again to turn the metronome off.
3. Set the time signature of metronome. Please refer to Other Functions.

 
 
 
 
 
 
### Notes:

1. If you turn on the metronome during style playback, the metronome sound will start from the next beat and its time signature will match the current style.
2. In Recording, you can turn on the metronome, but the metronome sound will not be recorded.


## Freesolo

The FreeSolo function allows you to switch voice in an exceptionally fast, accurate and seamless way, faithfully reproducing the special effects of an acoustic instrument, and making your performance more real and exciting.

1. Turn on the FreeSolo function.  
Press the [FreeSolo] button to turn on the function. "FREE SOLO" lights up on display.  
It will automatically disable the A.B.C. function, the Dual and Lower function.
2. Select a voice to play.  
Use the data dial or the [+ / Yes] / [- / No] button to select a voice for FreeSolo.
3. Play in the FreeSolo mode.  
In FreeSolo mode, please use the right hand area to play and use the left hand area to switch voice.
  - Press and hold a white key in the left hand area to activate the first special voice pattern. Release the key to restore the basic voice.
  - Press and hold a black key in the left hand area to activate the second special voice pattern. Release the key to restore the basic voice.
  - Press simultaneously two or more white keys in the left hand area to activate the first special voice pattern. It will keep using the special voice even after releasing the keys.
  - Press simultaneously two or more black keys in the left hand area to activate the second special voice pattern. It will keep using the special voice even after releasing the keys.
4. Turn off the FreeSolo function.  
Press one of the Voice select buttons or the [FreeSolo] button, it will exit the mode. The "FREE SOLO" indicator lights off.

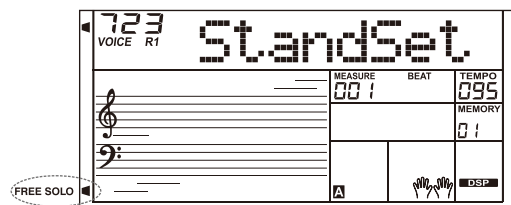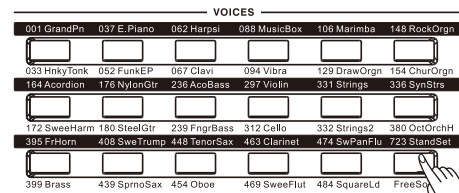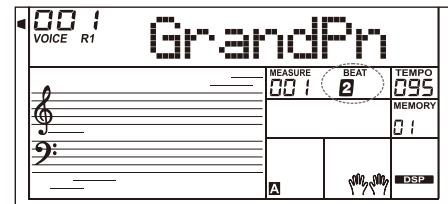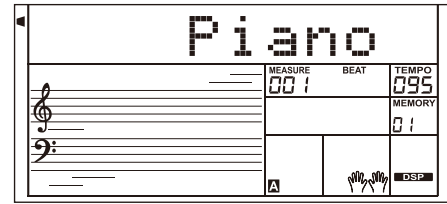

Default Split Point

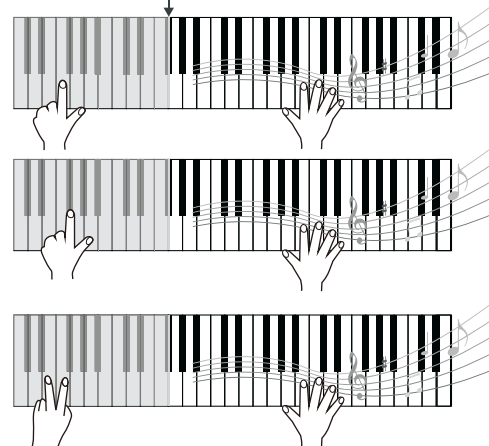 

# Auto Accompaniment

The auto accompaniment feature puts a full backing band at your fingertips. All you have to do is play the chords with your left hand, and the accompaniment will automatically play along, instantly following the chords you play. With auto accompaniment, even a solo performer can enjoy playing with the backing of entire band or orchestra. The instrument features a variety of styles. Try selecting some of the different styles (Refer to Style List) and play with the auto accompaniment.

## Playing Auto Accompaniment (rhythm track only)

1. Press the [STYLE] button.  
Enter the STYLE mode. "STYLE" lights up on display. LCD shows the current style number and name.
2. Select a style.  
Use the Data Dial, the [+ / YES] button, the [- / NO] button to select a style. Also, you can use the Style Select Button to select a style.
3. Press the [START/STOP] button to start the rhythm tracks of the auto accompaniment.

### Note:

Each Style select button has two preset styles. Press it repeatedly to shift between the upper and lower preset style. In style selection, if you have selected the upper style of a Style button, pressing another button will directly select its upper style. In the same way, if you have selected a lower style, pressing another button will select its lower style.

## Playing Auto Accompaniment (all tracks)

1. Press the [STYLE] button.
2. Select a style
3. Press the [A.B.C.] button to turn on the A.B.C. function. The keyboard will be split into two areas. Play the chords in the left hand area.
4. Turn the Sync Start function on.  
Press the [SYNC START] button, then play a chord in the left hand area to start the auto accompaniment. When you play a different chord, the accompaniment will change along.

 
 
 
 
 
 
Alternatively, press the [START/STOP] button to start the rhythm part. Then play a chord in the left hand area, the chord part will start as well.

5. Press the [START/STOP] button to stop the accompaniment.

## Accompaniment Sections

There are various types of Auto Accompaniment sections that allow you to vary the arrangement of the accompaniment to match the song you are playing.

They are: Intro (1, 2), Main (A, B,C,D), Fill-in (A, B,C,D) and Ending(1, 2). By switching among them during your performance you can easily produce the dynamic elements of a professional-sounding arrangement in your performance.

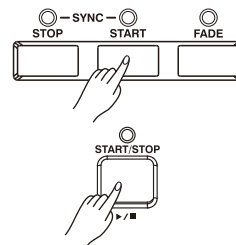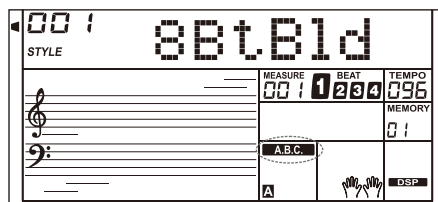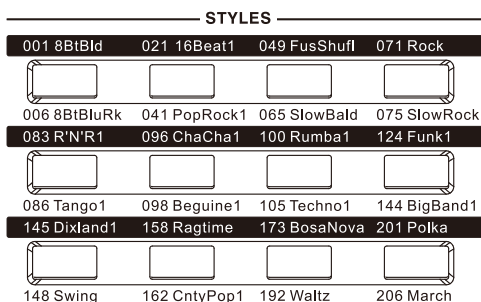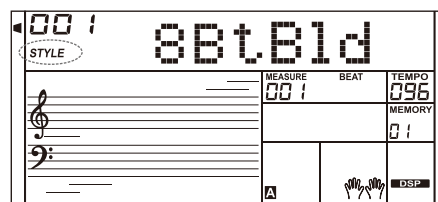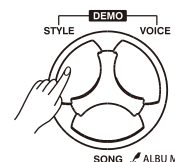

# Auto Accompaniment

## INTRO Section

The intro is an opening section of the song. When the intro pattern finished, the system will automatically shift to the main section.

## MAIN Section

 
 
The main is an important section of the song. And it plays an accompaniment pattern and repeat infinitely until another section's button is pressed.

## FILL IN Section

Auto fill in function automatically adds a fill to your performance. When the fill-in is finished, accompaniment shifts to the Main section (A,B,C,D).



## ENDING Section

Ending is used for the ending of the song. When the ending is finished, accompaniment automatically stops. The length of the ending differs depending on the selected style.

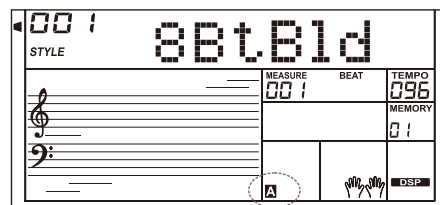

## Playing Different Accompaniment Sections

  1. Press the [STYLE] button.
2. Select a style.
3. Turn the A.B.C. on.
4. Turn SYNC START on.
5. Press the [FILL A] button.
6. Press the [INTRO/ENDING] button. Now the A flashes on LCD, the style is ready to play.
7. It will start the accompaniment as soon as you start playing in Chord section. When the playback of the Intro 1 is finished, it automatically leads into Main A section.
8. Press the [FILL B]/[FILL C]/[FILL D] button. A fill-in plays, automatically followed by the Main B/C/D section.
9. Press the [INTRO/ENDING] again to play an Ending Section. When the ending is finished, the auto accompaniment automatically stops.

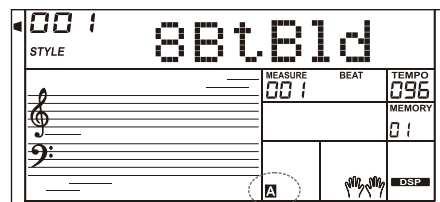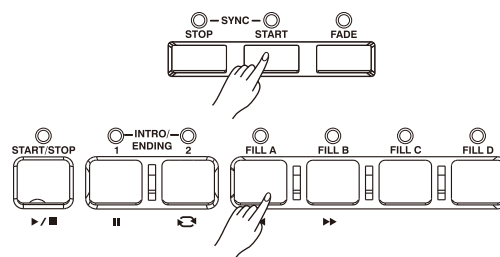

## Note:

Hold down the FILL A/B/C/D button when the style is playing, the selected FILL pattern repeats continuously until button is released. Press FILL A/B/C/D when style stops, it will select a Main section, the icon A/B/C/D on LCD will be lit.

## Fade In/Out

### Fade In

 
 
 
Starting the style with fade in produces a smooth beginning, the volume increases from low to high. When style stops, press the [FADE] button to turn on the fade-in function. The button LED lights up.

### Fade Out

Stopping the style with fade out produces a smooth ending, the volume decreases from high to low. When style is playing, press the [FADE] button to turn on the fade-out function. The button LED will flash until the style stops.



### Fade In/Out Time

The default fade-in/fade-out time setting is 10 seconds. You can set the time in Other Functions.

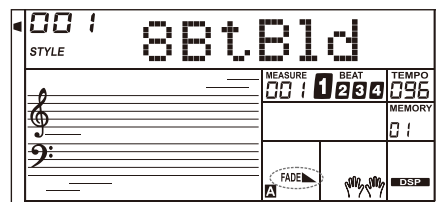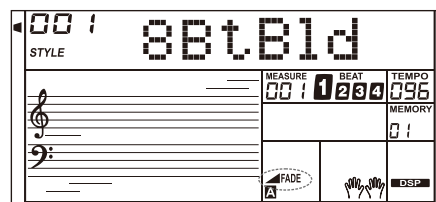

## Accompaniment Volume

  
1. Press [ACCOMP+] or [ACCOMP-] button to adjust the accompaniment volume over the range of 0 to 127.
2. Press [ACCOMP +] and [ACCOMP-] button simultaneously to turn off ACCOMP volume.
3. Press [ACCOMP +] and [ACCOMP-] button simultaneously again to turn on ACCOMP volume.

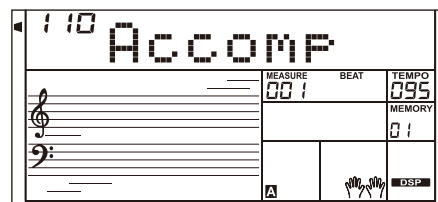

## Chord Fingering

### Chord Basics

 A chord, in music, is any harmonic set of three or more notes that is heard as if sounding simultaneously. The most frequently encountered chords are triads. A triad is a set of three notes that can be stacked in thirds. When stacked in thirds, the triad's members, from lowest pitched tone to highest, are called: the Root, the Third, and the Fifth.

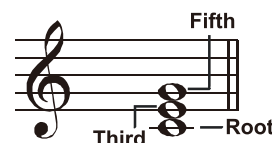

### Triad Type

There are following basic triad types:

Major Triad	A root with a major third added above and a perfect fifth will consist as a "Major Triad".
Minor Triad	A root with a minor third added above and a perfect fifth will consist as a "Minor Triad".
Augmented Triad	A root with a major third added above and an augmented fifth will consist as an "Augmented Triad".
Diminished Triad	A root with a minor third added above and a diminished fifth will consist as a "Diminished Triad".



Major Triad      Minor Triad



Diminished Triad      Augmented Triad

### Chord Inversion

 
We define this chord its root is not in the bass (i.e., is not the lowest note) as an inversion chord. When the root is in the bass, we call the chord: root-position chord. If we put the Third and Fifth in the root position, then it forms "Inversion", we call this chord "Inversion Chord". See the following major triad and its inverted chord.



Root Position      First Inversion      Second Inversion

### Chord Name

The chord name contains two parts content: Chord root and Chord type.

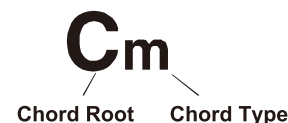

### Single Finger












 
 



















Single finger type not only can detect single finger but also can detect multi finger. And the single finger makes it easily to play chords through only one, two or three keys. Including major, minor, seventh, and minor seventh chord. Refer to relevant picture on the right for details.

C		★ <b>Major Triad</b> Only press the root note on the keyboard.
Cm		★ <b>Minor Triad</b> Press the root note and the nearest left black key simultaneously.
C7		★ <b>Seventh chord</b> Press the root note and the nearest left white key simultaneously.
Cm7		★ <b>Minor seventh chord</b> Press the root note and the nearest left white and black keys simultaneously.

# Auto Accompaniment

## Multi-finger

Multi finger type only can recognize those chords have listed in the chord list, and also can be found in the dictionary function.

0 C 	1 C <sub>6</sub> 	2 C <sub>M7</sub> 	3 C <sub>M7</sub> (#11) 	4 C <sub>M</sub> (9) 	5 C <sub>M7</sub> (9) 
6 C <sub>6</sub> (9) 	7 C <sub>aug</sub> 	8 C <sub>m</sub> 	9 C <sub>m6</sub> 	10 C <sub>m7</sub> 	11 C <sub>m7</sub> (b5) 
12 C <sub>m</sub> (9) 	13 C <sub>m7</sub> (9) 	14 C <sub>m7</sub> (11) 	15 C <sub>mM7</sub> 	16 C <sub>mM7</sub> (9) 	17 C <sub>dim</sub> 
18 C <sub>dim7</sub> 	19 C <sub>7</sub> 	20 C <sub>7sus4</sub> 	21 C <sub>7</sub> (b5) 	22 C <sub>7</sub> (9) 	23 C <sub>7</sub> (#11) 
24 C <sub>7</sub> (13) 	25 C <sub>7</sub> (b9) 	26 C <sub>7</sub> (b13) 	27 C <sub>7</sub> (#9) 	28 C <sub>M7aug</sub> 	29 C <sub>7aug</sub> 
30 C <sub>sus4</sub> 	31 C <sub>1+2+5</sub> 	Notes enclosed in parentheses are optional; the chords could be recognized without them.			

## Tempo

Each style of the instrument has been set with a default or standard tempo; however, this can be changed by using the [TEMPO+]/[TEMPO-] buttons.

### 1. Change the tempo

Use the [TEMPO+] or [TEMPO-] button to change the tempo.  
Or use the Data Dial to make a quick change when the value is flashing on LCD.

### 2. To restore the default tempo setting, press the [TEMPO+]/[TEMPO-] buttons simultaneously.

## One Touch Setting

When One Touch Setting is switched on, you can instantly recall all auto accompaniment related settings including voices selection and digital effects simply with a single touch of a button.

### 1. Press the [O.T.S.] button to turns on the One Touch Setting for current style.

 
 
 
 
 
### 2. Press one of the [ONE TOUCH SETTING] buttons [M1]-[M4].

Various panel settings (such as voice, effect, etc.) that match the selected style can be instantly recalled. Auto accompaniment is automatically turned on in O.T.S. mode.

### 3. Play the keyboard.

#### One Touch Setting parameter list:

Part ON/OFF (VOICER1,R2,L)  
Voice Number (VOICER1,R2,L)  
Voice Volume (VOICER1,R2,L)  
Voice Reverb Level (VOICER1,R2,L)  
Voice Chorus Level (VOICER1,R2,L)

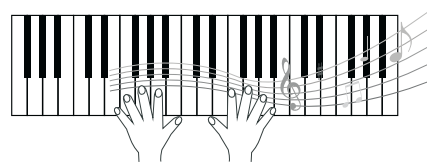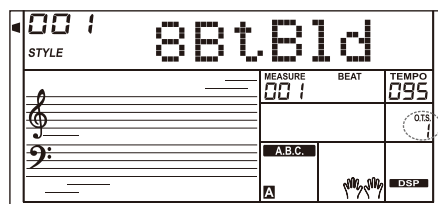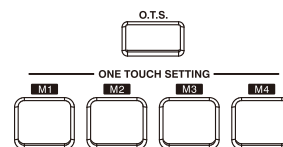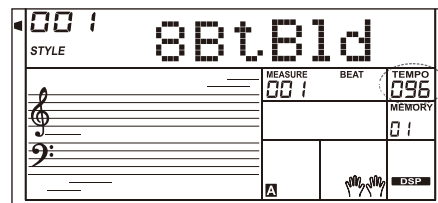






# Harmony

The Harmony function will automatically add harmony effect to the notes you play in the right hand area, instantly enriching your performance with a more harmonic expression.

1. Turn on the harmony function.  
Press the [HARMONY] button to turn on the harmony function. "HARMONY" lights up on display. The LCD shows the current harmony type.
2. Play with harmony effect.  
Turn on the A.B.C. function, then play a chord in the left hand area. It will add harmony effect to the notes as soon as you play in the right hand area.
3. Turn the harmony off.  
Press the [HARMONY] button again to turn off the function. LCD will show "OFF" and the "HARMONY" lights off.
4. Set the harmony type.  
You can set the harmony type in Other Functions.

**Note:**

 
 
 
Harmony types "1+5" and "octave" are always available, but the rest are not selectable until the A.B.C function is turned on.

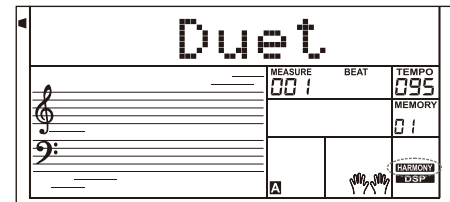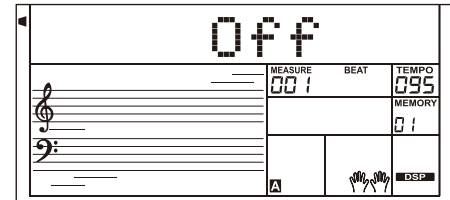

# IFX

The instrument has a variety of preset insert effects, including Chorus, Flanger, Phaser, Tremolo, EQ, Distortion, Wah, Compressor and LowPass Filter.

   1. The insert effect is set to off when the keyboard is power on. Press [IFX] button to turn on the effect function, the IFX indicator will be lit. Press [IFX] button again to turn off the effect function and the IFX indicator will light off.
2. Press and hold the [IFX] button about two second to enter the insert effect selection menu, then use [+ / YES] / [- / NO] or Data Dial to select the effect type you want. You can listen to the effect when playing the keyboard. Press [ENTER] button to enter the sub menu if the current effect has changeable parameters.
3. Use [+ / YES] / [- / NO] button or Data Dial to select a parameter item, then press [ENTER] button to enter the parameter setting mode. Use [+ / YES] / [- / NO] button or Data Dial to set the value. Press [ENTER] / [EXIT] button to return to previous menu.
4. The insert effect settings will be saved automatically when you quit the IFX mode. The next time you enter the IFX mode, it will use the same effect settings as your last operation.
5. Please refer to the table below for the effect types and their changeable parameters. You can adjust the parameter value over the range of 0 to 127.

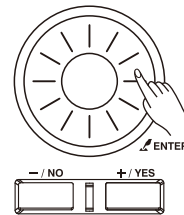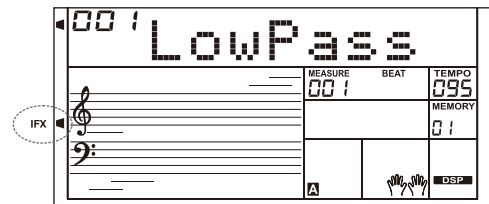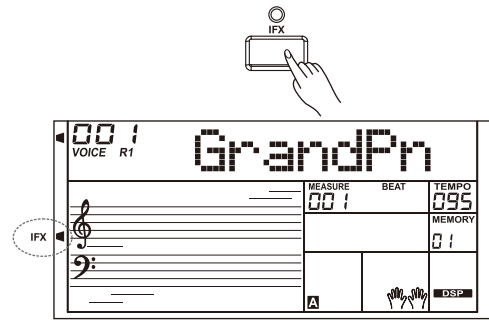

NO	type	Param1	Param2	NO	type	Param1	Param2
1	LowPass	CutOff	-	24	Mid Cut	-	-
2	STD CHR	Mix	Rate	25	LoMidCut	-	-
3	Lite CHR	Mix	Rate	26	HiMidCut	-	-
4	Deep CHR	Mix	Rate	27	High Cut	-	-
5	Warm CHR	Mix	Rate	28	S-Hi Cut	-	-
6	BRT CHR	Mix	Rate	29	Enhance	-	-
7	STD FLG	Mix	Rate	30	Loudness	-	-
8	Lite FLG	Mix	Rate	31	Add Air	-	-
9	Deep FLG	Mix	Rate	32	Live EQ	-	-
10	CrazyFLG	Mix	Rate	33	PhoneSim	-	-
11	STD PHS	Mix	Rate	34	RadioSim	-	-
12	Lite PHS	Mix	Rate	35	Dist	Mix	Gain
13	HeavyPHS	Mix	Rate	36	Overdriv	Mix	Gain
14	VTG TRM	Mix	Rate	37	Fuzz	Mix	Gain
15	MDN TRM	Mix	Rate	38	ST A.Wah	Mix	Rate
16	Panner	Mix	Rate	39	LT A.Wah	Mix	Rate
17	BasBoost	-	-	40	DP A.Wah	Mix	Rate
18	BasPunch	-	-	41	ST S.Wah	Mix	Sense
19	MidBoost	-	-	42	LT S.Wah	Mix	Sense
20	LM Boost	-	-	43	DP S.Wah	Mix	Sense
21	HM Boost	-	-	44	CR S.Wah	Mix	Sense
22	Hi Boost	-	-	45	Comp	Threshold	Ratio
23	Low Cut	-	-				

# Performance Assistant

## What's the performance assistant?

Performance assistant is an easy-to-use function. With this function you will find playing the keyboard become more interesting. Even if you are not a keyboard player, the performance assistant will help you to play your familiar instrument voice on the keyboard.

Performance assistant provides many wonderful phrases. Just use several keys and you will perform your own wonderful music.

 
## Enter the Performance Assistant

There are 2 voices you can select in Performance Assistant: GUITAR, PIANO.

Press the [PERFORM.] button to turn on the function. It will enter the Guitar Mode and the LCD will display Guitar's voice name. You can use the Data Dial, [+ / YES] or [- / NO] button to change the voice you want to perform.

The default time signature for Performance Assistant is the 4/4 and you can use [ENTER] or [EXIT] button to change it to one of the following time signature: 2-4, 3-4, 4-4 and 6-8.

In Performance Assistant mode, use [TEMPO+] or [TEMPO-] to change the tempo.

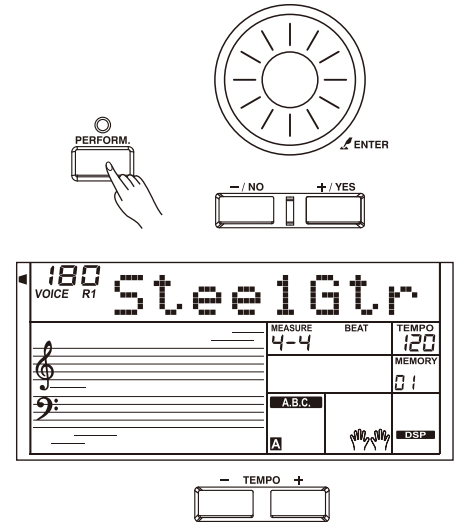

## Guitar Mode

### Guitar key map

The Guitar Mode allows you to perform a guitar voice with keyboard just like you're playing a real guitar. In this mode you can use such guitar phrases as strum (5), broken chord (5), echoism (5) and also 2 endings.

### Chord part

C2 to B3 is the chord part area. Play a chord in this area.

### Sub Area 1

C4 to B4 (only white keys) is the sub area 1. Up to 5 types of broken chord are provided in this area.

### Sub Area 2

C5 to A5 (only white keys) simulate the 6 strings of a real guitar. Play a free solo in this area.

 
 
### Rhythm Area

C6 to G6 (only white keys) is the rhythm area. Wonderful styles and strums are provided in this area. Use A6 to B6 to play an ending.

### Position Change

Press C7, the guitar position will be changed.


### Guitar key map

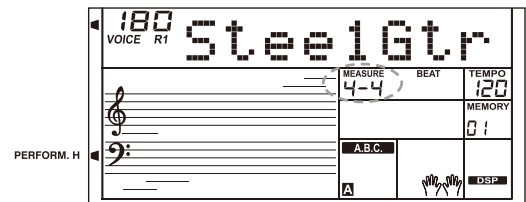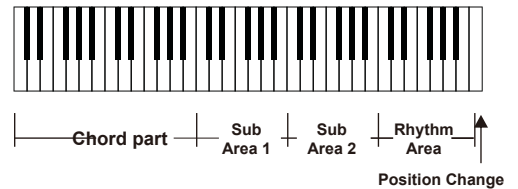

## Playing in Guitar Mode


### Play a chord in the chord part.

 LCD will show its chord name and the guitar's root note will sound.

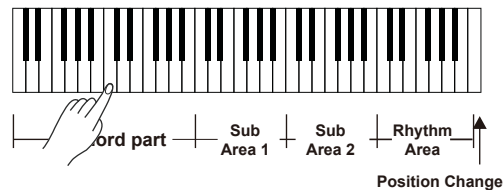


### Play a broken chord in the sub area 1.

 When the chord type is on display, press a white key in the sub area 1, a wonderful broken chord phrase will start. Press other white keys to play different phrases. Try playing a different chord with your left hand and enjoy the subtle change in the phrases.

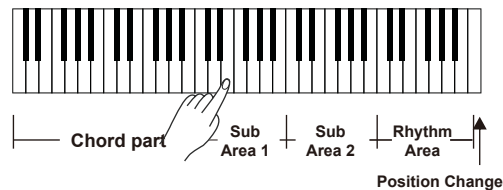


### Play a free solo in the sub area 2.

 When the chord type is on display, press the white keys in the sub area 2 you can play guitar free solo, like you're playing a real one. Try playing different chords with your left hand, and play your free solo. The last white key B5 is invalid.

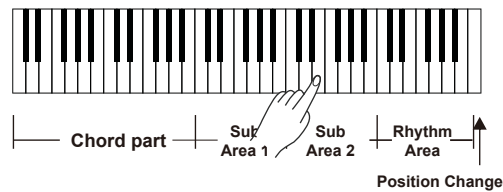

### Play a strum rhythm in the rhythm area.

 When the chord type is on display, press a white key in the rhythm area you can play the magic strum rhythm. Try playing different chords with your left hand, and play your strums.

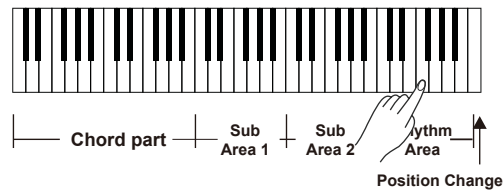


### End the guitar performing.

Press the A6 or B6 to end your guitar performance. When the ending is finished, the phrase stops automatically.


### Play the echoism.

 All of black keys on Sub area 1, Sub area 2 and Rhythm area are echoism keys. There are 5 kinds of echoism patterns preset to the C#, D#, F#, G#, A# circularly.

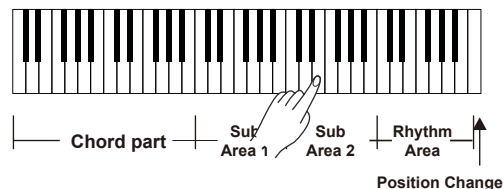

### Change the position

 Press the C7, the PERFORM.H icon will be lit on the LCD. It means that the guitar position has been changed to the High position. Try playing the white keys in sub area 1, Sub area 2 and Rhythm area, listen to the phrase you are performing now.

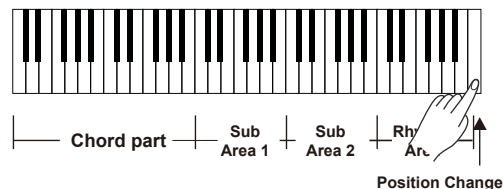


## Piano Mode

### Piano Key Map


The Piano Mode allows you to perform the piano voice just like playing an acoustic instrument. In this mode you can use such piano phrases as piano rhythm (5), broken chord (5) and also 3 endings.

 The piano key map is similar to the guitar key map. Press A6 to C7 to play the ending. All the black keys above C4 are invalid.

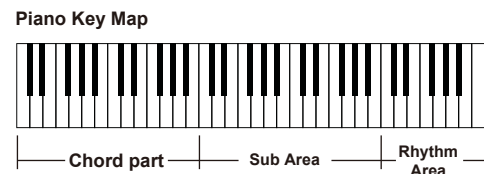


## Playing in Piano Mode

 1. Select Piano Mode.  
In performance assistant mode, use data dial, [+ / YES] or [- / NO] button to select Piano Mode.

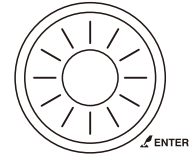


2. Play a chord in chord part.

 3. Play different phrases and rhythms in the Sub Area and the Rhythm Area.

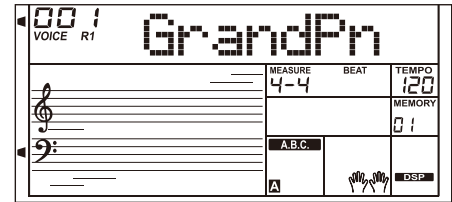

 4. Press A6, B6 or C7 to end your piano performance. When the ending is finished, the phrase stops automatically.

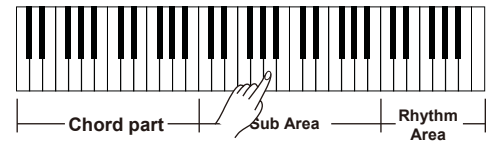

## Exit the Performance Assistant

When the phrase stops, press the [VOICE], [STYLE], [SONG], [DEMO], [SHIFT] + [PERFORM] to exit the Performance Assistant mode.

# Synth

You can use the synth function to create your own voice on the basis of the built-in voice samples.

## Enter the synth

Press [SYNTH] button to turn on the Synth function. The button LED and the "SYNTH" indicator light up.

In Synth mode, the following functions will be disabled: Lower, Dual, Auto Accompaniment and the Piano Mode.

## Create user voice

1. Press [SYNTH] button to enter the user voice selection interface. LCD displays "UserV.01" and the user voice number. The synth flag will be lighted. Use [+ / YES] / [- / NO] button or Data Dial to select a voice number you want.

2. Press [ENTER] button to enter the next menu. Then use the [+ / YES] / [- / NO] button to select "Voc\_Edit" or "Delete". Press [ENTER] to go forward or press [EXIT] to return to the previous menu.

3. If you select "Voc\_Edit" and press [ENTER], the LCD will display "PcmVoice" and sample voice number. Use [+ / YES] / [- / NO] button or Data Dial to select voice parameter, the voice parameter will display on the LCD as follows "PcmVoice", "Vib Rate", "VibDepth", "VibDelay", "EnvAttac", "EnvRelea", "EnvDecay".

If you select the "Delete" menu and press [ENTER] button, LCD displays "Sure?". Press [+ / YES] button to delete the user voice, and then return to previous menu; If you press [- / NO] button cancel the operation, and then return to previous menu. You can also press [SYNTH] or [EXIT] button to return to previous menu.

4. After selecting a voice parameter, press [ENTER] button to enter the parameter value setting mode. At this mode, the parameter value will flash on LCD. Use [+ / YES] / [- / NO] button or Data Dial to adjust the value, you can play the keyboard to listen to the voice effect.

5. Press [SYNTH] button and LCD displays "Sure?". Press [+ / YES] button to save the user voice, and then return to previous menu, If you press [- / NO] button, it will cancel the operation, and then return to previous menu.

 
 
 
 
6. At any time, press [EXIT] button to return to the previous menu.

## Exit the Synth

In the user voice selection interface, press one of the buttons to exit the function: [SYNTH], [EXIT], [STYLE], [SONG], [DEMO].

### NOTE:

The voice editing function is invalid at the song playing, demo playing, recording and USB Device mode.

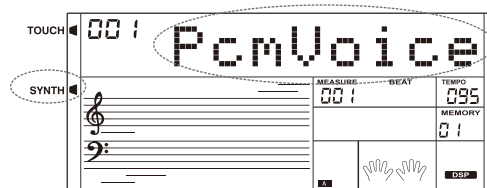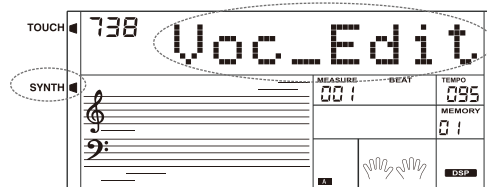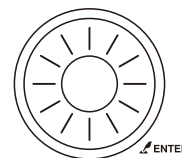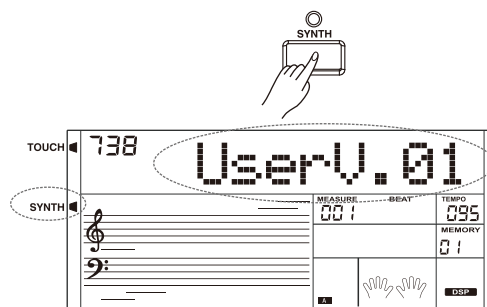

Parameter name	Range	Default
PcmVoice	001 - 573	001
Vib Rate	000 - 127	064
VibDepth	000 - 127	064
VibDelay	000 - 127	064
EnvAttac	000 - 127	064
EnvRelea	000 - 127	064
EnvDecay	000 - 127	064

# DSP Effect

 
 
With the built in digital effects, you can add ambiance and depth to your performance in a variety of ways such as adding reverb that makes it like you are playing in a concert hall or adding harmony notes for a full, rich sound.

1. The DSP effect is set to ON when keyboard is power on.

2. Press [DSP] button to switch DSP effect on or off.

**Note:**

There may be a slight break or noise if you switch on/off the DSP when the style or song is playing.

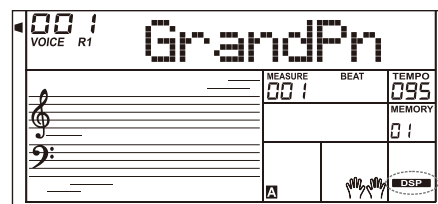

# Mixer

The Mixer allows you to adjust separately the volume for each track.

1. Press the [MIXER] button.

Enter the Mixer menu. LCD shows the current parameter item.

2. Press [MIXER] or [ENTER] to select a parameter item, then use the Data Dial or the [+ / YES] / [- / NO] button to adjust the volume of the selected item.

Press and button simultaneously to turn off the volume of the selected item.

Press [+ / YES] and [- / NO] button simultaneously again to turn on the part volume.

 
 
 
3. Any time press [EXIT] to quit the Mixer menu.

Parameter items and the volume range in the Mixer menu:

Option	LCD Display	Range
Rhythm s VOLUME	XXX Rhythm_s	0 - 127
Rhythm m VOLUME	XXX Rhythm_m	0 - 127
BASS VOLUME	XXX Bass	0 - 127
Chord 1 VOLUME	XXX Chord1	0 - 127
Chord 2 VOLUME	XXX Chord2	0 - 127
Chord 3 VOLUME	XXX Chord3	0 - 127
Phrase 1 VOLUME	XXX Phrase1	0 - 127
Phrase 2 VOLUME	XXX Phrase2	0 - 127
VOICE R1 VOLUME	XXX Upper1	0 - 127
VOICE R2 VOLUME	XXX Upper2	0 - 127
VOICE L VOLUME	XXX Lower	0 - 127
USB Device Playback Volume	XXX U_Disk	0 - 127

**Note:**

It will exit the Mixer Menu if there is no operation in 5 seconds.

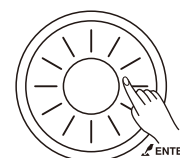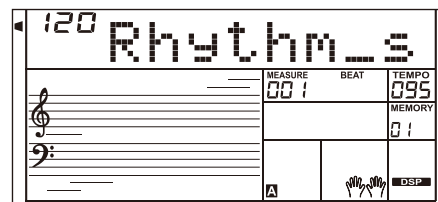

# Pedal Function

 
 
 
 
## Volume Pedal

You can step on the volume pedal to adjust the sound volume.

## Sustain Pedal (Assignable)

You can assign other pedal functions to the sustain pedal. Please refer to Other Functions.


1. Pedal Sustain  
If the pedal is assigned as "Ped Sust", step on the sustain pedal, all notes played on the keyboard have a longer sustain.
2. Pedal Soft  
If the pedal is assigned as "Ped Soft", step on the soft pedal, all notes played on the keyboard have a softer effect.
3. Pedal Start/Stop  
If the pedal is assigned as "Ped St/T", step on the pedal to start/stop accompaniment.
4. Pedal Memory  
If the pedal assigned as "Ped Mem", pressing the pedal at the first time will call up registered memory: M1, and then M2, M3...by pressing this pedal step by step.

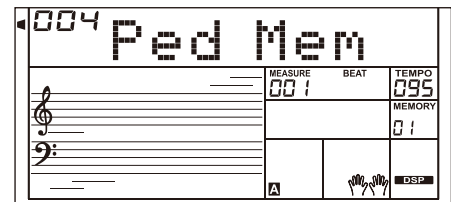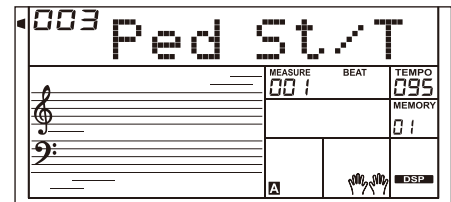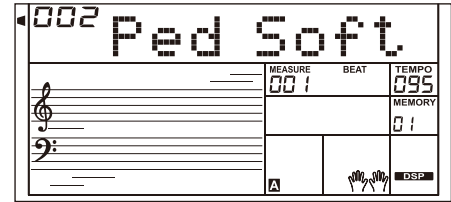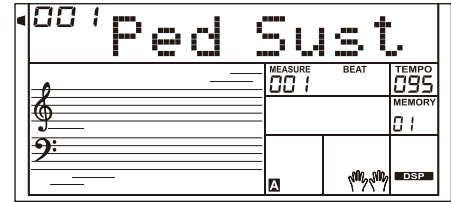

# Album

The album function allows you to practice a song with a preset style, tempo and voice. The instrument features a variety of song albums. Please refer to the Album List.

 
1. Hold down the [SONG/ALBUM] button for 2 seconds to turn on the function. LCD shows the current album name.
2. Use the data dial or [+ / YES] or [- / NO] button to select a desired album song. The instrument will instantly recall the preset settings such as style, tempo and voice for the song.
3. Press again the [SONG/ALBUM] button or one of the VOICE / STYLE select buttons to turn off the function.

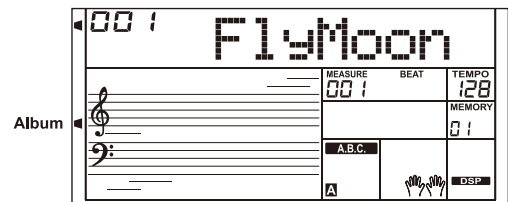




# Other Functions

 Press [FUNCTION] button to enter function menu. LCD shows the current parameter item. Press repeatedly the [FUNCTION] button to select an item. Use [+ / YES] / [- / NO] or Data Dial to set parameter. Any time press [EXIT] to quit this menu.



Parameter items and the value range in the Function Menu:

Option	LCD Display	Range	Default
TUNE	XXX Tune	-50...50	000
BEAT	XXX Beat	0,2...9	004
SPLIT POINT	XXX Split Pt	1...61	019
PEDAL ASSIGN	00X Ped ****	Sust, Soft, St/T, Mem	Sust(001)
FADE IN	0XX Fade In	1-20	010
FADE OUT	0XX Fade Out	1-20	010
HARMONY	00X Duet	Duet, 1+5, Octave, CtryDuet, Trio, Block, 4 Close1, 4 Close2, 4 Open	Duet(001)
REVERB LEVEL	XXX Rev Lev	0-127	Voice default
CHORUS LEVEL	XXX Chr Lev	0-127	Voice default
MIDI IN	XXX Midi In	1-16, ALL	ALL
MIDI OUT	XXX Midi Out	1-16	001
Auto Power Off	XXX PowerOff	OFF, 030, 060	030

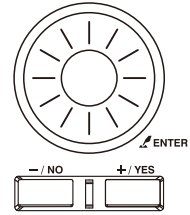 



## Note:

It will exit the Function Menu if there is no operation in 5 seconds.

## Tune

This function sets the pitch of entire keyboard in a 2-cent increment.

  
1. Press the [FUNCTION] button to select the Tune menu. Use [+ / YES] / [- / NO] or Data Dial to change tune value. Its range is from -50 to 50.
2. Pressing [+ / YES] and [- / NO] together will set the tune value to its default setting.

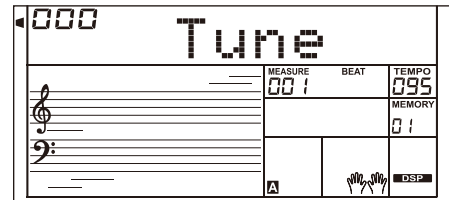

## Beat

This function sets the time signature over the range from 0, 2-9.

 
1. Press the [FUNCTION] button to select the Beat menu. Use [+ / YES] / [- / NO] or Data Dial to change the time signature.
2. Pressing [+ / YES] and [- / NO] together will reset to the default time signature.

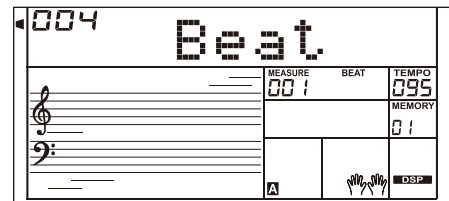

## Split Point

This function sets the point that separates the entire keyboard to two sections.

 1. Press the [FUNCTION] button to select the Split Point menu. Use [+ / YES] / [- / NO] or Data Dial to change split point. You can also press a key to assign the split point to that key.
2. Pressing [+ / YES] and [- / NO] together will reset to the default split point.

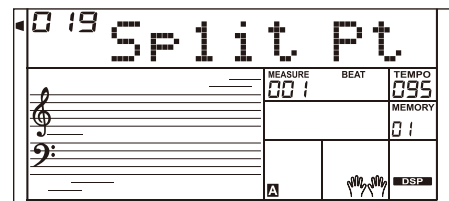

## Other Functions

 
 
 
 
 
### Pedal Assign

You can assign other pedal functions to the sustain pedal.

1. Press the [FUNCTION] button to select the Pedal menu. Use [+YES]/[-NO] or Data Dial to change the pedal function. The pedal can be set as sustain pedal, soft pedal, start/stop pedal or memory select pedal.
2. The default pedal type is sustain pedal.

#### Note:

Do not step on the pedal when turning on the power, otherwise, it will reverse the pedal operation.

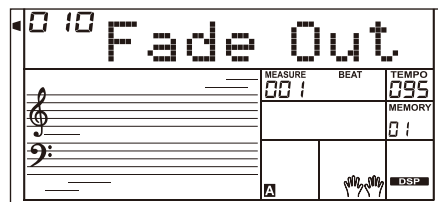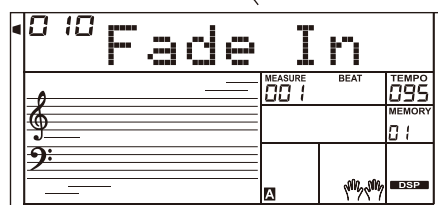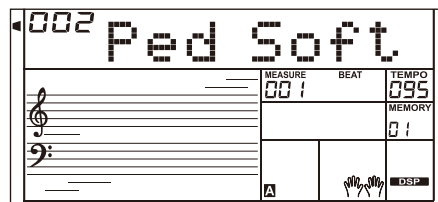



### Fade In

Press the [FUNCTION] button to select the Fade In menu. Use [+YES]/[-NO] or Data Dial to change Fade In time. The range is from 1 to 20 second.

### Fade Out

 
 
Press the [FUNCTION] button to select the Fade Out menu. Use [+YES]/[-NO] or Data Dial to change Fade Out time. The range is from 1 to 20 second.

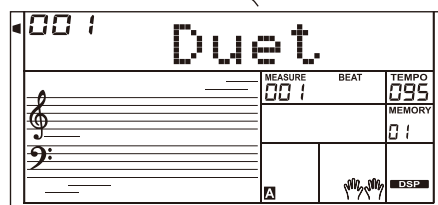

### Harmony

1. Press the [FUNCTION] button to select the Harmony menu. LCD shows the default harmony type "Duet".
2. Use the [+YES]/[-NO] or Data Dial to select a harmony type.

  There are 9 harmony effects for you to select, including Duet, 1+5, Octave, CtryDuet, Trio, Block, 4 Close1 and 4 Close2, 4 Open.

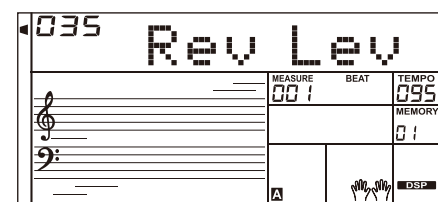



### Reverb Level

Press the [FUNCTION] button to select the Reverb Level menu. LCD shows "Rev Lev". Use [+YES]/[-NO] or Data Dial to change reverb level. The level ranges from 0 to 127.



## Chorus Level

  Press the [FUNCTION] button to select the Chorus Level menu. LCD shows "Chr Lev". Use [+YES]/[-/NO] or Data Dial to change chorus level. The level ranges from 0 to 127.

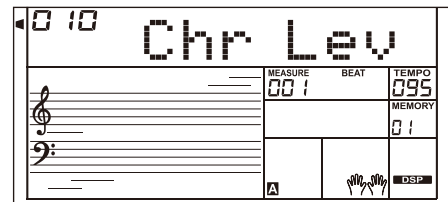



## MIDI In

  Press the [FUNCTION] button to select the MIDI In menu. Use [+YES]/[-/NO] button or Data Dial to select the channel. The default setting is "ALL", channel 1~16 can also be selected.

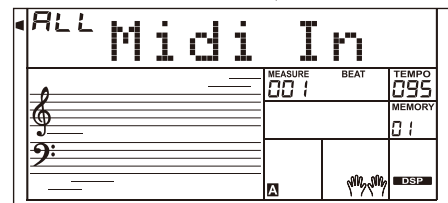

## MIDI Out

  Press the [FUNCTION] button to select the MIDI Out menu. Use [+YES]/[-/NO] button or Data Dial to select the channel. The default setting is "001", channel 2~16 can also be selected.

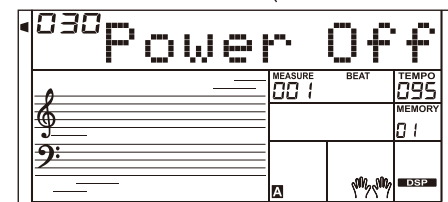

## Auto Power Off

This function will set the time after which the instrument will shut down if it is not used.

1. Press the [FUNCTION] button to select the Power Off menu. Use [+YES]/[-/NO] or Data Dial to change the setting over the range: OFF, 30, 60.
2. Press [+YES] and [-/NO] simultaneously, the time will be reset to default: 30 minutes.

# Register Memory

The Registration Memory feature can make your performance more easy and efficient. It allows you to save virtually all panel settings to a Registration Memory setting, and you can instantly recall the settings by pressing a single button.

## Registering the Panel Setting

 
 
While holding the [STORE] button, press one of the REGISTRATION MEMORY buttons: [M1] - [M6].

### Note:

The new settings will replace the previous memory data.

### Note:

Hold down both [STORE] and [M1] buttons, then turn on the power, the registration memory will be reset to factory setting. It will erase all user memory.

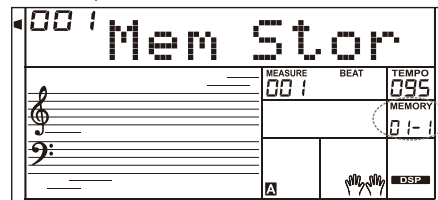
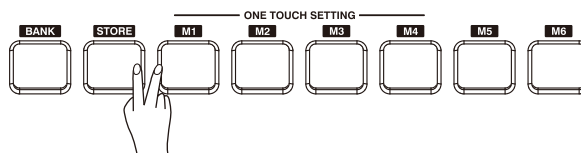


## Recalling the Registered Panel Settings

Press one of the REGISTRATION MEMORY buttons: [M1] - [M6], it will instantly recall the settings saved in the memory and set the control panel accordingly.

### Note:

  Registration data cannot be recalled when the One Touch Setting function is on.

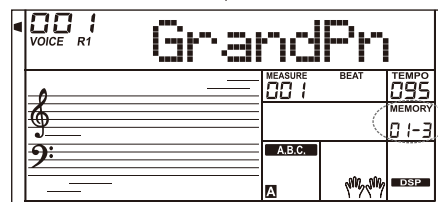
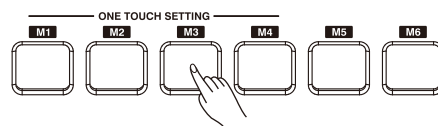


## Selecting a Registration Bank

1. Press the [BANK] button. The LCD displays "Mem Bank".

2. Select a bank

  
Use the Data Dial, [+ / YES] or [- / NO] button to select a bank.

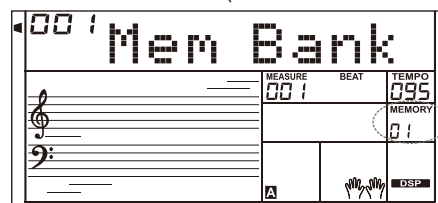

## Freezing the Accompaniment Parameter

When the Freeze function is turned on, the accompaniment parameters (including the style number, section, volume, tempo, transpose, chord, mixer, split point) will be frozen and remain unchanged even when a memory is recalled.

 Press the [FREEZE] button to turn the function on or off.

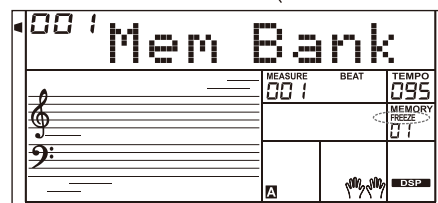

# Song Recording

With the easy-to-use song recording features, you can record and save your own keyboard performances as a User song. Each user song can be recorded with 6 tracks (1 ACCOMP track, 5 MELODY tracks).

Accomp track and melody track can be recorded together, but you can not record two melody tracks at the same time. Of course you can only record accomp or melody; Accomp and multiple melody tracks can be play back together. The recorded data will not be lost when you turn off the power.

## Start Recording

Before you start recording, you need to select a user song to which the recording will be saved.

1. Press [RECORD] button to enter user song selection mode. The LCD shows "RecSong1". Press [+ / YES] / [- / NO] button to select the user song you want to record.
2. Press [RECORD] button again to enter recording standby mode. "REC" appears on LCD and the beats start flashing. It will automatically select an empty melody track to record your performance.
3. In the recording standby mode, you can adjust parameters such as the voice, style and tempo. You can press the [ACCOMP] or [MELODY 1] - [MELODY 5] button to select a desired track. The selected track indicator will light up on display.
4. Press [START/STOP] button or play the keyboard to start recording. If you have selected the ACCOMP track, and have turned on the A.B.C. function, recording will start as soon as you play in the left hand area.

### Note:

Style can only be recorded in "Accomp" track.

 
 
 
 
 
The track indicator has three states: Blinking, light on and light off.

**Blinking:** indicating the track is selected for recording. All existing data will be overwritten.

**Light on:** indicating the track has data and will play back the data during recording.

**Light off:** indicating the track either has no data or is under recording and cannot play back.


In recording standby mode, it will automatically select the empty track next to the occupied track. For example, if "Melody 1" is occupied, "Melody 2" will be selected as the record track. When all 6 tracks have been recorded and a specific track needs to be revised, press the button of the desired track and start recording. The original data will be replaced.

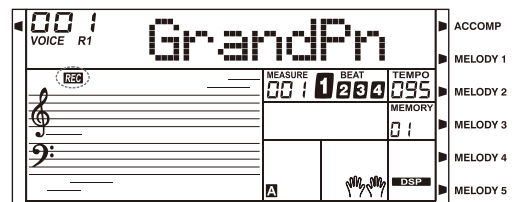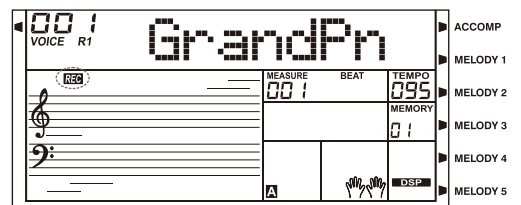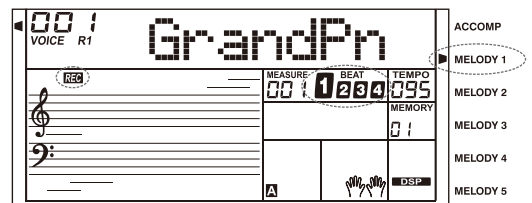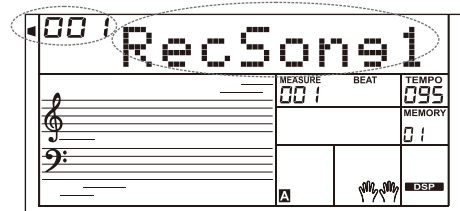

# Song Recording



## Stop Recording

 1. During recording, press [RECORD] button to stop recording.
2. During recording, if the memory is full, the recording will stop and save automatically, the LCD displayed "Rec\_Full".
3. If you are recording a style, the recording will stop automatically when the ending of rhythm is finished.

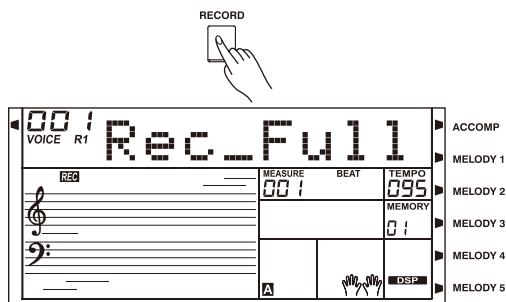



## Play Back Recording

  1. Press [RECORD] button when recording is in process, it will stop recording and enter the song mode, and the current recorded song will play automatically in circle.
2. Press the [SONG] button to enter the song mode and it will play all songs circularly. Use the Data Dial, [+ / YES] or [- / NO] button to select user song to play. If there is no data in the selected user song, it will play "No file" and stop playing. When playback stops, you can select a user song, and then, press [START/STOP] button, this user song will play circularly.

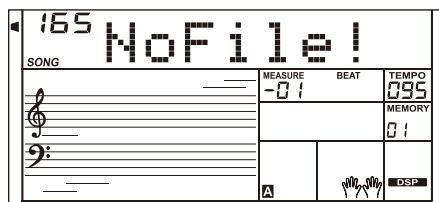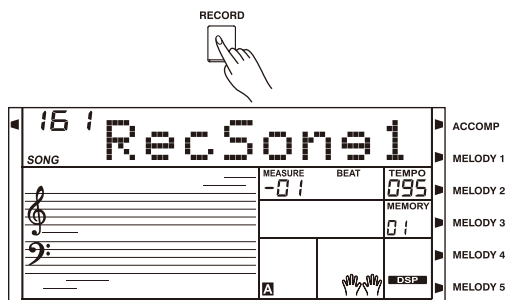

## Delete Recording

 
 
1. Press and hold [RECORD] and [SONG] button together and turn power on simultaneously, all user songs will be erased.
2. In the recording standby mode, press and hold [RECORD] button for two second, the LCD will display "Delete?". Press the "Accomp" (or "Melody2" to "Melody 5") button to select the track you want to delete, the indicator of the selected track will light up. If all track indicators light up, it will delete the user song after confirmation.
3. Press [+ / YES] to delete the selected track or, press [- / NO] to quit this step, and back to the recording standby mode.

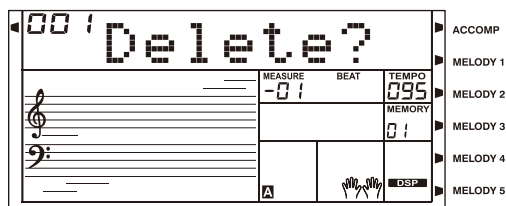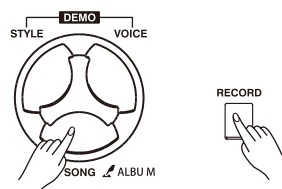

The keyboard has a variety of preset songs. Each song can be practiced in the Lesson Mode. Please refer to the Song List.

## Listening to the songs

  1. Press the [SONG] button to enter the song mode and it will play all songs circularly.
2. Use the Data Dial, [+ / YES] or [- / NO] button to select a song.
3. Press the [START/STOP] button, it will stop playing. Press the button again, it will play the current song repeatedly.
4. When the songs is stopped, pressing [STYLE], [VOICE], [DUAL] or [LOWER] will exit the song mode.

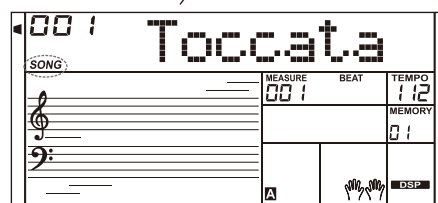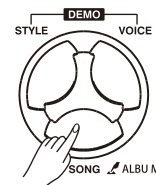

## Song Control

### 1. Introductory Beat

Before song start playing, it has the introductory beat, the measure starts from negative value. It begins to play the melody when the measure goes to 1.

### 2. REW, FF and PAUSE

When the song is playing:

Press the [▶] button to fast forward the song.

 
 
Press the [◀] button to rewind the song (base on the measure).

Press the [⏸] button to pause the playing song, press it again to continue playing.

### 3. Song Repeat

During song playback, you can use the [↺] button to set the beginning and the end for a loop section of the current song.

Press it once to set the loop beginning, then press it again to set the loop end. When in loop status, press [↺] again to quit the loop playing status.

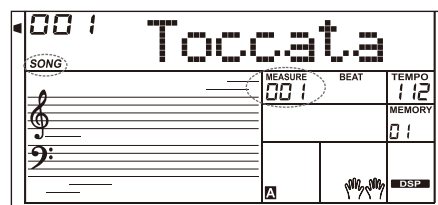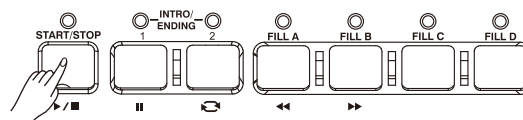

## Lesson Mode

 
 
In the Lesson mode, you can learn a song by playing at the correct timing and playing the correct notes. It will grade your performance after the lesson.

### 1. Press the [LESSON] button.

When song stops playing, pressing the [LESSON] button will enter the lesson mode.

### 2. Select a hand part to practice.

Use [LEFT] / [RIGHT] button to select a lesson for the left hand, right hand or both hands. If neither hand is selected, the keyboard will automatically select the right hand practice for you.

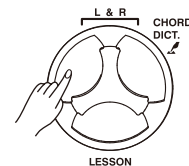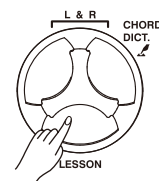

### Note:

The left hand practice may vary for different songs. It will practice the chord part of a chord song or the left hand melody of a piano song. There is no left hand practice for a MIDI song.

During the lesson, the staff notation or chord notes will be displayed on LCD.

# Song

 
 
 
 
## Lesson 1 - Practice timing

1. Press the [LESSON] button to enter the lesson mode. The lesson 1 icon lights up on the LCD.  
In Lesson 1 mode, the keyboard will only grade the time value of the playing, and will ignore the correction of the note.

2. Press the [START/STOP] button to start practice. If [RIGHT] is selected, it will mute melody of right hand and you will have to follow the time value of the right hand. As long as the time value is correct, the melody will sound.

If [LEFT] is selected, it will mute the chord part or left hand melody. You will have to follow time value of the left hand. As long as the time value is correct, the chord/melody will sound.




If [LEFT] and [RIGHT] are selected, the chord/melody on left hand and the melody on right hand will be muted. You will have to follow time value on both left and right hand.

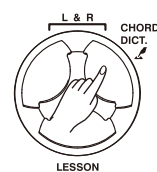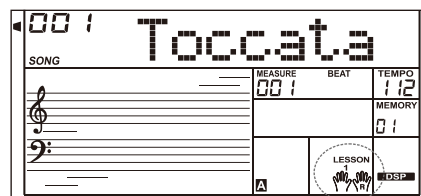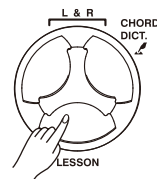

## Lesson 2 - Practice note accuracy

1. Press the [LESSON] button again to enter the lesson 2 mode.  
In LESSON 2 mode, the keyboard only grades your practice by the correctness of the notes. Only when you play the correct note, the song will continue playing, otherwise, it will stop and wait.

   
2. Press the [START/STOP] button to start to practice.

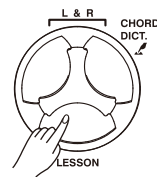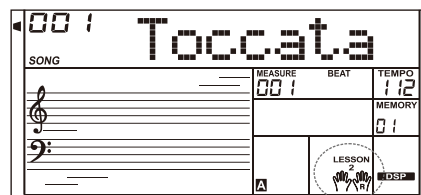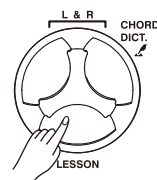

## Lesson 3 - Performance

1. Press the [LESSON] button in LESSON 2 to enter the lesson 3 mode.  
In LESSON 3 mode, it will score your practice by the correctness of the time value and note.

 2. Press the [START/STOP] button to start to practice.

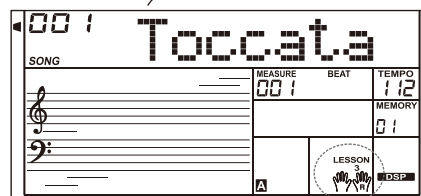



# Chord Dictionary

 
 
 
 
If you know the name of a chord but don't know how to play it, you can use the Chord Dictionary function. You can learn the chord and test in this features.

## DICT 1 (Chord Learning Mode)

Press and hold the [CHORD DICT.] button for 2 seconds to enter the DICT 1 mode.

In DICT 1 mode, the key above C4 are used to assign the Chord Type, the keys above C6 are used to assign the Chord Root. When the Chord Type and Chord Root are confirmed, the LCD will display the Chord notes. For example, if you want to play a CM7 Chord, press the C6 key in the section of the keyboard labeled CHORD ROOT.

The root note you set will be shown on the LCD but the note doesn't sound. Press the E4 key in the section of CHORD TYPE which has labeled M7. When the Chord Type and Chord Root are confirmed, the LCD will display the chord name and its notes. A prompt sound will be heard when you play it correctly in the left hand area.

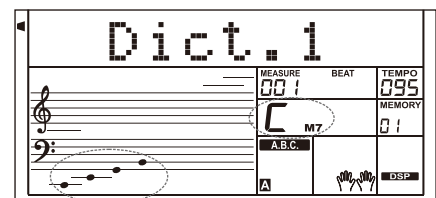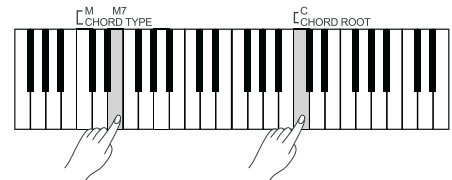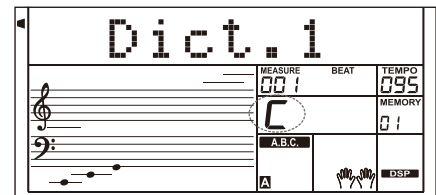
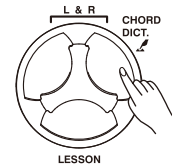


## DICT 2 (Chord Testing Mode)

Press the [CHORD DICT.] button again to enter the DICT 2 mode. In this mode, you can have a chord test. LCD will display a chord name in random order. If the chord fails to be played in 3 seconds, its notes will appear on LCD. Once the chord is played correctly, a new chord name will appear after a few seconds. In DICT 2 mode, press the [CHORD DICT.] button again to turn off chord dictionary.

24 Chords will be displayed in the dictionary mode as follows:

  Note	Chord Root	Note	Chord Root	Note	Chord Root
C6	C	C4	M	C5	7(b9)
C#6	C#/Db	C#4	M(9)	C#5	7(9)
D6	D	D4	6	D5	7(#9)
Eb6	Eb/D#	Eb4	mM7	Eb5	7(b13)
E6	E	E4	M7	E5	7(13)
F6	F	F4	M	F5	7(#11)
F#6	F#/Gb	F#4	M(9)	F#5	dim7
G6	G	G4	M6	G5	dim
Ab6	Ab/G#	Ab4	M7(9)	Ab5	7aug
A6	A	A4	M7	A5	aug
Bb6	Bb/A#	Bb4	M7b5	Bb5	7sus4
B6	B	B4	7	B5	sus4

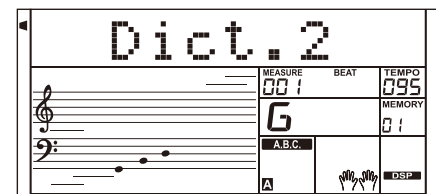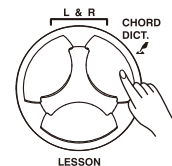

# Connecting USB Flash Drive

The instrument recognizes USB flash drives, sizing from 16M to 32G in the format of FAT16 and FAT32. It does not support USB partition. We recommend you format the USB flash drive on the instrument before using. Do not edit the backup files saved in the USB flash drive.

## Common Operation

 
 
 
 
 
 
 
1. The function buttons related to USB Flash Drive: [USB DEVICE], [ENTER], [EXIT], [+ / YES], [- / NO], Data Dial and [START / STOP].
2. Press [USB DEVICE] button to enter USB Device mode, press it again to exit the function.
3. If you connect a USB flash drive to the instrument, LCD will first show "Wait...!", indicating the initialization is in progress. If the initialization succeeds, LCD will show "Play", otherwise, it will show "DiskErr". If the USB Flash Drive is not connected, LCD will show "NoDisk".
4. In the USB Device mode, you can use [+ / YES] / [- / NO] button or Data Dial to choose menu, press [ENTER] button to go forward or, press [EXIT] to return to previous menu.
5. In USB Device mode, it can read a maximum of 512 files in a directory. "DIR" means a directory, and "FILE" means a file. In USB Device mode, you can press [USB DEVICE] / [STYLE] / [SONG] or a STYLE select button to exit the mode.
6. When playing a MIDI file, press [MIXER] button to adjust the playing volume, over the range from 0 to 127.
7. The operation to load, save or delete will apply to files in the "MMKD" folder only.

### Note:

An "MMKD" folder will be generated automatically in the USB flash drive for the initial time when you save data to it. Please wait patiently until the process is finished.

## Play

1. Press [USB DEVICE] button to enter USB Device mode, use the [+ / YES] / [- / NO] button to select the "Play" menu.
2. Press [ENTER] button, LCD will display the MIDI files and directories in the root of the USB Storage Device.
3. If you select a sub-directory, LCD will display the sub-directory name and the "DIR" sign. Press [ENTER] button to enter the current sub-directory, LCD will show all files in the sub-directory.
4. If there is no recognizable file in the current directory, LCD will display "...", press [ENTER] to go back.
5. Use [+ / YES] / [- / NO] button or Data Dial to select a MIDI file. Press [START / STOP] button to play it repeatedly. Press [ENTER] button to play all files in the current directory circularly. Press [START / STOP] button again to stop playing, press [EXIT] button to return to previous menu or press [USB DEVICE] button to exit the mode.

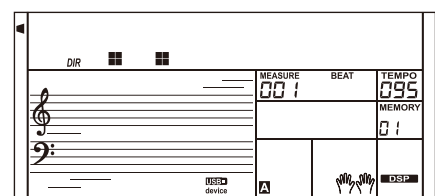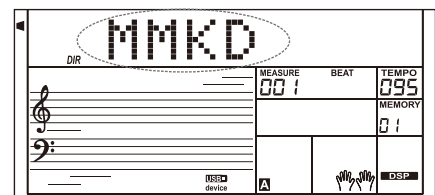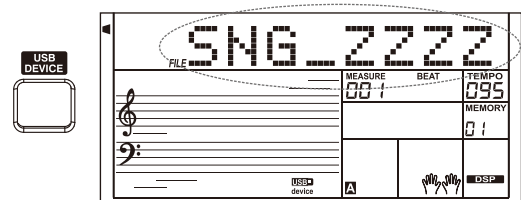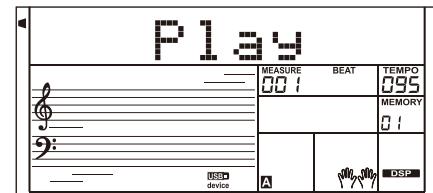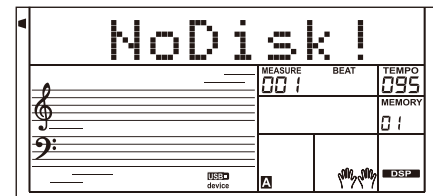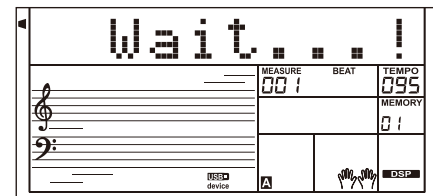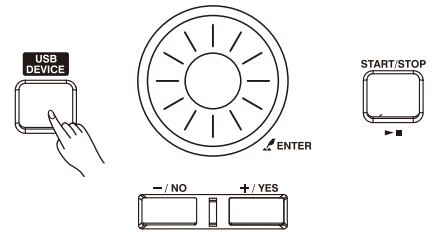

## Load

Select the menu "Load" and press [ENTER] button, the Load sub menu are displayed on LCD, which includes "LoadSong", "LoadSty", "LoadMem" and "LoadVoic". Use [+ / YES], [- / NO] button or Data Dial to select one.

### Load Song:

1. Select the menu "LoadSong" and press [ENTER] button, the LCD will show all the MIDI files (\*.mid) under the directory "MMKD\SONG". Select a file by using [+ / YES], [- / NO] button or Data Dial.
2. Press [ENTER] button, and then use the [+ / YES] / [- / NO] button or Data Dial to select a user song number.
3. Press [ENTER] button LCD will display "Sure?". Now press [ENTER] / [+ / YES] button to load the file or press [EXIT] / [- / NO] button to cancel.

### Load Style:

 
 
 
 
 
 
1. Select the menu "LoadSty" and press [ENTER] button, LCD will show all the style files (\*.sty) under the directory "MMKD\STYLE". Select a file by using [+ / YES], [- / NO] button or Data Dial.
2. Press [ENTER] button, and then use the [+ / YES] / [- / NO] button or Data Dial to select a user style number.
3. Press [ENTER] button, LCD will display "Sure?". Now press [ENTER] / [+ / YES] button to load the file or press [EXIT] / [- / NO] button to cancel.

### Load Memory:

1. Select the menu "LoadMem" and press [ENTER] button, the LCD will show all the memory files (\*.mem) under the directory "MMKD\MENORY". Select a file by using [+ / YES], [- / NO] button or Data Dial.
2. Press the [ENTER] button, LCD will display "Sure?". Now press [ENTER] / [+ / YES] button to load the file or press [EXIT] / [- / NO] button to cancel.

### Load Voice:


1. Select the menu "LoadVoic" and press [ENTER] button, the LCD will show all the voice files (\*.voc) under the directory "MMKD\VOICE". Select a file by using [+ / YES], [- / NO] button or Data Dial.
2. Press [ENTER] button, and then use the [+ / YES] / [- / NO] button or Data Dial to select a user voice number.
3. Press the [ENTER] button, LCD will display "Sure?". Now press [ENTER] / [+ / YES] button to load the file or press [EXIT] / [- / NO] button to cancel.

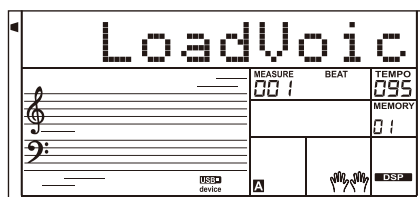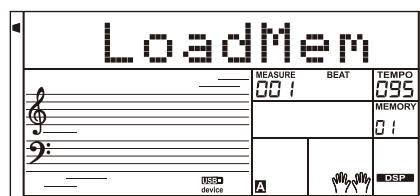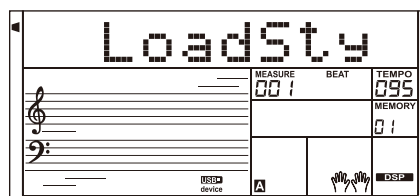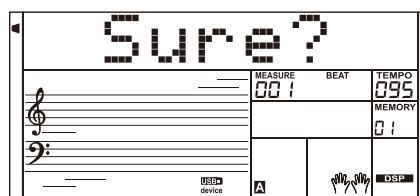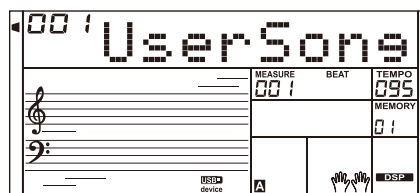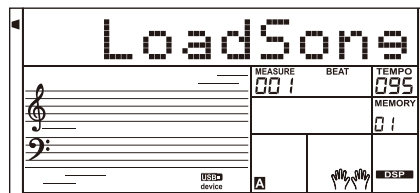

# Connecting USB Flash Drive



## Save

 1. Select the menu “Save” and press [ENTER] button, the Save sub menu are displayed on LCD, which includes “SaveSong”, “SaveSty”, “SaveMem” and “SaveVoic”. You can select one by using [+ /YES], [- /NO] button or Data Dial.

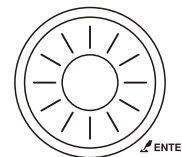

### For example, saving a user song.

  1. Select the “SaveSong” sub-menu, then press [ENTER] to enter the menu. LCD will show the current user song name and number. Use the data dial to select a user song.
2. Press [ENTER] and the LCD will prompt to enter a file name “SNG\_”. Use the keyboard to enter an 8-digit file name. Please refer to the Keyboard and ASCII Character Relative Table at the back of this chapter.
3. After entering the file name, press [ENTER]. LCD will show “Sure?”. Press [+ /YES] to confirm saving, or press [- /NO] to cancel.
4. If the name you enter is the same as an existing song, LCD will prompt “SameName”. You need to enter a different name to save the file.

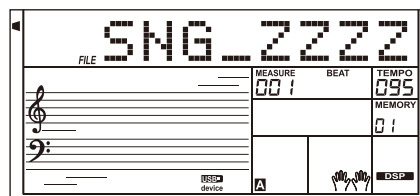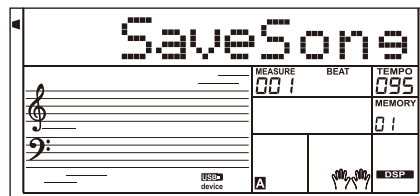


### Note:

Please follow the steps above to save a user style or a user memory.

## Delete

 
1. Select the menu “Delete” and press [ENTER] button, the delete sub menu are displayed on LCD, which includes “UserSong”, “UserSty”, “UserMem” and “UserVoic”. Use [+ /YES], [- /NO] button or Data Dial to select one.
2. Select a sub menu and then press [ENTER] button. Use the data dial to select a file you want to delete.
3. Press [ENTER] button, “Sure?” will be displayed on LCD, press [ENTER] or [+ /YES] button to delete the file, or press [- /NO] to cancel.

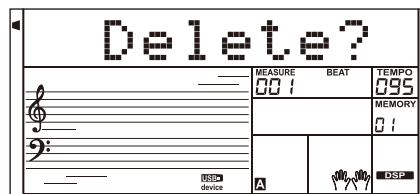

## Format

Select the menu “Format” and press [ENTER] button, “Sure?” are displayed on LCD. Press [ENTER] button to format the USB Storage Device, or press [- /NO] to cancel.

 Note: Formatting will delete all data in the USB flash drive!

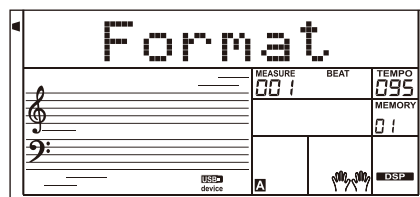

## Keyboard and ASCII Character Relative Table

Note	C#2	D2	Eb2	E2	F2	F#2	G2	Ab2	A2	Bb2	B2
Letter	DEL	BACK	NEXT	A	B	C	D	E	F	G	H

Note	C3	C#3	D3	Eb3	E3	F3	F#3	G3	Ab3	A3	Bb3
Letter	I	J	K	L	M	N	O	P	Q	R	S

Note	B3	C4	C#4	D4	Eb4	E4	F4	F#4	G4	Ab4	A4
Letter	T	U	V	W	X	Y	Z	0	1	2	3

Note	Bb4	B4	C5	C#5	D5	Eb5
Letter	4	5	6	7	8	9

By using the MIDI functions you can expand your musical possibilities. This section explains what MIDI is, and what it can do, as well as how you can use MIDI on your instrument.

## What's MIDI?

1. MIDI (short for Musical Instrument Digital Interface) allows a wide variety of electronic musical instruments, computers and other related devices to connect and communicate with one another. MIDI carries event messages that specify notation, pitch and velocity, control signals for parameters such as volume, vibrato, audio panning, and program change information to change the voice selections.
2. The instrument can output the real-time playback information via MIDI messages and control external MIDI devices. The instrument can also accept incoming MIDI messages and generate sound accordingly.

## MIDI Terminals

In order to exchange MIDI data between multiple devices, each device must be connected by MIDI cable.


**MIDI IN:** Receives MIDI data from a computer.

**MIDI OUT:** Transmits the instrument information as MIDI data to another MIDI device.

**MIDI THRU PORT:** You can use MIDI cable to link the MIDI THRU port to other MIDI instrument MIDI IN port. The message that the MIDI IN port receives will be auto sent to the MIDI THRU port, so that one MIDI instrument can control many MIDI instrument at the same time.



Connect the MIDI OUT of other Device to the MIDI IN jack on the rear panel, this instrument will work as sound module.

 Connect the MIDI IN of other Device to the MIDI OUT jack on the rear panel. this instrument will work as Midi Controller.

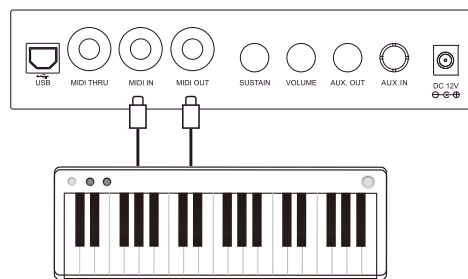

## Downloading Data from the Computer

  1. Turn off the instrument. Use a standard USB cable to connect the USB jack of instrument to the USB port of a computer. Then turn on the instrument.
2. Open the POOTUTE software on computer. "PCLink." will appear on the instrument LCD, indicating it is connected successfully with the computer.
3. With the POOTUTE, you can upload any user data to the computer as a backup or download user data from the computer to the instrument.
4. Please refer to the software instructions for more details.

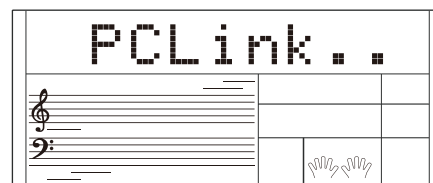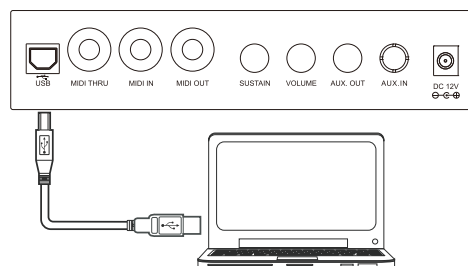

# Troubleshooting

Problem	Possible Cause and Solution
The speakers produce a pop sound whenever the power is turned ON or OFF.	This is normal and is no cause for alarm.
No sound when the keyboard is played.	Check if the master volume is set too low or if headphones are plugged into the PHONES Jack. The R1/R2/L voice volume (Mixer) settings could be set too low. Make sure the voice volumes are set at appropriate levels.
When using a mobile phone, noise is produced.	Using a mobile phone in close proximity to the instrument may produce interference. To prevent this, turn off the mobile phone or use it further away from the instrument.
The auto accompaniment does not play back even Sync is in standby condition and a key is pressed.	You may be trying to start accompaniment by playing a key in the righthand range of the keyboard. To start the accompaniment with Sync Start, make sure to play a key in the left-hand range of the keyboard.
Certain notes sound at wrong pitch.	Make sure that the tuning value is set to 0 . Press and hold the [+ / YES] and [- / NO] buttons at the same time, then turning the power on will set INSTRUMENT to default.
The Harmony function does not operate.	And Harmony cannot be turned on when a drum kit is selected for the voice R1.
After connecting with a computer, the instrument cannot be recognized.	Please check if the USB cable is being connected firmly, or try connecting another USB port on the computer, without the need to install another driver on the PC.
It cannot read/save to the USB flash drive.	It support USB flash drive in the FAT16/FAT32 format only and does not support USB partition. Please format your USB flash drive into FAT16/FAT32 on computer before using.
It shuts down after a period of time.	Normally, the auto power off function will turn off the instrument after a preset period of time if the instrument is not used. You can turn off the function in the Function Menu.

# Specifications

**LCD Display**

Multi-functional LCD

**Keys**

61

**Polyphony**

128

**Voice**

737 preset voices, 50 user voices

**Style**

240 preset styles, 10 user styles

**Song**

160 preset songs, 10 user songs

**Demo**

5

**Album**

120

**Control button**

Power Switch, Volume Knob, Accom+/-, Transpose+/-, Octave+/-, Tempo+/-, Left, Right/Chord Dict., Lesson, Perform., Freeze, O.T.S., IFX, SYNTH, Bank, Store, M1-M6, Style, Voice, Demo, Song/Album, Data Dial, Enter, +/Yes, -/No, Exit, Mixer, Function, Harmony, Dual, Lower, Sustain, DSP, Piano, Metro, Touch, USB Device, FreeSolo.

**Accompaniment Control**

Start/Stop, Sync stop, Sync start, Intro1/Ending1(Pause), Intro2/Ending2(REPEAT A/B), Fill A (FF), Fill B (Rew), Fill C, Fill D, Fade, A.B.C.

**Record Function**

Record, Accomp, Melody 1-5

**Panel Memory**

96

**Connectors**

DC IN, Headphones, AUX IN, AUX OUT, Sustain, Volume, USB, MIDI IN, MIDI OUT, MIDI THRU.

**Power Supply**

DC 12V

**Speaker**

Woofers: 15WX2  
Tweeters: 25WX2

**Dimensions**

970(L)X390(W)X160(H)MM

**Weight**

9Kg

\* Specifications and descriptions herein are for information only and are subject to change without prior notice.

# Voice List

NO.	English Name	LCD Name
<b>Piano</b>		
1	Acoustic Grand Piano	GrandPn
2	Acoustic Grand Piano (wide)	GrandPnW
3	Acoustic Grand Piano (dark)	GrandPnD
4	Acoustic Grand Piano (stereo)	SteGraPn
5	Octave Grand Piano	OctavPno
6	Octave Grand Piano 2	OctavPn2
7	Piano & Strings	Pno&Str
8	Piano & Strings 2	Pno&Str2
9	Piano & Pad	Pno&Pad
10	Piano & Pad 2	Pno&Pad2
11	Piano & Choir	Pno&Cho
12	Piano & Choir 2	Pno&Cho2
13	Piano & EP	Pno&EP
14	Piano & EP 2	Pno&EP2
15	Piano & Vibraphone	Pno&Vib
16	Piano & Vibraphone 2	Pno&Vib2
17	Jazz Piano	JazzPno
18	Pop Piano	PopPiano
19	Rock Piano	RockPno
20	Club Piano	ClubPno
21	Bright Acoustic Piano	BritePn
22	Bright Acoustic Piano (wide)	BritePnW
23	Electric Grand Piano	E.Grand
24	Electric Grand Piano (wide)	E.GrandW
25	Electric Grand Piano (dark)	E.GrandD
26	Fusion Electric Grand Piano	FusionEP
27	Fusion Electric Grand Piano 2	FusioEP2
28	Club Electric Piano	ClubEP
29	Club Electric Piano 2	ClubEP2
30	Wah Electric Grand Piano	WahEP
31	Wah Electric Grand Piano 2	WahEP2
32	Wah Electric Grand Piano 3	WahEP3
33	Honky Tonk Piano	HnkyTonk
34	Honky Tonk Piano (wide)	HnyTonkW
35	Honky Tonk Piano (dark)	HnyTonkD
36	Honky Tonk Piano (stereo)	HoTo/Ste
37	Electric Piano	E.Piano
38	Electric Piano 2	E.Piano2
39	Electric Piano (wide)	E.PianoW
40	Electric Piano (wide) 2	E.Pno2W
41	Detuned Electric Piano	DetunEP
42	Detuned Electric Piano 2	DetunEP2
43	Electric Piano(velocity mix)	E.PnoV
44	Electric Piano 2 (velocity mix)	E.PnoV2
45	60's Electric Piano	60'sEP
46	EP Legend	EPLegend
47	Phase EP	EPPPhase
48	Phase EP 2	EPPPhase2
49	Jazz Electric Piano	JazzEP
50	Tremolo EP	TremoEP
51	Tremolo EP 2	TremoEP2
52	Funk EP	FunkEP
53	Funk EP 2	FunkEP2
54	Modern EP	ModernEP

55	Modern EP 2	ModerEP2
56	Warm EP	WarmEP
57	Warm EP 2	WarmEP2
58	Choir EP	ChoriEP
59	Choir EP 2	ChoriEP2
60	EP & Strings	EP&Str
61	EP & Strings 2	EP&Str2
62	Harpsichord	Harpsi
63	Harpsichord 2	Harpsi2
64	Harpsichord (octave mix)	HarpsiO
65	Harpsichord (wide)	HarpsiW
66	Harpsichord (with key off)	HarpsiOf
67	Clavi	Clavi
68	Clavi 2	Clavi2
69	Clavi (wide)	ClaviW
70	Pulse Clavi	PluseClv
71	Pulse Clavi 2	PulseCl2
72	Phase Clavi	PhaseCla
73	Phase Clavi 2	PhaseCl2
74	Wah Clavi	WahClavi
75	E.Clavi	E.Clavi
<b>Organ</b>		
76	Celesta	Celesta
77	Celesta 2	Celesta2
78	Bright Celesta	BriCeles
79	Celesta & Sine	Cele&Sin
80	Reecho Bell	RchoBell
81	Celesta & Music Box	Cele&MuB
82	Celesta & Music Box 2	Cele&MB2
83	Glockenspiel	Glocken
84	Glockenspiel 2	Glocken2
85	Glockenspiel & Sine	Gloc&Sin
86	Glockenspiel & Celesta	Gloc&Cel
87	Glockenspiel & Celesta 2	Gloc&Ce2
88	Music Box	MusicBox
89	Music Box 2	MusiBox2
90	Music Box 3	MusiBox3
91	Toy Box	ToyBox
92	Music Box & Harp	MBox&Har
93	Music Box & Harp 2	MB&Harp2
94	Vibraphone	Vibra
95	Vibraphone 2	Vibra2
96	Vibraphone (wide)	VibraW
97	Vibraphone (wide) 2	VibraW2
98	Stereo Vibraphone	SteVibra
99	Rigid Vibraphone	RigVibra
100	Vibraphone & Bell	Vibra&Be
101	Vibraphone & Harpsichord	Vib&Harp
102	Vibraphone & Harpsichord 2	Vib&Har2
103	Vibraphone & Strings	Vibr&Str
104	Vibraphone & Strings 2	Vib&Str2
105	Hard Vibraphone	HardVib
106	Marimba	Marimba
107	Marimba 2	Marimba2
108	Marimba (wide)	MarimbaW
109	SinMarimba	SinMarim



110	Stereo Marimba	SteMarim
111	Marimba & Vibraphone	Mari&Vib
112	Marimba & Vibraphone 2	Mar&Vib2
113	Wood Drum	WoodDrum
114	Wood Drum 2	WoodDr2
115	Xylophone	Xylophon
116	Xylophone 2	Xylopho2
117	Tubular Bells	TubulBel
118	Tubular Bells 2	TubulBe2
119	Church Bell	ChurBell
120	Church Bell 2	ChurBel2
121	Carillon	Carillon
122	Carillon 2	Carillo2
123	Dulcimer	Dulcimer
124	Dulcimer 2	Dulcimr2
125	Santur	Santur
126	Santur 2	Santur2
127	Shorty	Shorty
128	Shorty 2	Shorty2
<b>Piano</b>		
129	Drawbar Organ	DrawOrgn
130	Drawbar Organ 2	DrawOrg2
131	Detuned Drawbar Organ	DeDrOrgn
132	Detuned Drawbar Organ 2	DeDrOrg2
133	Italian 60's Organ	60'sOrgn
134	Italian 60's Organ2	60'sOr2
135	70's Drawbar Organ	70DrawOr
136	70's Drawbar Organ 2	70DraOr2
137	Soft Stereo Drawbar Organ	SoftDrOr
138	Mellow Drawbar Organ	MellDrOr
139	Bright Drawbar Organ	BriDrOrg
140	Bright Drawbar Organ 2	BriDrOr2
141	Percussive Organ	PercOrgn
142	Percussive Organ 2	PercOrg2
143	Detuned Percussive Organ	DePeOrgn
144	Detuned Percussive Organ 2	DePeOrg2
145	70's Percussive Organ	70'sPcOr
146	Light Click Organ	LiCliOrg
147	Light Click Organ 2	LiCliOr2
148	Rock Organ	RockOrgn
149	Rock Organ 2	RockOrg2
150	Stereo Rotary Organ	SteRoOrg
151	Slow Rotary Organ	SlRotaOr
152	Rotary Organ	RotaOrgn
153	Rotary Organ 2	RotaOrg2
154	Church Organ	ChurOrgn
155	Church Organ 2	ChurOrg2
156	Church Organ 3	ChurOrg3
157	Church Organ (octave mix)	ChurOrgO
158	Detuned Church Organ	DeChOrgn
159	Detuned Church Organ 2	DeChOrg2
160	Reed Organ	ReedOrgn
161	Reed Organ 2	ReedOr2
162	Puff Organ	PuffOrgn
163	Puff Organ 2	PuffOr2
164	Accordion	Acordion

165	Accordion 2	Acordin2
166	Accordion 3	Acordin3
167	Chorus Accordion	ChoAccor
168	Musette	Musette
169	Accord It Solo	AccoSolo
170	Harmonica	Harmnica
171	Harmonica 2	Harmnic2
172	Sweet Harmonica	SweeHarm
173	Wah Harmonica	WahHarmo
174	Tango Accordion	TanAccod
175	Tango Accordion 2	TanAcco2
<b>Organ</b>		
176	Acoustic Guitar (nylon)	NylonGtr
177	Acoustic Guitar (nylon) 2	NylonGt2
178	Acoustic Guitar (nylon + keyoff)	NylGtrOf
179	Ukulele	Ukulele
180	Acoustic Guitar (steel)	SteelGtr
181	Acoustic Guitar (steel) 2	SteelGt2
182	12-Strings Guitar	12StrGtr
183	12-Strings Guitar 2	12StrGt2
184	Mandolin	Mandolin
185	Mandolin 2	Mandoli2
186	Steel Guitar with Body Sound	SteelBdy
187	Electric Guitar (jazz)	JazzGtr
188	Electric Guitar (jazz) 2	JazzGtr2
189	Electric Guitar (pedal steel)	PedalGtr
190	Electric Guitar (clean)	CleanGtr
191	Electric Guitar (detuned clean)	DetClnGt
192	Mid Tone Guitar	MidTonGt
193	Electric Guitar (muted)	MutedGtr
194	Electric Guitar (funky cutting)	FunkGt
195	Electric Guitar (muted velo-sw)	MutVelGt
196	Jazz Man	JazzMan
197	Overdriven Guitar	OvdrGtr
198	Overdriven Guitar 2	OvdrGtr2
199	Guitar Pinch	GtPinch
200	Distortion Guitar	DistGtr
201	Distortion Guitar 2	DisGtr2
202	Distortion Guitar (withfeedback)	FeedbkGt
203	DistortionGuitar (withfeedback) 2	FedbkGt2
204	Distorted Rhythm Guitar	DistRyth
205	Guitar Harmonics	GtrHarmo
206	Guitar Harmonics 2	GtrHarm2
207	Guitar Feedback	GtrFedbk
208	Velocity Nylon Guitar	VeloNyGt
209	Chorus Nylon Guitar	ChoNylGt
210	Chorus Nylon Guitar 2	ChNylGt2
211	Bright Nylon Guitar	BriNylGt
212	Bright Nylon Guitar 2	BrNylGt2
213	Tremolo Steel Guitar	TreStGtr
214	Tremolo Steel Guitar 2	TrStGtr2
215	Velocity Steel Guitar	VelStGtr
216	Chorus Steel Guitar	ChoStGtr
217	Chorus Steel Guitar 2	ChStGtr2
218	Nylon & Steel Guitar	Nyl&StGt
219	Nylon & Steel Guitar 2	Ny&StGt2

# Voice List

220	Pedal Steel Guitar	PedStGtr
221	Mellow Guitar	MelloGtr
222	Mellow Guitar 2	MellGtr2
223	Velocity Jazz Guitar	VelJazGt
224	Velocity Jazz Guitar 2	VelJaGt2
225	Detuned Jazz Guitar	DeJazGtr
226	Detuned Jazz Guitar 2	DeJazGt2
227	Stereo Clean Guitar	SteCleGt
228	Velocity Clean Guitar	VelCleGt
229	Velocity Clean Guitar 2	VelClGt2
230	Stereo Muted Guitar	SteMutGt
231	Stereo Muted Guitar 2	StMutGt2
232	5th Distortion	5thDisto
233	Distortion Guitar Octave	OctDisGt
234	Stereo Distorted Guitar	SteDisGt
235	Steel Bend Guitar	StBenGtr
<b>Bass</b>		
236	Acoustic Bass	AcoBass
237	Acoustic Bass 2	AcouBas2
238	Acoustic Bass 3	AcouBas3
239	Electric Bass (finger)	FngrBass
240	Electric Bass (finger) 2	FngrBas2
241	Finger Slap Bass	FngrSlap
242	Finger Slap Bass 2	FngrSlp2
243	Electric Bass (pick)	PickBass
244	Electric Bass (pick) 2	PickBas2
245	Fretless Bass	FresBass
246	Fretless Bass 2	FresBas2
247	Slap Bass	SlapBass
248	Slap Bass 2	SlapBas2
249	Slap Bass 3	SlapBas3
250	Slap Bass 4	SlapBas4
251	Synth Bass	SynBass
252	Synth Bass 2	SynBass2
253	Synth Bass 3	SynBass3
254	Synth Bass 4	SynBass4
255	Acoustic Bass Detuned	DeAcoBas
256	Acoustic Bass Detuned 2	DeAcoBa2
257	Acoustic Bass Filter	FilAcBas
258	Acoustic Bass Filter 2	FilAcBa2
259	Jazz Style	JazStyle
260	Jazz Style 2	JaStyle2
261	Acoustic Bass & Mute Guitar	AcB&MuGt
262	Acoustic Bass & Mute Guitar 2	AcB&MuG2
263	Detuned Finger Bass	DeFngrBa
264	Detuned Finger Bass 2	DeFngBa2
265	Dark Finger Bass	DaFngrBa
266	Resonant Finger Bass	ReFgrBas
267	Resonant Finger Bass 2	ReFgrBa2
268	Wah Finger Bass	WaFgrBas
269	Wah Finger Bass 2	WaFgrBa2
270	Bass & Distorted Electric Guitar	Ba&DisGt
271	Bass & Distorted Electric Guitar 2	Ba&DiGt2
272	Mute Pick Bass	MuPicBas
273	Mute Pick Bass 2	MuPicBa2

274	Detuned Pick Bass	DePicBas
275	Detuned Pick Bass 2	DePicBa2
276	90's Bass	90'sBass
277	90's Bass 2	90'sBas2
278	Fretless Bass & Sine	Frls&Sin
279	Fretless Bass & Sine 2	Frls&Si2
280	Fretless Bass Detuned	DeFrtles
281	Fretless Bass Detuned 2	DeFrtles2
282	Fretless Bass Detuned 3	DeFrtles3
283	Power Slap Bass	PoSlaBas
284	Power Slap Bass 2	PoSlaBa2
285	Lash Thumb Bass	LaThbBas
286	Lash Thumb Bass 2	LaThbBa2
287	Resonant Slap Bass	ReSlaBas
288	Resonant Slap Bass 2	ReSlaBa2
289	Wah Slap Bass	WaSlaBas
290	Wah Slap Bass 2	WaSlBas2
291	Velocity Switch Slap Bass	VeSlaBas
292	Clavi Bass	ClavBass
293	Hammer	Hammer
294	Synth Bass (attack)	AtackBas
295	Synth Bass (rubber)	RubbBass
296	Attack Pulse	AtackPls
<b>Strings &amp; Orchestral</b>		
297	Violin	Violin
298	Violin 2	Violin2
299	Violin (slow attack)	SlViolin
300	Two Violin	TwoVioli
301	Soft Violin	SofVioli
302	Velocity Violin	VelVioli
303	The Violin	TheVioli
304	Mono Violin	MonVioli
305	Octave Violin	OtaVioli
306	Electric Violin	EleVioli
307	Violin & Viola	Vlin&Vla
308	Viola	Viola
309	Viola 2	Viola2
310	Viola 3	Viola3
311	Dark Viola	DarViola
312	Cello	Cello
313	Cello 2	Cello2
314	Cello 3	Cello3
315	Cello 4	Cello4
316	Contrabass	Contrabs
317	Contrabass 2	Contrab2
318	Tremolo Strings	TremStr
319	Tremolo Strings 2	TremStr2
320	Slow Tremolo Strings	SlTrmStr
321	Slow Tremolo Strings 2	SlTrmSt2
322	Pizzicato Strings	PizzStr
323	Pizzicato Strings 2	PizStr2
324	Octave Pizzicato	OctaPiz
325	Orchestral Harp	OrchHarp
326	Orchestral Harp 2	OrchHrp2
327	Yang Chin	YangChin

328	Yang Chin 2	YangChi2
329	Timpani	Timpani
330	Timpani 2	Timpani2
331	String Ensembles	Strings
332	String Ensembles 2	Strings2
333	Strings & Brass	Str&Bras
334	60's Strings	60'sStr
335	70's Strings	70'sStrs
336	Synth Strings	SynStrs
337	Synth Strings 2	SynStrs2
338	Synth Strings 3	SynStrs3
339	Synth Strings 4	SyntStr4
340	Synth Strings 5	SyntStr5
341	Choir Aahs	ChorAah
342	Choir Aahs 2	ChorAah2
343	Choir Aahs 3	ChorAah3
344	Choir Aahs 4	ChorAah4
345	Voice Oohs	VoiceOoh
346	Voice Oohs 2	VoicOoh2
347	Humming	Humming
348	Humming 2	Humming2
349	Analog Voice	AnaVoice
350	Analog Voice 2	AnaVoic2
351	Synth Voice	SynVoice
352	Orchestra Hit	OrchHit
353	Celloen 16'	Cello16'
354	Chamber Music	ChambMus
355	Chamber Music 2	ChambMu2
356	Africa	Africa
357	Africa 2	Africa2
358	Stereo Slow Strings	SteSlStr
359	Slow Strings	SlowStr
360	Legato Strings	LegtoStr
361	Orchestra	Orchestra
362	Arco Strings	ArcoStr
363	Resonant Strings	RsontStr
364	The Strings	TheStrs
365	Solo Strings	SoloStrs
366	Mellow Choir	MeloChoi
367	Stereo Choir Aahs	SteChoAa
368	Strings & Choir	Str&Choi
369	Strings & Choir 2	Str&Cho2
370	Strings & Voice	Str&Voic
371	Strings & Voice 2	Str&Voi2
372	Analog Voice	AnalgVoi
373	Analog Voice 2	Analog
374	Bass Hit Plus	BassHit
375	Bass Hit Plus 2	BassHit2
376	6th Hit	6thHit
377	6th Hit 2	6thHit2
378	Euro Hit	EuroHit
379	Euro Hit 2	EuroHit2
380	Octave Orchestra Hit	OctOrchH
381	Octave Orchestra Hit 2	OctOrch2
Reed		

382	Trumpet	Trumpet
383	Trumpet 2	Trumpet2
384	Dark Trumpet Soft	DarkTrp
385	Dark Trumpet Soft 2	DarkTrp2
386	Trombone	Trombone
387	Trombone 2	Trmbone2
388	Bright Trombone	BritBone
389	Tuba	Tuba
390	Tuba 2	Tuba2
391	Tuba 3	Tuba3
392	Muted Trumpet	MuteTrp
393	Muted Trumpet 2	MuteTrp2
394	Muted Trumpet 3	MuteTrp3
395	French Horn	FrHorn
396	French Horn 2	FrHorn2
397	French Horn 3	FrHorn3
398	French Horn 4	FrHorn4
399	Brass Section	Brass
400	Brass Section 2	Brass2
401	Brass Section 3	Brass3
402	Brass Section 4	Brass4
403	Synth Brass	SynBras
404	Synth Brass 2	SynBras2
405	Synth Brass 3	SynBras3
406	Synth Brass 4	SynBras4
407	Resonant Trumpet	ResTrump
408	Sweet Trumpet	SweTrump
409	Wah Trumpet	WahTrump
410	Dark Trombone	DaTrombo
411	Dark Trombone 2	DaTromb2
412	Strings & Trombone	Str&Trom
413	Tuba Solo	TubaSolo
414	Tuba Solo 2	TubaSol2
415	Soft Tuba	SoftTuba
416	Soft Tuba 2	SofTuba2
417	Stereo French Horn	StFrHorn
418	Stereo French Horn 2	StFrHor2
419	Fifth Horn Orchestra	FifHornO
420	Fifth Horn Orchestra 2	FifHorO2
421	Dark Brass	DarBrass
422	Dark Brass 2	DarBras2
423	Brassband	Brasband
424	Brassband 2	Braband2
425	Bright Brass Section	BriBrass
426	Bright Brass Section 2	BriBras2
427	Mute Brass Ensemble	MuBrasEn
428	Mute Brass Ensemble 2	MuBraEn2
429	Sforzato Brass	SfztBras
430	Brass & Strings	Bras&Str
431	Brass & Strings 2	Bra&Str2
432	Analog Synth Brass	AnaBras
433	Analog Synth Brass 2	AnaBras2
434	Jump Brass	JumpBras
435	Octave Synth Brass	OtaSyBrs
436	Synth Brass & Strings	SyBr&Str
437	Synth Brass & Strings 2	SyB&Str2

# Voice List

438	Echo Brass	EchoBras
Synth Pad		
439	Soprano Sax	SprnoSax
440	Soprano Sax 2	SprnSax2
441	Soprano Sax Soft	SprnSxSf
442	Slow Soprano Sax	SlSprnSx
443	Sweet Soprano Sax	SwSprnSx
444	Alto Sax	AltoSax
445	Alto Sax 2	AltoSax2
446	Soft Alto Sax	SftAtoSx
447	Super Alto Sax	SprAtoSx
448	Tenor Sax	TenorSax
449	Tenor Sax 2	TenoSax2
450	Baritone Sax	BariSax
451	Baritone Sax 2	BariSax2
452	Soft Baritone Sax	SfBariSx
453	Sax Band	SaxBand
454	Oboe	Oboe
455	Oboe 2	Oboe2
456	Sweet Oboe	SwetOboe
457	English Horn	EngHorn
458	English Horn 2	EngHorn2
459	Analog Horns	AnalHorn
460	Woodwinds	Woodwind
461	Bassoon	Bassoon
462	Bassoon 2	Bassoon2
463	Clarinet	Clarinet
464	Clarinet 2	Clarinet2
Synth Pad		
465	Piccolo	Piccolo
466	Piccolo 2	Piccolo2
467	Flute	Flute
468	Flute 2	Flute2
469	Sweet Flute	SwetFlut
470	Recorder	Recorder
471	Recorder 2	Recorde2
472	Pan Flute	PanFlute
473	Pan Flute 2	PanFlut2
474	Sweet Pan Flute	SwPanFlu
475	Dark Pan Flute	DarPanFl
476	Blown Bottle	Bottle
477	Blown Bottle 2	Bottle2
478	Shakuhachi	Shakchi
479	Shakuhachi 2	Shakchi2
480	Whistle	Whistle
481	Whistle 2	Whistle2
482	Ocarina	Ocarina
483	Ocarina 2	Ocarina2
Synth Pad		
484	Lead 1 (square)	SquareLd
485	Lead 1a (square 2)	SquarLd2
486	Lead 1b (sine)	SineLead
487	Lead 2 (sawtooth)	SawLead
488	Lead 2a (sawtooth 2)	SawLead2
489	Lead 2b (saw + pulse)	SawPlsLd

490	Lead 2c (double sawtooth)	DubSawLd
491	Lead 2d (sequenced analog)	SquAnaLd
492	Lead 3 (calliope)	CalliopLd
493	Lead 4 (chiff)	ChiffLd
494	Lead 5 (charang)	CharanLd
495	Lead 5a (wire lead)	WireLead
496	Lead 6 (voice)	VoiceLd
497	Lead 7 (fifths)	FifthsLd
498	Lead 8 (bass + lead)	BassLead
499	Lead 8a (soft wrl)	SftWrlLd
500	Delayed Lead 2	DelyLed2
501	Delayed Lead 3	DelyLed3
502	Slow Square Lead	SlSquaLd
503	Sine Solo	SineSolo
504	Square Lead	SquarLd
505	2Oscillators Lead	2OscLd
506	Wavy Sawtooth	WavySaw
507	Super Analog	SuprAnag
508	Big Lead	BigLead
509	Bauble Lead	BaublLed
510	PWM 4th	PWM4th
511	PWM 4th Soft	PWM4thSf
512	Synth Calliope Soft	SynCalSf
513	Chiffer Lead	ChifLed
514	Chiffer Lead 2	ChifLed2
515	Charang	Charang
516	Charang 2	Charang2
517	Wire Lead	WireLed2
518	Soft Vox	SoftVox
519	5th SawWave	5thSawWv
520	Fifth Lead Soft	FifLedSf
521	Fifth Lead	FifLead
522	Massiness	Massines
523	Square	Square
524	Thick Square	ThickSqu
525	Corrie	Corrie
526	Quint	Quint
Synth SFX		
527	Pad 1 (new age)	NewAgePd
528	New Age Pad 2	NewAgPd2
529	New Age Pad 3	NewAgPd3
530	Pad 2 (warm)	WarmPad
531	Warm Pad 2	WarmPad2
532	Pad 2a (sine pad)	SinePad
533	Pad 3 (polysynth)	PolySyPd
534	Poly Synth 2	PolySyn2
535	Poly Synth 3	PolySyn3
536	Pad 4 (choir)	ChoirPad
537	Pad 4a (itopia)	ItopiaPd
538	Pad 5 (bowed)	BowedPd
539	Pad 6 (metallic)	MetalPad
540	Metallic Pad 2	MetalPa2
541	Pad 7 (halo)	HaloPad
542	Halo Pad 2	HaloPad2
543	Halo Pad 3	HaloPad3
544	Pad 8 (sweep)	SweepPd

545	Sweep Pad 2	SweepPa2
546	Slow Square	SlowSqua
547	New Year Pad	NewYrPad
548	PWM Pad	PWMPad
549	Warmly Pad	WarmlPad
550	Horn Pad	HornPad
551	Click Pad	ClickPad
552	Analog Pad	AnaloPad
553	Poly Pad	PolyPad
554	Space Voice	SpaceVoi
555	Bowed Pad	BowedPad
556	Bowed Pad 2	BowedPa2
557	Pan Pad	PanPad
558	Pan Pad 2	PanPad2
559	Dipolar Pad	DipolaPa
560	Rising	Rising
561	Congregate	Cogrgate
<b>Percussive</b>		
562	FX 1 (rain)	FXRain
563	FX 2 (soundtrack)	Soundtrk
564	Prelude	Prelude
565	FX 3 (crystal)	Crystal
566	Crystal 2	Crystal2
567	FX 3a (synth mallet)	SynMalet
568	FX 4 (atmosphere)	Atmosphr
569	Warm Air	WarmAir
570	FX 5 (brightness)	Bright
571	Smog	Smog
572	FX 6 (goblins)	Goblins
573	Goblin 2	Goblin2
574	Choir Bell	ChoirBel
575	Choir Bell 2	ChoiBel2
576	FX 7 (echoes)	Echoes
577	Echo Drops 2	EchoDrp2
578	FX 7a (echo bell)	EchoBell
579	Echo Bell 2	EchoBel2
580	FX 7b (echo pan)	EchoPan
581	FX 8 (sci-fi)	Sci-Fi
582	Sci-Fi 2	Sci-Fi2
<b>Percussive</b>		
583	Sitar	Sitar
584	Sitar 2 (bend)	Sitar2
585	Sitar & Strings	Sitr&Str
586	Sitar & Strings 2	Sitr&Sr2
587	Banjo	Banjo
588	Banjo 2	Banjo2
589	Shamisen	Shamisen
590	Shamisen 2	Shamisl2
591	Koto	Koto
592	Koto 2	Koto2
593	Taisho Koto	TaiKoto
594	Taisho Koto 2	TaiKoto2
595	Kalimba	Kalimba
596	Kalimba 2	Kalimba2
597	Bag Pipe	Bagpipe
598	Bag Pipe 2	Bagpipe2

599	Fiddle	Fiddle
600	Fiddle 2	Fiddle2
601	Shanai	Shanai
602	Shanai 2	Shanai2
<b>SFX</b>		
603	Tinkle Bell	TnklBell
604	Tinkle Bell 2	TnklBel2
605	Agogo	Agogo
606	Agogo 2	Agogo2
607	Steel Drums	SteelDrm
608	Steel Drums 2	StelDrm2
609	Woodblock	WoodBlok
610	Woodblock 2	WoodBlk2
611	Castanets	Castanet
612	Castanets 2	Castane2
613	Taiko Drum	TaikoDum
614	Taiko Drum 2	TaikDrm2
615	ConcertBass Drum	ConBasDm
616	ConcertBass Drum 2	CnBasDr2
617	Melodic Tom	MelodTom
618	Melodic Tom 2	MeldTom2
619	Synth Drum	SynDrum
620	Rhythm Box Tom	RhythBox
621	Electric Drum	ElecDrum
622	Electric Drum 2	EleDrum2
623	Reverse Cymbal	RevCymb1
624	Reverse Cymbal 2	RevCymb2
<b>SFX</b>		
625	Guitar Fret Noise	GtrFrNoi
626	Guitar Fret Noise 2	GtrFrNo2
627	Guitar Cutting Noise	GtCtNois
628	Guitar Cutting Noise 2	GtCtNoi2
629	Acoustic Bass String Slap	BsStSlap
630	Acoustic Bass String Slap 2	BsStSlp2
631	Breath Noise	BreNoise
632	Breath Noise 2	BreNois2
633	Flute Key Click	FlKeyClk
634	Flute Key Click 2	FlKyClk2
635	Seashore	Seashore
636	Seashore 2	Seashor2
637	Rain	Rain
638	Thunder	Thunder
639	Wind	Wind
640	Stream	Stream
641	Bubble	Bubble
642	Bird Tweet	Tweet
643	Bird Tweet 2	Tweet2
644	Dog	Dog
645	Horse Gallop	HouseGlp
646	Sheep	Sheep
647	Telephone Ring	Telephone
648	Telephone Ring 2	Telphon2
649	Door Creaking	DoorCrek
650	Door	Door
651	Scratch	Scratch
652	Wind Chime	WindChi

# Voice List

653	Helicopter	Helicptr
654	Car Engine	CarEngin
655	Car Stop	CarStop
656	Car Pass	CarPass
657	Car Crash	CarCrash
658	Siren	Siren
659	Train	Train
660	Jetplane	Jetplane
661	Starship	Starship
662	Burst Noise	BurtNois
663	Applause	Applause
664	Laughing	Laughing
665	Screaming	Scream
666	Punch	Punch
667	Heart Beat	HeartBet
668	Footsteps	Footstep
669	Gunshot	Gunshot
670	Machine Gun	MachnGun
671	Lasergun	Lasergun
672	Explosion	Explosio
<b>Combined Voice</b>		
673	Stereo Piano & Strings	Pn&Strs
674	Stereo Piano & Calliope	Pno&Calo
675	Stereo Piano & Sweep	Pn&Sweep
676	Honky Tonk Piano & Fifths	Honk&Fif
677	Honky Tonk Piano & Sweep	Honk&Swp
678	FM Electric Piano	FME.Pno
679	Digital Piano	DigitPno
680	E.Piano & Pad	E.Pn&Pad
681	E.Piano & Sweep	E.Pn&Swp
682	E.Piano 2 & Pad	E.Pn2&Pd
683	E.Piano 2 & Sweep	E.Pn2&Sp
684	E.Piano 2 & Warm	E.Pn2&Wm
685	Harpsichord & Stereo Strings	Hch&StSr
686	Music Box & Stereo Strings	MBx&StSr
687	Vibraphone & Stereo Strings	Vib&StSr
688	Vibraphone Octave	VibraOta
689	Vibraphone & Marimba & Kalimba	Vb&Ma&Ka
690	Marimba & Kalimba	Mar&Kalb
691	Marimba Delay	MariDely
692	Xylophone Octave	XyloOcta
693	Organ & Stereo Strings	Org&StSr
694	Stereo Organ & Piano	StOrg&Pn
695	Rock Organ & Strings	RoOrg&Sr
696	Church Organ & Choir	ChOr&Chr
697	Church Organ & Strings	ChuOr&Sr
698	Harmonica & Acoustic Guitar	Hm&AcGtr
699	Harmonica & Strings	Harm&Str
700	Acoustic Guitar & Flute	AcGr&Flu
701	Acoustic Guitar & Clavi	AcGr&Cla
702	24-Strings Guitar	24StrGtr
703	24-Strings Guitar & Strings	24Gr&Str
704	Steel Guitar & Warm Pad	StlGr&WP
705	Stereo Strings & Horn	Str&Horn
706	The Orchestra	TheOrch
707	Full Strings	FullStr

708	Full Strings 2	FullStr2
709	Symphonic	Symphoni
710	Stereo Choir & Strings	Choi&Str
711	Stereo Choir & Steel Guitar	Ch&StlGr
712	3 Trumpets Loose	3TrumLos
713	Trombone & Stereo Strings	Trom&Str
714	3 Trombones Loose	3TromLos
715	3 Muted Trumpets Loose	3MuTrLos
716	Club Brass	ClubBras
717	Brass & Woodwinds	Bras&Wod
718	Woodwinds & Strings	Wood&Str
719	Section Woods Small	WoodSmal
720	Pan Flute & Strings Pad	PnF&SrPd
721	Koto & Shamisen	Kt&Shams
722	Koto & Shamisen & Strings	K&Shm&Sr
<b>Drums</b>		
723	Standard Set	StandSet
724	Room Set	RoomSet
725	Power Set	PowerSet
726	Electronic Set	ElectSet
727	Analog Set	AnalgSet
728	Jazz Set	JazzSet
729	Brush Set	BrushSet
730	Orchestra Set	OrcheSet
731	SFX Set	SFXSet
732	Dance Set	DanceSet
733	Funk Set	FunkSet
734	Rock Set	RockSet
735	Latin Set	LatinSet
736	Pop Set	PopSet
737	Punk Set	PunkSet

# Style List

NO.	English Name	LCD Name
<b>8BEAT</b>		
1	8Beat Ballad	8BtBld
2	8Beat Piano	8BtPiano
3	8Beat 1	8Beat1
4	Guitar Pop 1	GtPop1
5	8Beat Hip Hop	8BtHiHop
6	8Beat Blues Rock	8BtBluRk
7	8Beat Pop	8BtPop
8	Pop Funk 1	PopFunk1
9	Rhythm&Beat 1	Rhy&Bt1
10	8Beat Disco 1	8BtDisc1
11	8Beat Rock	8BtRock
12	Guitar Pop 2	GtPop2
13	8Beat 2	8Beat2
14	Sweet Beat	SweetBt
15	8Beat Dance	8BtDance
16	8Beat Disco 2	8BtDisc2
17	Pop Funk 2	PopFunk2
18	8Beat 3	8Beat3
19	60's 8Beat	60's8Bt
20	Rhythm&Beat 2	Rhy&Bt2
<b>16BEAT</b>		
21	16Beat 1	16Beat1
22	16Beat Funk 1	16BtFuk1
23	16Beat Ballad 1	16BtBld1
24	16Beat R&B	16BtR&B
25	Pop 16Beat 1	Pop16Bt1
26	16Beat Funk 2	16BtFuk2
27	16Beat Dance	16BtDanc
28	Pop 16Beat 2	Pop16Bt2
29	16Beat 2	16Beat2
30	Pop 16Beat 3	Pop16Bt3
31	Pop 16Beat 4	Pop16Bt4
32	Modern 16Beat	Modr16Bt
33	16Beat Hot	16BtHot
34	16Beat Modern	16BtModr
35	16Beat Funk 3	16BtFuk3
36	16Beat 3	16Beat3
37	Cool Beat	CoolBeat
38	16Beat Ballad 2	16BtBld2
39	16Beat 4	16Beat4
40	Pop Shuffle	PopShfl
<b>POP&amp;BALLAD</b>		
41	Pop Rock 1	PopRock1
42	Pop Dance 1	PopDanc1
43	Pop Fusion	PopFusn
44	Analog Night 1	AnalgNt1
45	6/8 Pop	6/8Pop
46	Brit. Pop 1	BritPop1
47	Brit. Pop 2	BritPop2
48	Pop Hit	PopHit
49	Fusion Shuffle	FusShuffl
50	Analog Night 2	AnalgNt2
51	Guitar Pop 3	GtPop3
52	Pop Beat	PopBeat

53	Soft Beat	SoftBeat
54	60's Pop	60'sPop
55	Sting Latin	StigLatn
56	R&B Ballad 1	R&BBld1
57	Guitar Ballad	GtBallad
58	Ballad Rock	BaldRock
59	Piano Pop	PianoPop
60	Soft Ballad	SoftBald
61	Natural Ballad	NatulBld
62	Love Ballad	LoveBald
63	Easy Ballad	EasyBald
64	Miami Ballad	MiamiBld
65	Slow Ballad	SlowBald
66	Folk Ballad	FolkBald
67	Pop Ballad 1	PopBald1
68	Pop Ballad 2	PopBald2
69	EP Ballad	EPBallad
70	New R&B Ballad	NewRBBld
<b>ROCK</b>		
71	Rock	Rock
72	New Wave	NewWave
73	Ska	Ska
74	Pop Rock 2	PopRock2
75	Slow Rock	SlowRock
76	70's Rock&Roll	70'sRock
77	Folk Rock	FolkRock
78	Soft Rock	SoftRock
79	Old Rock	OldRock
80	Easy Rock	EasyRock
81	New Shuffle	NewShuffl
82	Rock Hip Hop	RkHipHop
83	Rock&Roll 1	R'N'R1
84	Rock Shuffle	RockShfl
85	Rock&Roll 2	R'N'R2
<b>BALLROOM</b>		
86	Tango 1	Tango1
87	Spain Matador	Matador
88	Twist 1	Twist1
89	Twist 2	Twist2
90	Big Band Fox	BandFox
91	Tango 2	Tango2
92	Slow Fox	SlowFox
93	Slow Waltz 1	SlowWlz1
94	Swing Fox	SwingFox
95	Salsa 1	Salsa1
96	Cha Cha 1	ChaCha1
97	Cha Cha 2	ChaCha2
98	Beguine 1	Beguine1
99	Beguine 2	Beguine2
100	Rumba 1	Rumba1
101	Samba 1	Samba1
102	Samba 2	Samba2
103	Jive	Jive
104	Fox Trot	FoxTrot
<b>DANCE</b>		
105	Techno 1	Techno1

# Style List

106	Hip Hop 1	HipHop1
107	House 1	House1
108	House 2	House2
109	Pop Dance 2	PopDanc2
110	Down Beat	DownBeat
111	Techno 2	Techno2
112	Progressive	Progress
113	Rap 1	Rap1
114	Rap 2	Rap2
115	Disco	Disco
116	Soft Disco	SoftDisc
117	Disco Party	DscParty
118	70's Disco	70'sDisc
119	70's Disco Funk	70'sFunk
120	Club Dance	ClubDanc
121	Euro Dance	EuroDanc
122	Hip Hop 2	HipHop2
123	Garage	Garage
<b>SOUL &amp; FUNK</b>		
124	Funk 1	Funk1
125	Classic Funk	ClasFunk
126	Jay R&B	JayR&B
127	Gospel Swing	GopSwing
128	Gospel	Gospel
129	Funk 2	Funk2
130	Electric Funk	ElecFunk
131	Groove Funk	GrooveFk
132	Rubber Funk	RubberFk
133	Cool Funky	ColFunky
134	Jazz Funk	JazzFunk
135	Groove	Groove
136	Soul	Soul
137	Hip Hop Soul	HipHopSI
138	Hip Hop Beat	HipHopBt
139	R&B	R&B
140	Soul Beat	SoulBeat
141	R&B Ballad 2	R&BBld2
142	British Soul Pop	BritSoul
143	Latin Jazz 1	LatinJz1
144	Big Band 1	BigBand1
145	Dixieland 1	Dixland1
146	Guitar Swing 1	GtSwing1
147	Broadway Big Band	BwayBand
148	Swing	Swing
149	Latin Jazz 2	LatinJz2
150	Fusion	Fusion
151	Acid Jazz	AcidJazz
152	Cool Jazz Ballad	CoolJzBd
153	Swing Shuffle	SwingSfl
154	Big Band Medium	BandMid
155	Dixieland 2	Dixland2
156	Acoustic Jazz	AcoustJz
157	Guitar Swing 2	GtSwing2
158	Ragtime	Ragtime
159	Modern Jazz Ballad	MdJzBald
160	Swing Ballad	SwingBal

161	Orchestra Swing	OrhSwing
<b>COUNTRY</b>		
162	Country Pop 1	CntyPop1
163	Bluegrass 1	Blugras1
164	8Beat Country	8BtCnty
165	Modern Country	ModrCnty
166	Country Pop 2	CntyPop2
167	Bluegrass 2	Blugras2
168	2/4 Country	2/4Cntry
169	Country Quick Steps	QuickStp
170	Country Folk	CntyFolk
171	Country Shuffle	CnyShuffl
<b>LATIN &amp; LATIN DANCE</b>		
172	Samba 3	Samba3
173	Bossa Nova	BosaNova
174	Latin	Latin
175	New Reggae	NewReggae
176	Reggae Dance	DanReggae
177	Paso Doble	Pasodobl
178	Lite Bossa	LteBossa
179	Latin Rock	LatinRck
180	Beguine 3	Beguine3
181	Slow Bolero	SIBolero
182	Disco Samba	DscSamba
183	Mambo	Mambo
184	Meneito	Meneito
185	Rumba 2	Rumba2
186	Rumba 3	Rumba3
187	Tikitikita	Tikitkta
188	Lambada	Lambada
189	Pop Cha Cha 1	PChaCha1
190	Pop Cha Cha 2	PChaCha2
191	Salsa 2	Salsa2
<b>WALTZ &amp; TRADITIONAL</b>		
192	Waltz	Waltz
193	Old Waltz	OldWaltz
194	English Waltz	EngWaltz
195	German Waltz	GemWaltz
196	Italian Mazurka	ItaMazuk
197	Mexico Waltz	MexWaltz
198	Vienna Waltz	VinaWltz
199	Slow Waltz 2	SlwWltz2
200	Jazz Waltz	JazzWltz
201	Polka	Polka
202	6/8 March	6/8March
203	German Polka	GemPolka
204	Party Polka	PtyPolka
205	Army March	ArmMarch
206	March	March
207	US March	USMarch
208	Musette	Musette
209	French Musette	FMusette
210	Mazurka	Mazurka
<b>WORLD</b>		
211	Enka Ballad	EnkaBald
212	Laendler	Laendler



213	Hawaiian	Hawaiian
214	Sirtake	Sirtake
215	Dangdut	Dangdut
216	6/8 Flipper	6/8Flipp
217	New Age	NewAge
218	Tarantella	Tarantel
219	Scottish	Scottish
220	Norteno	Norteno
<b>PIANIST</b>		
221	Pianist 1	Pianist1
222	Pianist 2	Pianist2
223	Pianist 3	Pianist3
224	Jazz 1	Jazz1
225	Jazz 2	Jazz2
226	Jazz Pub	JazzPub
227	Piano Rock	PianoRk
228	Pop Bossa	PopBossa
229	March 1	March1
230	March 2	March2
231	Piano Beat	PianoBt
232	Piano Bar	PianoBar
233	Blues	Blues
234	Pop Waltz	PopWaltz
235	Slow Waltz	SlwWltz
236	Ballad 1	Ballad1
237	Ballad 2	Ballad2
238	6/8 Ballad	6/8Bld
239	Pop 1	Pop1
240	Pop 2	Pop2

# Song List

No.	English Name	LCD Name
<b>FOLK &amp; COUNTRY</b>		
1	Toccata	Toccata
2	Carry Me Back To Old Virginny	Virginny
3	El Condor Pasa	ElCondor
4	Wedding March	Wedding
5	Traumerei	Traumere
6	Greensleeves	Sleeves
7	Home Sweet Home	SwetHome
8	Aloha Oe	AlohaOe
9	Long Long Ago	LongAgo
10	Heidenroslein	Heidenro
11	Die Lorelei	Lorelei
12	My Darling Clementine	Clemtine
13	Over The Waves	OverWave
14	Gwine To Run All Night	Gwine
15	Oh! Susanna	Susanna
16	Turkey In The Straw	TukyStaw
17	Symphony No.6 "Pathetic"	Sympony6
18	Prelude Op.28 No.15	Prelude
19	The House Of The Rising Sun	RiseSun
20	My Old Kentucky Home	Kentucky
21	Home On The Range	HomeRnge
22	Her Bright Smile Haunts Me Still	HerSmile
23	The Blue-Bells Of Scotland	BlueBell
24	Old Black Joe	BlackJoe
25	Old Dog Tray	DogTray
26	Menuet	Menuet
<b>GOLDEN &amp; POP</b>		
27	Valse Des Fleurs	Fleurs
28	Fruhlingsstimmen	Fruhling
29	Frohlicher Landmann	Landmann
30	Are You Lonesome Tonight?	Lonesome
31	Toy Symphony	ToySymph
32	Auld Lang Syne	LangSyne
33	Ave Maria	AveMaria
34	Tales Of Hoffman	Hoffman
35	La Donne Mobile	DoneMble
36	Serenata	Serenata
37	Bridal March	Bridal
38	Ich Liebe Dich	LieDich
39	Chanson Du Toreador	Toreador
40	Danny Boy	DannyBoy
41	Wiegenlied 2	Wieglied2
42	Spanish Serenade	Serenade
43	Piano Concerto	Concerto
44	Piano Concerto 2	Concrto2
45	Madame Butterfly	Madame
46	Invitation To The Dance	ToDance
47	Wiegenlied 3	Wieglied3
48	My Bonnie	MyBonnie
49	Jingle Bells	JingBell
50	Joy To The World	JoyWorld
51	La Paloma	LaPaloma
52	La Cucaracha	Cucarach

53	La Reine De Saba	Saba
54	Little Brown Jug	BrownJug
55	Battle Hymne Of The Republic	BatlHyme
56	Yellow Rose Of Texas	YellRose
57	The Wabash Cannon Ball	CannBall
58	Turkish March	Turkish
59	Annie Laurie	AnnieLa
60	An Die Musik	Musik
61	Lieder Ohne Worte Op.62 No.6	Lieder
62	Die Forelle	Forelle
63	Red River Valley	RedRiver
64	Symphony No. 94 "Suprise"	No. 94
65	Polonaise	Polonais
66	Rondeau	Rondeau
67	Moments Musicaux	Musicaux
68	Moldau	Moldau
69	Silent Night	SttNight
70	Dreaming Of Home And Mother	Dreaming
71	Summertime	Summer
72	Ring Ring De Banjo	DeBanjo
73	Der Lindenbaum	DerLinde
74	Zigeunerweisen	Zigeuner
75	The Maiden's Prayer	Prayer
76	Fur Elise	FurElise
77	Der Freischutz	DerFreis
78	Maria! Mari!	Maria!
79	Heidenroslein	Heidenro
80	Symphony No.5	Symphony
81	Anitra's Dance	Anitra
82	Sadko-Chanson Indoue	Chanson
83	Orpheus	Orpheus
84	William Tell Overture	Overture
<b>CLASSICAL</b>		
85	Moon Light Sonata	Sonata
86	A Lover'S Concerto	Concerto
87	Air For The G-String	G-String
88	An Der Shonen Blauen Donau	Donau
89	Auf Flugeln Des Gesanges	Gesanges
90	Beautiful Dreamer	Dreamer
91	Dance Des Mirlitons	Mirliton
92	Etude Op. 10 No. 3	Etude3
93	Gavotte	Gavotte
94	Whispering hope	Whisper
95	Hungarian Dances No. 5	Hungaian
96	From The New World	NewWorld
97	Serenata Rimpian	Serenata
98	Triumphal March	Trimphal
99	The Skaters Waltz	Skaters
100	O Sole Mio	OSoleMio
101	Jeanie With The Light Brown Hair	Jeanie
102	Waves Of The Danube	Danube
103	Santa Lucia	SantaLuc
104	Solveig's Song	Solveig
105	Piano Sonatan No. 8 In C Minor (Pathetique)	Patheque

106	Brahms Waltz	BrmsWltz
107	Aida	Aida
108	Carmen-Prelude	Carmen
109	L'Arlesienne	L'Arlesi
110	Ungarische Tanz	Ungaris
111	Mazurka	Mazurka
112	Pizzicato Polka	Polka
113	Menuett	Menuett
114	Rigoletto	Rigoletto
115	Serenade	Serenade
116	Song Without Words	SongNoWd
117	Swan	Swan
118	The Dying Swan	DyingSwn
119	Swan Lake Valse	SwnWalse
120	The Happy Farmer	HpFarmer
121	The Sleeping Beauty	SleepBty
122	La Traviata	LaTravia
123	Wiegenlied	Wiegenli
124	Mov. 2 Adagio Non Troppo Piano Sonata No. 9 In D	Sonata9
125	Piano Sonata No. 11 In A	Sonata11
126	Prelude In C	Prelude
127	Chinese Dance	ChDance
128	Emperor Waltz	Emperor
129	March Militaire	Militair
130	Symphony No. 40	Symphony
<b>PIANO</b>		
131	Hanon Piano Fingering 1	Hanon1
132	Hanon Piano Fingering 2	Hanon2
133	Hanon Piano Fingering 3	Hanon3
134	Hanon Piano Fingering 4	Hanon4
135	Hanon Piano Fingering 5	Hanon5
136	Basic Tutorial Beyer Piano 12	Beyer12
137	Basic Tutorial Beyer Piano 13	Beyer13
138	Basic Tutorial Beyer Piano 14	Beyer14
139	Basic Tutorial Beyer Piano 15	Beyer15
140	Basic Tutorial Beyer Piano 18	Beyer18
141	Cuckoo	Cuckoo
142	Basic Tutorial Beyer Piano 21	Beyer21
143	Basic Tutorial Beyer Piano 29	Beyer29
144	Butterfly	Buterfly
145	Basic Tutorial Beyer Piano 45	Beyer45
146	Christmas Eve	XmasEve
147	Basic Tutorial Beyer Piano 50	Beyer50
148	Basic Tutorial Beyer Piano 52	Beyer52
149	Basic Tutorial Beyer Piano 55	Beyer55
150	Basic Tutorial Beyer Piano 59	Beyer59
151	Beyer Eight Degrees Jump Etude	BeyrJump
152	Basic Tutorial Beyer Piano The Scale Of C Major	BeyerC
153	Basic Tutorial Beyer Piano 65	Beyer65
154	Basic Tutorial Beyer Piano 66	Beyer66
155	Old Folks At Home (Piano)	OldFolk2
156	Basic Tutorial Beyer Piano The Scale Of G Major	BeyerG
157	Basic Tutorial Beyer Piano 70	Beyer70
158	Basic Tutorial Beyer Piano 72	Beyer72
159	Basic Tutorial Beyer Piano 73	Beyer73
160	Basic Tutorial Beyer Piano 74	Beyer74

# Demo List

No.	English Name	LCD Name
1	Ballad	Ballad
2	Funk	Funk
3	Bossa Nova	BosaNova
4	Jazz	Jazz
5	Electric	Electric

# Album List

No.	NAME	LCD DISPLAY
1	Fly me to the moon	FlyMoon
2	Moon river	MoonRivr
3	Unchained melody	Melody
4	Yesterday	Yestday
5	Again	Again
6	Only you	OnlyYou
7	Rock around the clock	Rock
8	Hey jude	HeyJude
9	Are you lonesome tonight?	Lonesome
10	Toccata	Toccata
11	El condor pasa	EiCondor
12	The way we were	TheWay
13	Misty	Misty
14	The girl from ipanema	Ipanema
15	Words	Words
16	13 Jours en france	13France
17	Never on sunday	NeverSun
18	If	If
19	Ebb tide	EbbTide
20	Siboney	Siboney
21	One way ticket to the blues	OWTickts
22	The sound of silence	Silence
23	Massachusetts	Maschuse
24	Sealed with a kiss	Sealed
25	Oh! Carol	Oh!Carol
26	Can't help fallin' in love	InLove
27	In the mood	InMood
28	A lover's concerto	Concerto
29	A whiter shade of pale	WhtShade
30	Greensleeves	Sleeves
31	My darling clementine	Clemtine
32	Petite fleur	Fleur
33	Sail along silv'ry moon	SilyMoon
34	Do re mi	DoReMi
35	Around the world	AroWorld
36	Summertime	Summer
37	Sleepy Lagoon	Lagoon
38	La reine de saba	Saba
39	Speak softly love	SoftLove
40	Love story	LovStory
41	Tombe la neige	LaNeige
42	L'amour est blue	L'amour
43	How deep is your love	DeepLove
44	Superstar	Superstr
45	Yesterday once more	OnceMore
46	Top of the world	TopWorld
47	La playa	LaPlaya
48	The shadow of your smile	UrSmile
49	Lara's theme from "Doctor zhivago"	Zhivago
50	Rhythm of the rain	RhymRain
51	Danny boy	DannyBoy
52	Auld lang syne	LangSyne
53	Five hundred miles	500Miles
54	Jingle bells	JingBell
55	Silent night	SltNight
56	Joy to the world	JoyWorld
57	Happy birthday to you	Birthday
58	Bridal march	Bridal
59	Green grass of home	GreenGrs

60	La mer	LaMer
61	My way	MyWay
62	Blue tango	BluTango
63	Hungarian dances no.5	Hungaian
64	Wedding march	Wedding
65	Air for the G-string	G-String
66	Kaiser walzer	Kaiser
67	An der shonen blauen donau	Donau
68	Triumphal march	Trimphal
69	Gavotte	Gavotte
70	The skaters waltz	Skaters
71	Serenata rimpiant	Serenata
72	The dying swan	DyingSwn
73	Valse des fleurs	Fleurs
74	Dance des mirlitons	Mirliton
75	Traumerei	Traumere
76	Etude op.10 no.3	Etude3
77	Waves of the danube	Danube
78	Wiegenlied	Wieglied
79	Auf flugeln des gesanges	Gesanges
80	New world	NewWorld
81	Chanson du toreador	Toreador
82	Serenade	Serenade
83	Ave maria	AveMaria
84	Wiegenlied 2	Wieglied2
85	March militaire	Militair
86	Red river valley	RedRiver
87	Annie laurie	AnnieLa
88	Carry me back to old virginny	Virginny
89	Beautiful dreamer	Dreamer
90	La paloma	LaPaloma
91	Home sweet home	SwetHome
92	Long long ago	LongAgo
93	Santa lucia	SantaLuc
94	Old folks at home	OldFolks
95	Oh! Susanna	Susanna
96	Sweet and gentle	SwetGtle
97	Mambo No. 5	MamboNo5
98	Always in my heart	MyHeart
99	Brazil	Brazil
100	Mambo No. 8	MamboNo8
101	Tico-tico	TicoTico
102	Miami beach rumba	MamiRmba
103	Tennessee waltz	Tennesse
104	Beyond the reef	BeyndRef
105	You are my sunshine	Sunshine
106	Una lacrima sul viso	Lacrima
107	The river of no return	NoReturn
108	The end of the world	EndWorld
109	Last waltz	LastWltz
110	Tie a yellow ribbon'round the ole oak tree	YeRibbon
111	Sailing	Sailing
112	Hymne a l'amour	L'amour
113	O sole mio	OSoleMio
114	Arirang	Arirang
115	The house of the rising sun	RiseSun
116	Over the rainbow	Rainbow
117	Menuet	Menuet
118	Fruhlingsstimmen	Fruhling
119	Songs of spring	SngSprig
120	Frohlicher landmann	Landmann

# Chord List

Chord Name (Abbreviation)	Normal Voicing	Chord	Display
Major [M]	1-3-5	C	C
Major sixth [6]	1-(3)-5-6	C6	C6
Major seventh [M7]	1-3-(5)-7	CM7	CM7
Major seventh sharp eleventh [M7#11]	1-(2)-3-#4-(5)-7	CM7#11	CM7#11
Major add ninth [Madd9]	1-2-3-5	Cmadd9	CM(9)
Major ninth [M9]	1-2-3-(5)-7	CM9	CM7(9)
Major sixth add ninth [6 9]	1-2-3-(5)-6	C6 9	C6(9)
Augmented [aug]	1-3-#5	Caug	Caug
Minor [m]	1-b3-5	Cm	Cm
Minor sixth [m6]	1-b3-5-6	Cm6	Cm6
Minor seventh [m7]	1-b3-(5)-b7	Cm7	Cm7
Minor seventh flatted fifth [m7b5]	1-b3-b5-b7	Cm7b5	Cm7b5
Minor add ninth [madd9]	1-2-b3-5	Cmadd9	Cm(9)
Minor ninth [m9]	1-2-b3-(5)-b7	Cm9	Cm7(9)
Minor eleventh [m11]	1-(2)-b3-4-5-(b7)	Cm11	Cm7(11)
Minor major ninth [mM7]	1-b3-(5)-7	CmM7	CmM7
Minor major ninth [mM9]	1-2-b3-(5)-7	CmM9	CmM7(9)
Diminished [dim]	1-b3-b5	Cdim	Cdim
Diminished seventh [dim7]	1-b3-b5-6	Cdim7	Cdim7
Seventh [7]	1-3-(5)-b7	C7	C7
Seventh suspended fourth [7sus4]	1-4-5-b7	C7sus4	C7sus4
Seventh flatted fifth [7b5]	1-3-b5-b7	C7b5	C7b5
Seventh ninth [7 9]	1-2-3-(5)-b7	C7 9	C7(9)
Seventh sharp evelenth [7#11]	1-2-3-#4-(5)-b7 or 1-(2)-3-#4-5-b7	C7#11	C7(#11)
Seventh thirteenth [7 13]	1- 3-(5)-6-b7 or 2- 3-5-6-b7	C7 13	C7(13)
Seventh flatted ninth [7b9]	1-b2-3-(5)-b7	C7b9	C7(b9)
Seventh flatted thirteenth [7b13]	1-3-5-b6-b7	C7b13	C7(b13)
Seventh sharp ninth [7#9]	(1)-#2-3-(5)-b7	C7#9	C7(#9)
Major seventh augmented [M7aug]	1-3-#5-7	CM7aug	CM7aug
Seventh augmented [7aug]	(1)-3-#5-b7	C7aug	C7aug
Suspended fourth [sus4]	1-4-5	Csus4	Csus4
One plus two plus five [1+2+5]	1-2-5	C1+2+5	C

# MIDI Implementation Chart

Function		Transmitted	Recognized	Remarks
Basic Channel	Default	1ch	1-16ch	
	Changed	1-16ch	1-16ch	
Mode	Default	×	3	
	Messages	×	×	
	Altered	*****	×	
Note Number	Note	0—127	0—127	
	:True voice	*****	0—127	
Velocity	Note on	○ 9nH,V=1-127	○ 9nH,V=1-127	
	Note off	× (9nH,V=0)	○(9nH,V=0; 8nH,V=0-127)	
After Touch	key's	×	×	
	Ch's	×	×	
Pitch Bend		×	○	
Control Change	0	○	○	Bank Select
	1	○	○	Modulation
	5	×	○	Portamento Time
	6	○	○	Data Entry
	7	○	○	Volume
	10	×	○	Pan
	11	×	○	Expression
	64	○	○	Sustain Pedal
	65	×	○	Portamento ON/OFF
	66	○	○	Sostenuto Pedal
	67	○	○	Soft Pedal
	80	×	○	Reverb Program
	81	×	○	Chorus Program
	91	○	○	Reverb Level
	93	○	○	Chorus Level
	120	○	○	All Sound Off
121	×	×	Reset All Controllers	
123	○	○	All Notes Off	
Program Change	:true	○ *****	○ 0—127	
System Exclusive		×	○	
System Common	:SongPosition	×	×	
	:Song Select	×	×	
	:Tune	×	×	
System Real Time	:Clock	○	×	
	:Commands	×*1	×	
Aux Messages	:LOCAL ON/OFF	×	×	
	:Active sense	×	○	
	:Reset	×	×	
Notes: *1 When the accompaniment is started, an FAH message is transmitted. When accompaniment is stopped, an FCH message is transmitted.				

- Mode 1: OMNI ON, POLY
- Mode 2: OMNI ON MONO

- Mode 3: OMNI OFF, POLY
- Mode 4: OMNI OFF, MONO

- ×: NO
- : YES

