



Level the mount and mark.

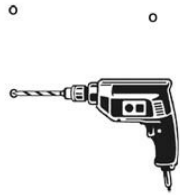


Drill the mounting holes.

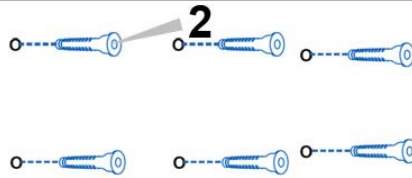


Insert the wall anchors\* to the wall and tap them flush with a hammer.

\* Never use wall anchors on drywall

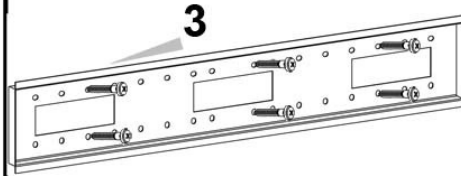


Fix the plate to the wall.


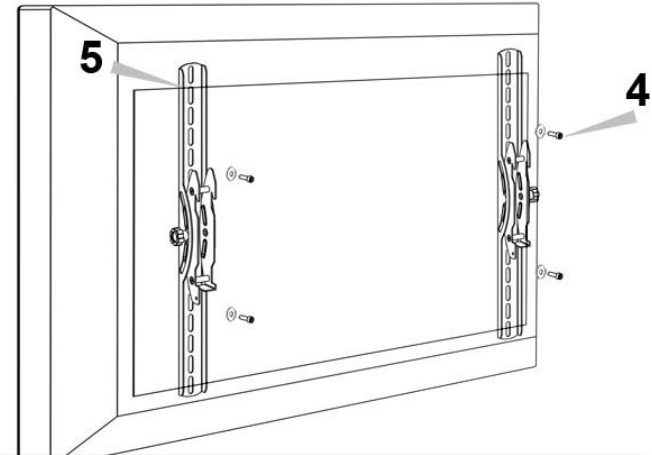


Attach the mounting rails to screen.



- Ensure that each rail mounting slot is facing down.
- Use the selected screws and washers to mount the rail to screen.

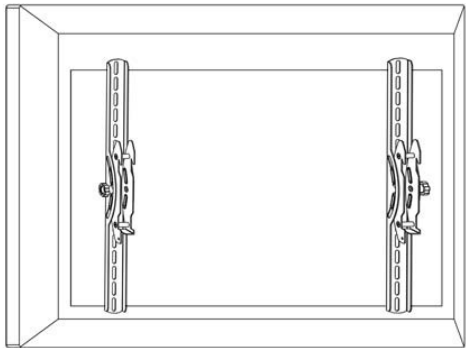

Tightly secure the mounting screws.

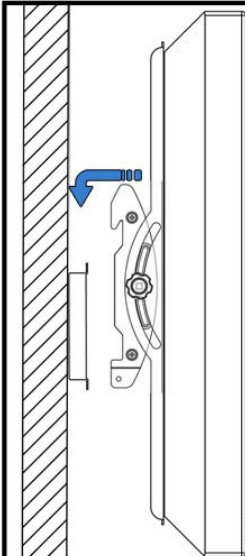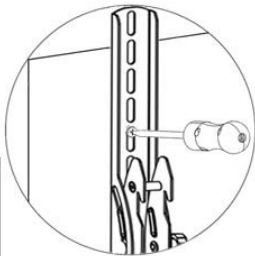


Mount screen to the wall.

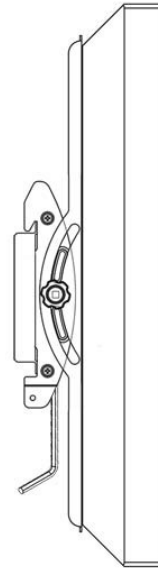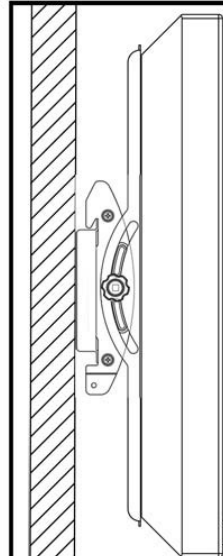

SAFETY LOCK

6

TILT

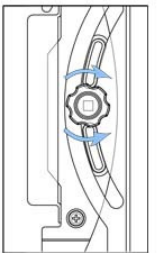


Tightly secure the safety lock using the allen key.



x1



 x2



x1



x6



x6



x4



x4



x4



x4



x4



x4

**SONOROUS**  
SOUND AND VISION IN STYLE