




Level the mount and mark.

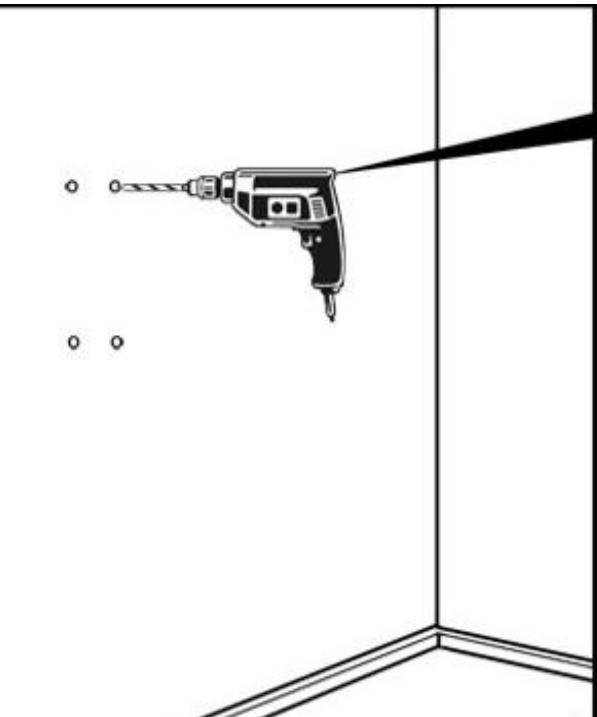


Drill the mounting holes.

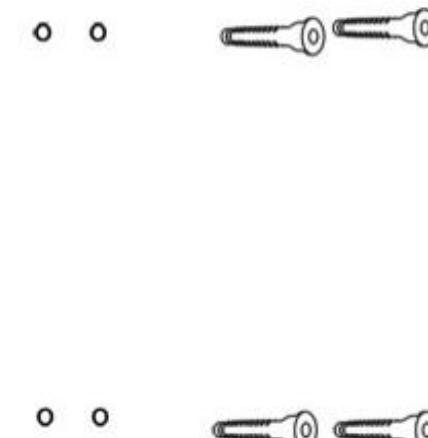


Insert the wall anchors\* to the wall and tap them flush with a hammer.  
\*Never use wall anchors on drywall

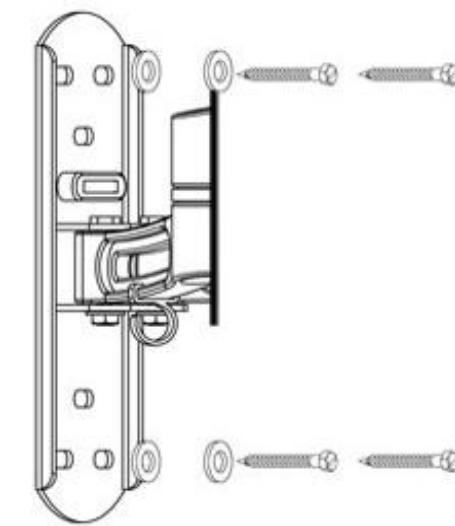


Fix the plate to the wall.

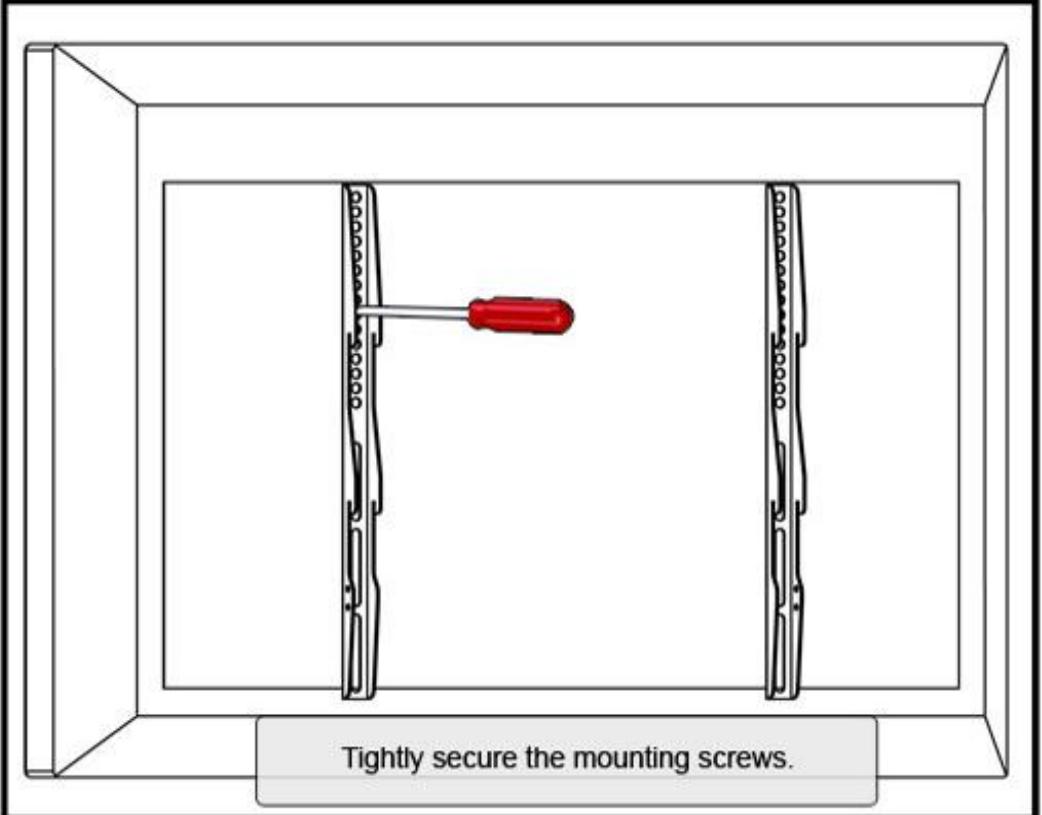

Tightly secure the mounting screws.

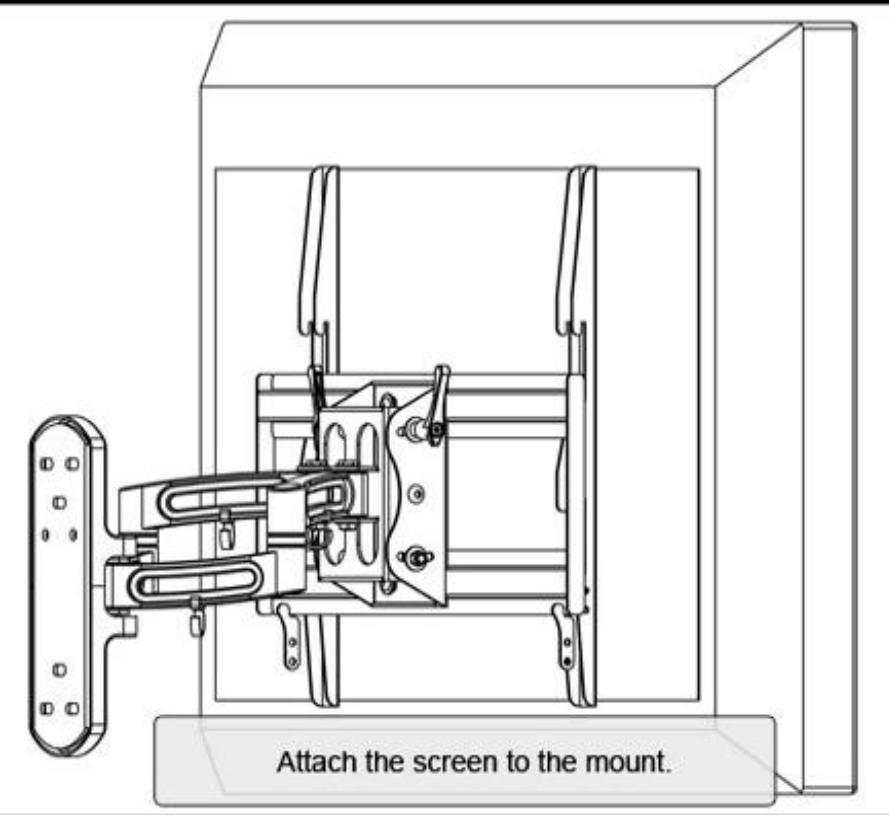


Attach the screen to the mount.

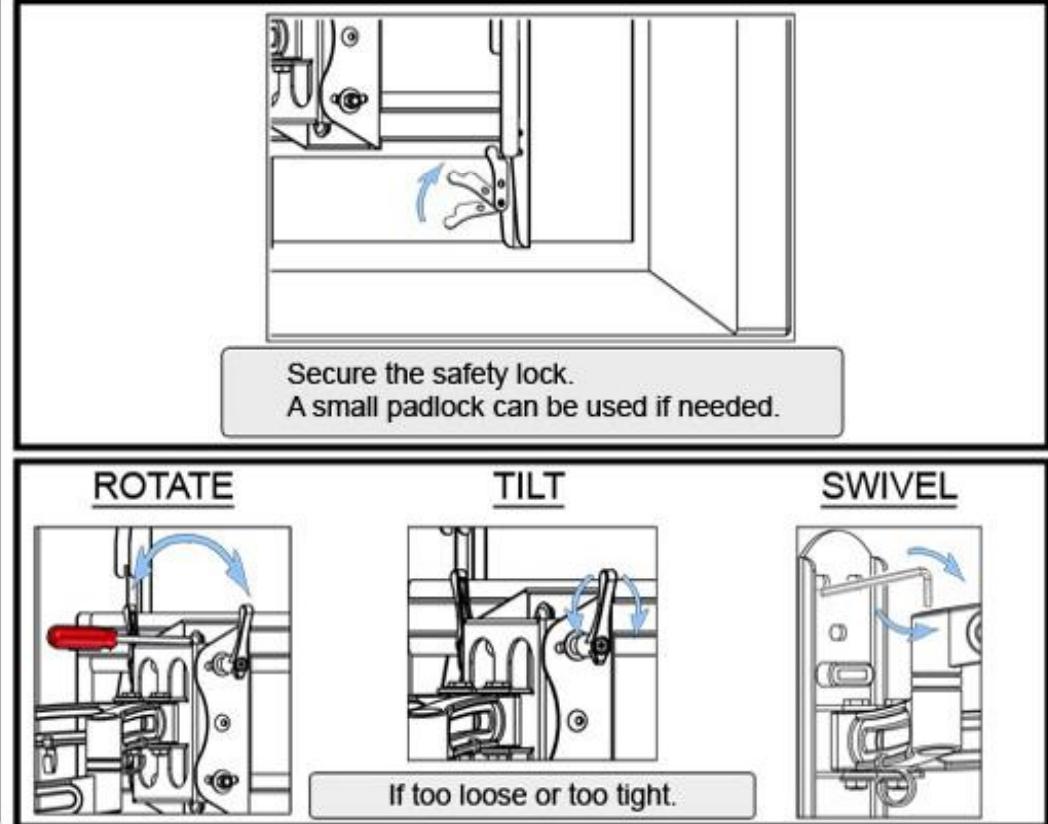

Secure the safety lock.  
A small padlock can be used if needed.



ROTATE

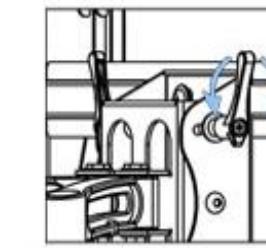


TIKT



SWIVEL

If too loose or too tight.

## HARDWARE KIT

 

M8

x4

M6



x4

M5

 


x4

M4



x4



M8

x4

M6

 
x4

M5

x4

M4

x4



**SONOROUS®**  
SOUND AND VISION IN STYLE