




Level the mount and mark.

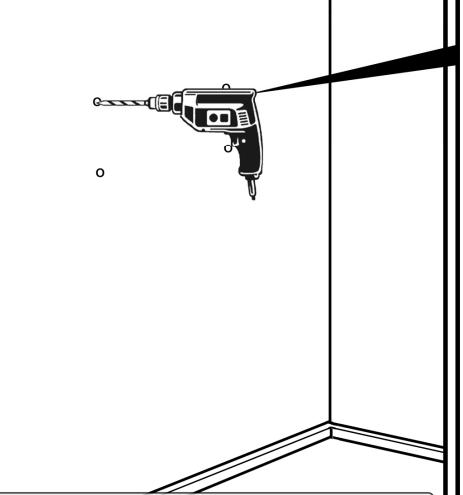


Drill the mounting holes.

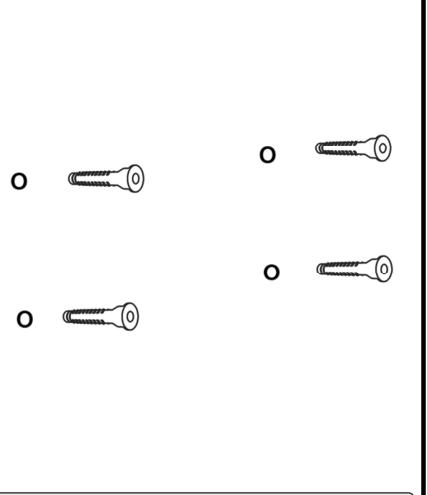


Insert the wall anchors* to the wall and tap them flush with a hammer.
* Never use wall anchors on drywall

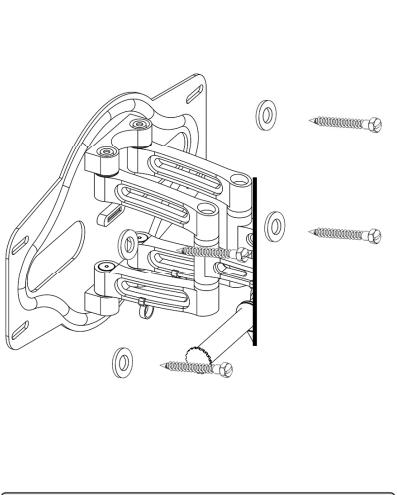


Fix the plate to the wall.

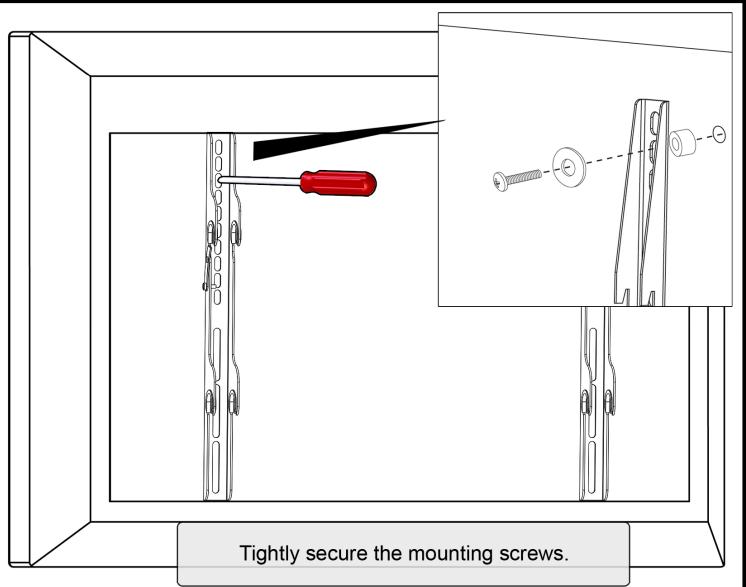


Tightly secure the mounting screws.

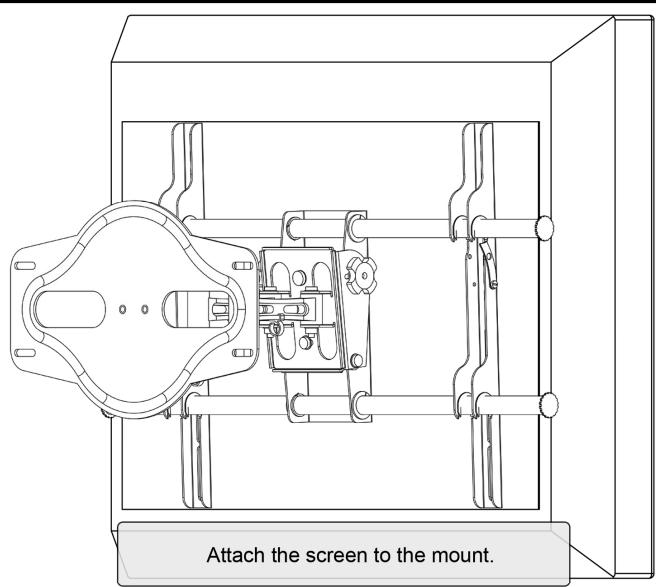

Attach the screen to the mount.

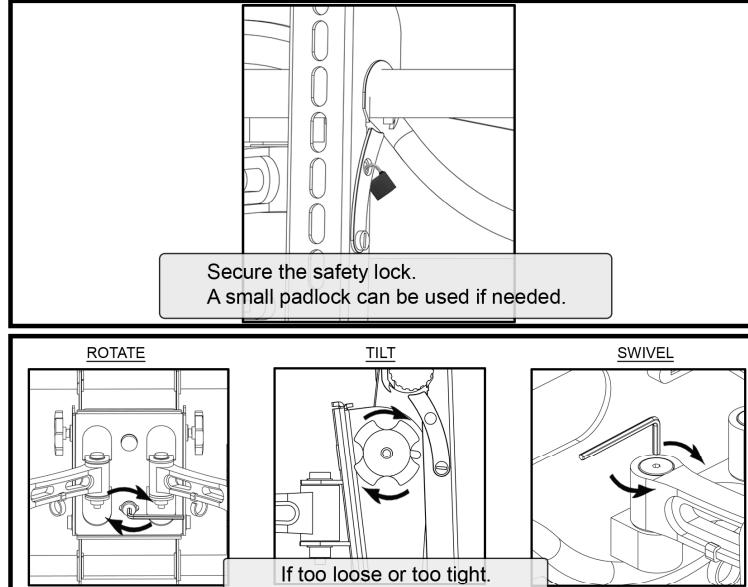

Secure the safety lock.
A small padlock can be used if needed.

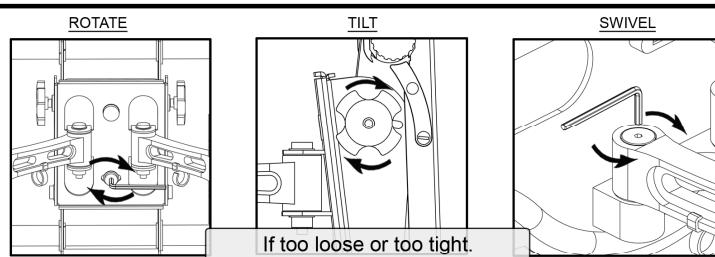

If too loose or too tight.

HARDWARE KIT




x4




x1



x4

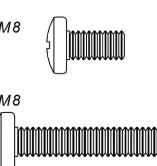

x4

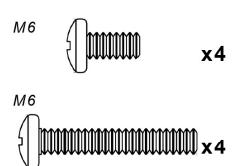

x4



x4



x4



x8



x4



x4

 **SONOROUS®**
SOUND AND VISION IN STYLE