

# Sinfoni

For Music Lovers

***AMPLitude 45.2x***



**MADE IN ITALY**

Owner's Manual

# Preface

First of all, we would like to congratulate with you for your choice of our Sinfoni AMPLItude amplifier.

If you are reading this short introduction instead of madly flick across the pages of this handbook looking for features like the weighted noise or the T.I.M., then maybe we have hit the target to unveil a little bit of the philosophy of our laboratories.

In fact, you will not find these figures among the characteristics of our products mainly because it is our firm conviction that it is impossible to value such a product only on the basis of plain numbers.

It would be like guessing the taste of a dish reading just the list of its ingredients.

Only after a suitable "tasting" you will realise the striking sound properties of our products, and you will appreciate their transparency, their musicality, their depth and all other aspects that probably, as a Sinfoni purchaser, you already know.

Try to describe it with cold technical parameters, if you can!

In order to get the utmost from our products, we recommend you to use only high-quality components and cables: with a few adjustment every Sinfoni amplifier will give you unexpected emotions and sensations.

We kindly ask you to follow the indications mentioned in this handbook, and we wish you to enjoy Music at best.


# Installation Procedure

## POWER SUPPLY

The Sinfoni car amplifiers are designed to work with a 12 volts DC power supply, however they allow +/- 3 V voltage excursions.

Power Supply cables must be of a suitable gauge, keeping in mind that the negative one must be connected to the ground in the nearest point of the car chassis, while the positive one must come directly from the battery. If the distance from the battery to the apparatus is quite long, then it will be necessary to use thicker cables, in order to avoid any performance loss: we suggest your installer to use at least 6 mm<sup>2</sup> good quality OFC cables.

The REM input ( remote ) must be connected to the remote output of the source, which must provide at least a 60 mA current, for every installed Sinfoni unit.

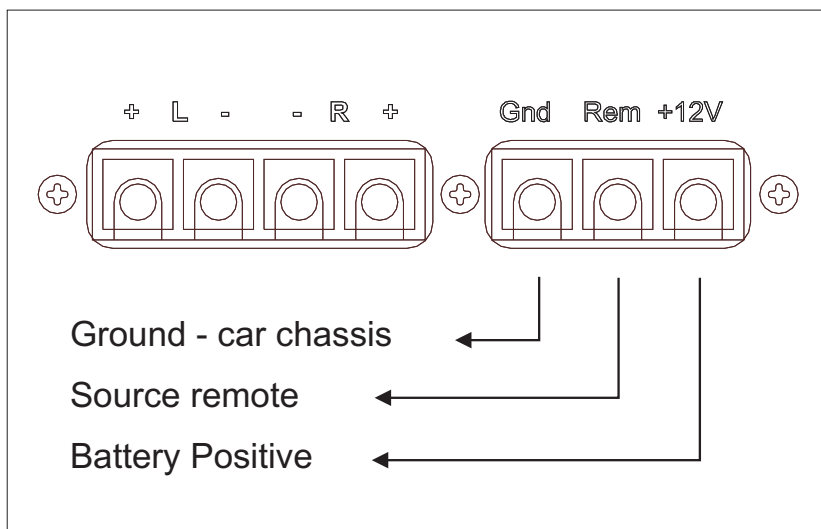


# CONNECTING LOUDSPEAKERS


The standard load impedance fitting to the amplitude series is 4 Ohm, but these amplifiers are fearless of a lower impedance like the one that can be easily found in a car ( three way systems or highly reactive loudspeakers ).

Connecting a 2 Ohm load is not a problem, in fact, as it is possible to use a simultaneous stereo-mono configuration, then it is still possible to connect a 4 Ohm Sub Woofer to a 4 Ohm system to the bridged output. This would decrease the overall load to about 1,3 Ohms per channel. In such a case, a suitable ventilation must be provided, as well as an adequate power supply cable, due to the strong impulsive current, ranging between 20 and 40 A.


The following images clearly show the possible connections.

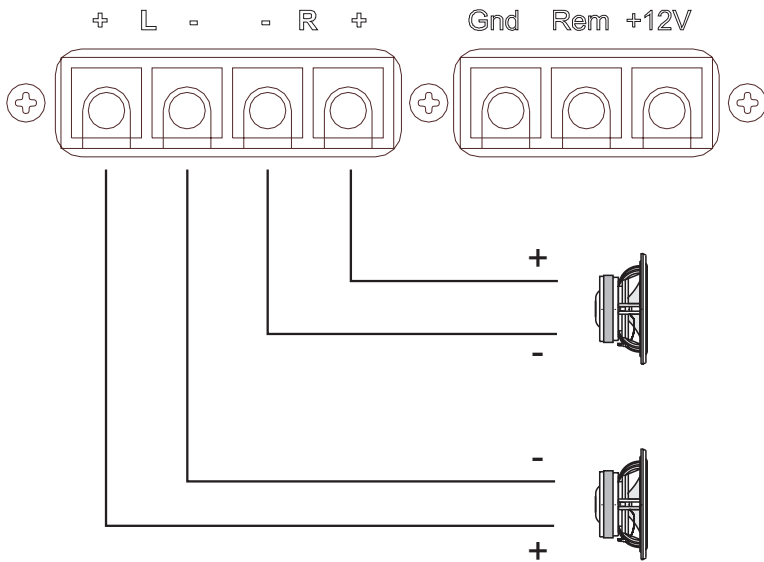

**STEREO Connection**

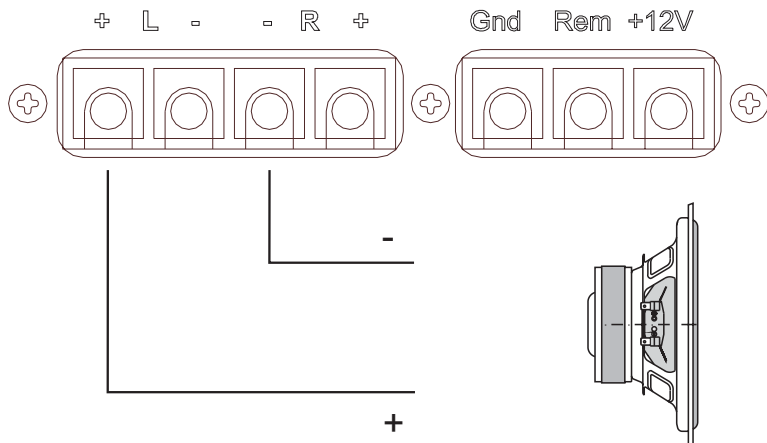

## MONO Connection

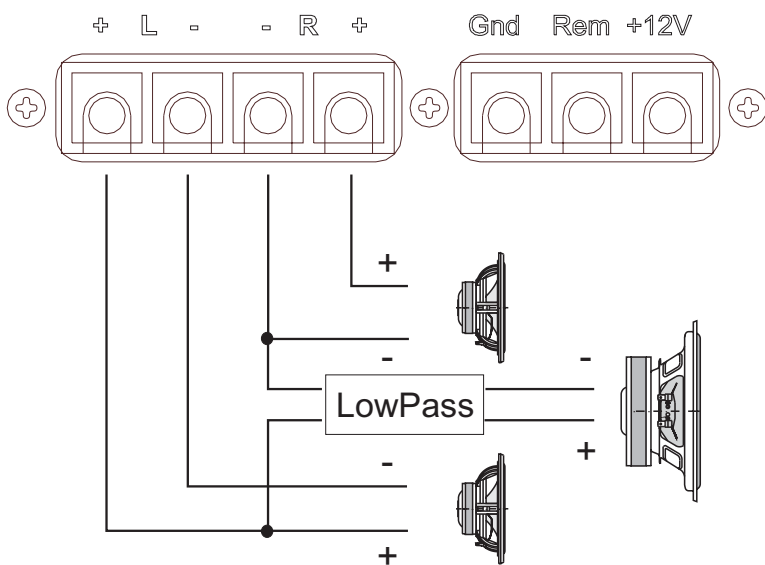

## Simultaneous STEREO-MONO Connection

## INPUTS

The input load is 48 Kohms, and its sensitivity is adjustable from 400 mV peak - peak (150 mV RMS) to 8 V peak - peak (2.8 V RMS), therefore it perfectly matches any source, including those that provide a 4 V pre out (1.4 V RMS). The regulation is achieved rotating the input R & L potentiometers with a common screwdriver.

The amplifier can be used in the BRIDGED MONO configuration just using a Y cable to reach the two inputs and properly connect the loudspeakers.

In order to make the installation of a multi-amplified system easier, the amplifier has a built-in active CROSS-OVER witch is adjustable as low pass or high pass and can be simply bypassed by means of two pushbuttons. Two potentiometers provide cut off frequencies regulation.

## LIGHTS and PROTECTIONS

The green LED nearby the power connector shows the presence of Remote signal.

The thermal protection prevents the amplifier from exceeding 73°C, in case of over-heating normal operations may continue only after a temperature decrease of 10°C.

Internally, just behind the LEDs, you can find a fuse ( 20A ) that you can easily reach disassembling just the amplifier's side. In any case, its break is to be considered as an unlikely event, due only to a serious failure, possibly caused by an improper use of the amplifier.

# Specifications

Power Supply	9-15 VCC
Stand-by Current	< 1,2 A
Input Sensitivity	0,4 - 8 V
Input Impedance	48 KOhm
Output Power:	
4 ohms @ 12V/14,4	50/72 watts x 2
2 ohms @ 14,4V	121 watts x 2
mono 4 ohms @ 14,4V	242 watts x 1
Frequency Response	+/- 1 dB from 10 Hz to 30KHz.
S./Noise Ratio	> 90 dB
Dimensions	226mm x 187mm x 40mm
Weight	2,7 Kg

Built in Active Cross-Over

Continuously adjustable from 30Hz to 250Hz  
Adaptable as low-pass / high-pass  
24dB / 12dB x octave mono / stereo



Produced by:

Audio Technology  
Tel. +39.0733.240231  
e-mail [info@sinfoni.com](mailto:info@sinfoni.com)  
[www.sinfoni.com](http://www.sinfoni.com)