

Title: GEAR4 PG476 HouseParty SmartDock

Date: 21 Dec 2011
Version: V1.1Russian
Artwork Owner:
design3@gear4.com

Finished Dimensions:

Height: 124mm
Width: 124mm


gear4



PRODUCT NO: PG476

POWER ADAPTER: ADS-24RD-12 1224G

INPUT: 100-240V~50/60Hz, 0.7A max

OUTPUT: 12V==2.0A 

Speech Debelle
© 2009 Big Dada Recordings.
© 2009 Big Dada Recordings.
For more information visit www.speechdebelle.com

V1.1RU

CE FC RoHS  

HouseParty™ SmartDock™

User Manual

Руководство пользователя

Thank you for buying the HouseParty SmartDock,
Smart home stereo speaker for iPod and iPhone.
Please read over this manual before use and retain
it for future reference.

Благодарим за покупку Интеллектуальной
домашней стереосистемы HouseParty SmartDock
для iPod и iPhone. Пожалуйста, прочтите это
руководство перед началом эксплуатации и
сохраните его.

open 

Return Policy / Warranty Service

Warranty claims will only be valid when accompanied with proof of purchase to evidence that the product was purchased from an authorised dealer and that the claim is within allowed period. To make a warranty claim you must first contact Disruptive Limited by email to **support@gear4.com** stating your name, full postal address, telephone number, date and place of purchase and a detailed description of the problem you are experiencing and don't forget to include the name of the product and its serial number.

If the defect is covered by this warranty then you will be provided with a Return to Manufacturer Authorisation number and instructions for return shipment. Sending the product back to us under this warranty shall be at your expense, and the return **MUST** be accompanied by the original proof of purchase whilst we highly recommend that you retain a copy of this. Disruptive Limited shall not be responsible for lost or damaged products during shipment. Any product returned without the original proof of purchase will be returned without being examined or tested and such return shall be at the customer's expense.

To avoid any additional charges, all returns and exchanges must include the original packing materials, product box, all included accessories which may include, but not necessarily be limited to, power adapters or power cords, connecting cables, remote controls, adapters, insert cards and instruction manuals. The absence of any of the aforementioned items may mean that you incur a charge for their replacement. Disruptive Limited shall not be liable for any inconvenience, loss of time or loss of use of the product.



2



6



HouseParty SmartDock Please read before use.

Product features:

- FM radio
- Charges iPod / iPhone
- Line-in port for use with other music players
- 6 EQ settings
- **SmartDock** compatible

SMART FEATURES:

Make your speaker do more with **SmartDock**, a free download from the App Store:

- View FM station names and track info*
- Turn your speaker into an alarm clock
- Built-in music player

* Where RDS broadcast is available.

N.B. **Smart** features require GEAR4 **SmartDock** app for iPhone 3GS, iPhone 3G or iPod touch (2nd, and 3rd generation) with iOS 3.1.3, iOS 4.0 or higher. Available FREE on the App Store.

Getting started:

- Plug the power cable into the back of the unit and then into the mains supply.
- Press the POWER button on the speaker or the remote control.

For use with iPod / iPhone:

- Select and insert the correct docking adapter to suit your iPod / iPhone.

N.B. Please ensure that you use the correct dock adapter for your iPod / iPhone to avoid damage to the dock connector. If the specific adapter is not included, please use the adapter that was provided by Apple with your iPod / iPhone. GEAR4 will not be responsible for any damage resulting in not using a dock adapter.

- Carefully insert your iPod / iPhone into the dock, it will start charging upon connection and automatically select iPod mode.
- When connecting your iPhone or iPod touch to HouseParty **SmartDock** for the first time, your device will display a notification that the accessory requires an application that is not installed. Tap OK to go to the App Store, download page and tap the Install button. The **SmartDock** application is free of charge.
- Use the remote control to navigate the iPod / iPhone menus.

For use as an FM radio:

- Press MODE on the remote control or the M button on the speaker to select FM mode.

- Press and hold the **⏮** or **⏭** button for 1 second on the remote or the speaker to autoscan to the next clearest frequency.
- Press the **⏮** or **⏭** button to manually scan through frequencies.

For use with other music players:

- Press **MODE** on the remote control or the **M** button on the speaker to select **AUX** mode.
 - Plug one end of the 3.5mm audio cable (not included) into your MP3 or MP4 player and connect the other end into the **AUX** line-in port at the back of the speaker.
 - Use your device to control the music.
- N.B. The remote will not control devices connected via 3.5mm cable.

EQ settings:

- Press **EQ** on the remote control or the speaker to scroll through the equaliser settings – **ROCK**, **POP**, **BASS**, **CLASSICAL**, **JAZZ**, **ACOUSTICAL**, **CUSTOM EQ**, **OFF**.
- The default EQ mode is **OFF**. The speaker will revert to this when powered on and off.
- The speaker will use the last used EQ setting when switched on from standby.

To display the time:

- The HouseParty **SmartDock** can automatically update its time settings when you dock your iPod / iPhone.
- To display the time while the speaker is in standby, press the **CLOCK** button on the remote or the **⏰** button on the speaker while in standby. The clock will now always display when the speaker enters standby. Press again to turn the clock off.
- To check the time when the speaker is on, press the clock button on the remote.

Register your HouseParty SmartDock to activate your warranty and receive product updates at www.gear4.com/register

Please ensure that your iPod / iPhone is using the latest software version. To update the software, connect your iPod / iPhone to iTunes. If there is a newer software version available you will be prompted to upgrade.

Copyright © 2011 Disruptive Limited. All rights reserved. Reproduction in part or in whole is prohibited. GEAR4, SmartDock and HouseParty are trade marks of Disruptive Limited. iPhone, iPod, iPod nano, iPod classic and iPod touch are trade marks of Apple Inc., registered in the U.S. and other countries.

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION

Use of controls or adjustments of performance or procedures other than those specified may result in hazardous radiation exposure.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store your unit. To avoid damage, never place the unit or its batteries near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power cables, pull the plugs first. Do not pull the cords by themselves.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.

- Refer servicing to qualified personnel only.
- Do not open the housing.
- Do not twist or pinch the power supply cords. If the plugs or power supply cords need to be replaced, ensure that they comply with the manufacturer’s recommendation.
- Unplug the unit during lightning storms and when unused for extended periods of time.

DISPOSAL


According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system. Please act according to your local rules and do not dispose of your old products with your normal household waste.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated ‘Dangerous Voltage’ within the product’s enclosure that may be of sufficient magnitude to constitute risk of electric shock to person.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

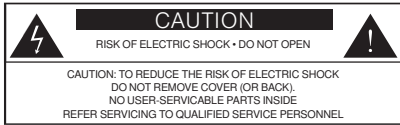

FCC RULES

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) This device may not cause interference and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.



HouseParty SmartDock Прочтите перед использованием.

Элементы управления HouseParty SmartDock:

- ❶ РЕЖИМ
- ❷ ПИТАНИЕ
- ❸ ЭКВАЛАЙЗЕР
- ❹ ВЕРНУТЬСЯ НАЗАД
- ❺ ПЕРЕЙТИ ВПЕРЕД
- ❻ ВОСПРОИЗВЕДЕНИЕ / ПАУЗА
- ❼ ГРОМКОСТЬ +
- ❽ ГРОМКОСТЬ -
- ❾ ГНЕЗДО ПОСТОЯННОГО ТОКА (DC INPUT)
- ❿ ЛИНЕЙНЫЙ ВХОД (AUX IN)
- ⓫ FM-АНТЕННА

Характеристики продукта:

- FM-радио
- Зарядка iPod / iPhone
- Линейный вход для подключения других музыкальных плееров
- 6-режимный эквалайзер
- Совместим со SmartDock

Интеллектуальные функции:

Ваша аудиосистема предоставит Вам больше возможностей со SmartDock — бесплатным приложением с App Store:

- Просмотр названий FM-станций и песен*
- Использование аудиосистемы в качестве будильника
- Встроенный музыкальный плеер

Внимание: “Интеллектуальные” функции требуют установки приложения GEAR4 SmartDock для iPhone 3GS, iPhone 3G или iPod touch (2-го и 3-го поколения) с iOS 3.1.3, iOS 4.0 или выше. Скачивание с App Store — БЕСПЛАТНО.

*при условии трансляции сигнала RDS

Начало работы:

- Подключите сетевой кабель к разъему на задней панели устройства, затем воткните его в розетку.
- Нажмите кнопку POWER на аудиосистеме или на пульте дистанционного управления.

Использование с iPod / iPhone:

- Выберите и вставьте правильный док-адаптер, подходящий к Вашему iPod / iPhone.

Внимание! Во избежание повреждения док-коннектора следует использовать док-адаптеры, подходящие к Вашему iPod / iPhone. Если в поставку не входит специальный адаптер, используйте адаптер, предоставленный компанией Apple вместе с iPod / iPhone. GEAR4 не несёт ответственности за какие-либо повреждения, явившиеся следствием неиспользования соответствующего док-адаптера.

- Аккуратно вставьте iPod / iPhone в док, после чего устройство автоматически начнет iPod / iPhone и перейдет в режим iPod.
- При первом подсоединении iPhone или iPod touch к HouseParty SmartDock на Вашем устройстве появится уведомление о том, что требуется наличие приложения, которое не установлено. Нажмите OK, чтобы перейти в App Store на страницу загрузки, и нажмите кнопку "Установить" ("Install"). Приложение SmartDock загружается бесплатно.
- Навигация по меню iPod / iPhone осуществляется с помощью пульта дистанционного управления.

Использование в качестве FM-радио:

- Для переключения в режим FM-радио нажмите кнопку MODE на пульте дистанционного управления или кнопку M на аудиосистеме.
- Нажмите и удерживайте на пульте дистанционного управления или на аудиосистеме кнопку **◀▶** или **▶▶** в течение одной секунды, чтобы провести сканирование и перейти к следующей станции с хорошим сигналом приёма.
- Нажмите кнопку **◀◀** или **▶▶** чтобы вручную просканировать частоты.

Использование с другими музыкальными плеерами:

- Для переключения в режим AUX нажмите кнопку MODE на пульте дистанционного управления или кнопку M на аудиосистеме.
- Подсоедините 3.5мм аудио-кабель (не входит в комплект поставки) к MP3- или MP4-плееру, а другой конец подключите к AUX-входу на задней панели устройства.
- Управление воспроизведением музыки осуществляется с помощью устройства.

Внимание: Устройствами, подключёнными через 3,5мм-кабель невозможно управлять с помощью пульта дистанционного управления.

Настройки эквалайзера:

- Нажимая EQ на дистанционном управлении или на аудиосистеме, выберите режим эквалайзера – ROCK (рок), POP (поп), BASS (бас), CLASSIC (классика), JAZZ (джаз), ACOUSTICAL (акустика), CUSTOM EQ (пользовательские установки), OFF (выкл.)
- По умолчанию, эквалайзер установлен в режим OFF. Аудиосистема будет возвращаться в этот режим при каждом выключении и включении.
- При включении с режима ожидания аудиосистема будет возвращаться к последнему установленному режиму эквалайзера.

Отображение времени:

- HouseParty SmartDock может автоматически обновлять установки времени при подключении iPod / iPhone к доку.
- Чтобы включить часы, когда аудиосистема находится в режиме ожидания, нажмите кнопку CLOCK на пульте дистанционного

управления или кнопку ►► на аудиосистеме (в режиме ожидания). Теперь при переходе аудиосистемы в режим ожидания на дисплее будут всегда отображаться часы. Для отключения часов — нажмите ещё раз.

- Чтобы посмотреть время при включенной аудиосистеме, нажмите кнопку clock на пульте дистанционного управления.

Для активации гарантии и получения обновлений зарегистрируйте Ваш HouseParty SmartDock на сайте www.gear4.com/register

Удостоверьтесь, что в Вашем iPod / iPhone используется самая последняя версия программного обеспечения. Чтобы обновить программное обеспечение, подключите свой iPod / iPhone к iTunes. Если будет доступна более новая версия программного обеспечения, Вам напомнят об обновлении.

Copyright © 2011 Disruptive Limited. Все права защищены. Полная или частичная перепечатка запрещена. GEAR4, SmartDock и HouseParty являются торговыми марками компании Disruptive Limited. iPhone, iPod, iPod nano, iPod classic и iPod touch являются торговыми марками компании Apple Inc., зарегистрированными в США и других странах.

"Изготовлено для iPod" и "Изготовлено для iPhone" означает, что для подключения, в частности, к iPod или iPhone соответственно и соответствия рабочим показателям компаний Apple было разработано, а разработчиком сертифицировано электронное вспомогательное устройство.

Apple не несет ответственности за функционирование данного устройства или его соответствие стандартам безопасности и регулятивным нормам.

ВНИМАНИЕ!

Во избежание возгорания или поражения электрическим током, не допускайте попадание данного устройства под дождь или в условия высокой влажности.

ПРЕДУПРЕЖДЕНИЕ

Чтобы уменьшить риск возникновения пожара или поражения электрическим током, не подвергайте данное устройство воздействию дождя или влаги.

ПРЕДОСТОРОЖНОСТЬ

Использование кнопок управления или регулировки режимов или процедур, отличных от указанных, может привести к опасному радиационному излучению.

РАСПАКОВКА И УСТАНОВКА

Осторожно распакуйте устройство. Рекомендуем сохранить упаковку в случае, если она когда-нибудь понадобится для его хранения. Чтобы избежать повреждения, не размещайте устройство или батареи для него рядом с радиаторами, перед нагревательными приборами, под прямыми солнечными лучами или вблизи воды.

В ЦЕЛЯХ БЕЗОПАСНОСТИ

- При отключении питания в первую очередь выдерните штепсельную вилку. Не тяните за шнур.

- Никогда не беритесь за вилку мокрыми руками, так как это может привести к пожару или поражению электрическим током.
- Ремонтные работы должны выполняться только квалифицированным персоналом.
- Не открывайте корпус.
- Не крутите и не сжимайте шнур питания. Если следует заменить вилку или шнур питания, убедитесь, что они соответствуют рекомендации производителя.
- Отключайте устройство во время грозы и в случае, если оно не используется в течение длительного периода времени.
- Если в качестве устройства отключения используется сетевой или приборный штепсель, устройство отключения должно оставаться в абсолютно рабочем состоянии.

УТИЛИЗАЦИЯ


В соответствии с европейской директивой 2002/96/ЕС все электрическое и электронное оборудование должно собираться отдельно местной системой сбора отходов. Соблюдайте местные правила и не выбрасывайте старые изделия вместе с бытовыми отходами.



Символ вспышки молнии со стрелкой, заключенный в равносторонний треугольник, предназначен для предупреждения пользователя о наличии неизолированного "опасного напряжения" внутри корпуса изделия, которое может достигать значительных, достаточных, чтобы создать риск поражения электрическим током.



Восклицательный знак внутри равностороннего треугольника предназначен для предупреждения пользователя о наличии важной информации об эксплуатации (техническом обслуживании) устройства и уходе за ним, входящей в комплект поставки.

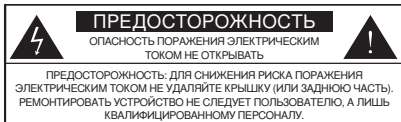

ПРАВИЛА ФКС

Вы должны учесть, что изменения и модификации, не одобренные стороной, ответственной за соответствие, могут лишить пользователя права на эксплуатацию оборудования. Данное оборудование было проверено и признано соответствующим ограничениям для цифровых устройств класса В в соответствии с частью 15 Правил ФКС.

Эти ограничения предназначены для обеспечения разумной защиты от вредных помех в жилых помещениях. Данное оборудование генерирует, использует и может излучать радиочастотную энергию, и, если оно не установлено и не используется в соответствии с инструкциями, оно может вызывать вредные помехи для радиосвязи.

Однако нет никакой гарантии, что помехи не возникнут при определенной установке. Если данное оборудование вызывает помехи для радио или телевизионного приема, что может быть определено путем включения и

выключения устройства, пользователь может попытаться устранить помехи одной или несколькими из следующих мер:

- Переориентировать или переместить приемную антенну.
- Увеличить расстояние между оборудованием и приемником.
- Подключить устройство к розетке сети, отличной от той, к которой подключен приемник.
- Проконсультироваться с дилером или опытным радио/ТВ техником.

Функционирование устройства отвечает следующим двум условиям:

- 1) Это устройство не может вызывать помехи, и
- 2) Это устройство должно принимать любые помехи, включая те, которые могут вызывать сбои в работе.

GEAR4 One-Year Warranty

Disruptive Limited, who owns the GEAR4 brand, warrants this product to be free from defects in workmanship and materials at the point of sale and that when this product is used in accordance with the instructions for its use it shall continue to be free from defects, for a period of one (1) year from the date of original purchase.

Any damage or defects caused by a failure to follow the instructions which relate to this product or as the result of an accident, abuse, misuse, misapplication, product modification, faulty ancillary equipment, improper voltage or current, lightning or other acts of God, commercial non-home use, normal wear and tear, shipping damage or loss, damage to digital media players or damage caused by service performed by anyone other than Disruptive Limited are expressly excluded from the warranty stated above.



Disruptive Limited will, at its sole election, repair or replace any product that proves to be defective in either or both of workmanship or materials and which is covered by this warranty. If the product is no longer current or is out of stock, at its sole election, Disruptive Limited may replace your product with a similar product. Disruptive Limited's liability is limited to the repair or replacement, of any defective product under warranty and any incidental or consequential damages are expressly excluded to the fullest extent permitted by law. This warranty is not transferable and does not extend to users other than the person who originally purchased the product.

This warranty gives you specific legal rights in addition to the ones afforded you by the laws of your country and nor is this warranty intended nor does it operate to limit such legal rights.

HouseParty SmartDock controls:




Box contents: Комплект поставки:

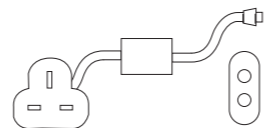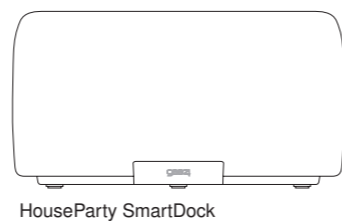


Power supply (UK & EU)
Шнур питания с евровилками



4 dock adapters for iPod / iPhone
4 док-адаптера для iPod / iPhone



User manual
Руководство
пользователя



Remote control
Пульт
дистанционного
управления

Made for
 iPod  iPhone

Made for iPod touch (1st, 2nd, and 3rd generation), iPod classic, iPod with video, iPod nano (1st, 2nd, 3rd, 4th, and 5th generation) and iPod mini. Made for iPhone 3GS, iPhone 3G and iPhone.