

Title: GEAR4 PG466 StreetParty Revolve MANUAL

Date: 21 Dec 2011
Version: V1.4RU
Artwork last revised by:
design3@gear4.com

Finished Dimensions:

Height: 124mm
Width: 124mm

gear4



StreetParty™ Revolve

User Manual

Руководство пользователя

Thank you for buying the StreetParty Revolve, portable speaker for iPod and iPhone. Please read over this manual before use and retain it for future reference.

Благодарим за покупку портативной аудиосистемы StreetParty Revolve для iPod и iPhone. Пожалуйста, прочтите это руководство перед началом эксплуатации и сохраните его.

MODEL NO: PG466

POWER ADAPTER: KSAD0500200W1UV-1

INPUT: 100-240V ~ 50/60Hz 0.4A

OUTPUT: 5.0V \equiv 2.0A

V1.4RU



RoHS





2



6




StreetParty Revolve

Please read before use.

Features:

- Rotating dock for watching movies in landscape
- Powered by 4 AAA batteries (not included) or mains
- Line in port for use with other music players
- Big sound, small speaker
- Charges iPod / iPhone (when powered by mains)


Getting started:

- Plug the power supply cable firstly into the back of the unit and then into the mains supply. Alternatively insert 4 AAA batteries into the bottom of the speaker.
- To activate the speaker, press the  button.

For use with iPod / iPhone:

- Select and insert the correct docking adapter to suit your iPod / iPhone.

N.B. Please ensure that you use the correct dock adapter for your iPod / iPhone to avoid damage to the dock connector. If the specific adapter is not included, please use the adapter that was provided by Apple with your iPod / iPhone. GEAR4 will not be responsible for any damage resulting in not using a dock adapter.

- Pull the left hand side of the speaker to extend.
- Carefully insert your iPod / iPhone into the dock.
- Your iPod / iPhone can be rotated to the landscape position by turning it to the left.
- To adjust the volume press +/- on the speaker or use the volume bar on your iPod / iPhone.
- To put the speaker into standby mode, press the  button.

N.B. If no music is played for 5 minutes, the StreetParty Revolve will automatically go into standby mode. The unit will reactivate when the iPod / iPhone is in play mode again.

For use with other audio devices:

- Plug one end of a 3.5mm audio cable (not included) into your MP3 or MP4 player and connect the other end into the AUX line-in port at the back of the unit.
- Select the track and press play on your music source.

N.B. When a device is connected via the AUX line-in port, the StreetParty Revolve will not play your iPod / iPhone. Unplug the external device to return to iPod / iPhone mode.

Register your StreetParty Revolve to activate your warranty and receive product updates at www.gear4.com/register

Please ensure that your iPod / iPhone is using the latest software version. To update the software, connect your iPod / iPhone to iTunes. If there is a newer software version available you will be prompted to upgrade.

Copyright © 2011 Disruptive Limited. All rights reserved. Reproduction in part or in whole is prohibited. GEAR4 and StreetParty are trade marks of Disruptive Limited. iPhone, iPod, iPod nano, iPod classic and iPod touch are trade marks of Apple Inc., registered in the U.S. and other countries.

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION

Use of controls or adjustments of performance or procedures other than those specified may result in hazardous radiation exposure.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store your unit. To avoid damage, never place the unit or its batteries near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power cables, pull the plugs first. Do not pull the cords by themselves.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.

- Refer servicing to qualified personnel only.
- Do not open the housing.
- Do not twist or pinch the power supply cords. If the plugs or power supply cords need to be replaced, ensure that they comply with the manufacturer's recommendation.
- Unplug the unit during lightning storms and when unused for extended periods of time.

DISPOSAL


According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system. Please act according to your local rules and do not dispose of your old products with your normal household waste.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated 'Dangerous Voltage' within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to person.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

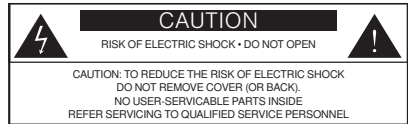

FCC RULES

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) This device may not cause interference and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.



Характеристики продукта:

- ❶ РЕЖИМ ОЖИДАНИЯ
- ❷ ГРОМКОСТЬ +
- ❸ ГРОМКОСТЬ -
- ❹ ОТСЕК ДЛЯ БАТАРЕЕК
- ❺ ЛИНЕЙНЫЙ ВХОД (AUX IN)
- ❻ ГНЕЗДО ПОСТОЯННОГО ТОКА (DC IN)

Характеристики продукта:

- Вращающийся док для просмотра фильмов в горизонтальном режиме
- Питание от 4-х батареек AAA (не входят в комплект поставки) или от сети
- Линейный вход для подключения других музыкальных плееров
- Громкий звук при компактных размерах динамика
- Зарядка iPod / iPhone (при питании от сети)

Начало работы:

- Подключите сетевой кабель к разъему на

задней панели устройства, затем воткните его в розетку. Или вставьте 4 батареек AAA.

- Чтобы включить динамик, нажмите кнопку ϕ .

Использование с iPod / iPhone:

- Выберите и вставьте правильный док-адаптер, подходящий под Ваш iPod / iPhone.

Внимание! Во избежание повреждения док-коннектора следует использовать док-адаптеры, подходящие к Вашему iPod / iPhone. Если в поставку не входит специальный адаптер, используйте адаптер, предоставленный компанией Apple вместе с iPod / iPhone. GEAR4 не несёт ответственности за какие-либо повреждения, явившиеся следствием неиспользования соответствующего док-адаптера.

- Вытяните левый динамик.
- Аккуратно вставьте iPod / iPhone в док.
- iPod/iPhone можно установить в горизонтальное положение, повернув его влево.
- Регулировка громкости звучания

осуществляется с помощью кнопок +/- на аудиосистеме или с помощью регулятора громкости Вашего iPod/iPhone.

- Чтобы перевести аудиосистему в режим ожидания, нажмите кнопку \mathcal{O} .

Внимание: Если музыка не проигрывается в течение 5 минут, StreetParty Revolve переходит в режим ожидания автоматически. При воспроизведении музыки iPod/iPhone снова переходит в обычный режим.

Использование с другими аудиоустройствами

- Подсоедините один конец 3.5мм аудио-кабеля (не входит в комплект поставки) к MP3- или MP4-плееру, а другой конец подключите к линейному входу AUX на задней панели устройства.
- Выберите трек и нажмите кнопку воспроизведения на Вашем аудиоустройстве.

Внимание: Когда устройство подключено через линейный вход AUX, StreetParty Revolve не проигрывает музыку с iPod/iPhone. Чтобы вернуться в режим проигрывания с iPod/iPhone, отключите внешнее устройство.

Для активации гарантии и получения обновлений зарегистрируйте Ваш StreetParty Revolve на сайте www.gear4.com/register

Удостоверьтесь, что в Вашем iPod / iPhone используется самая последняя версия программного обеспечения. Чтобы обновить программное обеспечение, подключите свой iPod / iPhone к iTunes. Если будет доступна более новая версия программного обеспечения, Вам напомнят об обновлении.

Copyright © 2011 Disruptive Limited. Все права защищены. Полное или частичное воспроизведение запрещено. GEAR4 и StreetParty являются торговыми знаками компании Disruptive Limited. iPhone, iPod, iPod nano, iPod classic и iPod touch являются торговыми знаками компании Apple Inc., зарегистрированными в С.Ш.А. и других странах.

"Изготовлено для iPod" и "Изготовлено для iPhone" означает, что для подключения, в частности, к iPod или iPhone соответствию и соответствия рабочим показателям компаний Apple было разработано, а разработчиком сертифицировано электронное вспомогательное устройство.

Apple не несет ответственности за функционирование данного устройства или его соответствие стандартам безопасности и регулятивным нормам.

ПРЕДУПРЕЖДЕНИЕ

Чтобы уменьшить риск возникновения пожара или поражения электрическим током, не подвергайте данное устройство воздействию дождя или влаги.

ПРЕДОСТОРОЖНОСТЬ

Использование кнопок управления или регулировки режимов или процедур, отличных от указанных, может привести к опасному радиационному излучению.

РАСПАКОВКА И УСТАНОВКА

Осторожно распакуйте устройство. Рекомендуем сохранить упаковку в случае, если она когда-нибудь понадобится для его хранения. Чтобы избежать повреждения, не размещайте устройство или батареи для него рядом с радиаторами, перед нагревательными приборами, под прямыми солнечными лучами или вблизи воды.

В ЦЕЛЯХ БЕЗОПАСНОСТИ

- При отключении питания в первую очередь выдерните штепсельную вилку. Не тяните за шнур.
- Никогда не беритесь за вилку мокрыми руками, так как это может привести к пожару или поражению электрическим током.
- Ремонтные работы должны выполняться только квалифицированным персоналом.
- Не открывайте корпус.
- Не крутите и не сжимайте шнур питания. Если следует заменить вилку или шнур питания, убедитесь, что они соответствуют рекомендациям производителя.

- Отключайте устройство во время грозы и в случае, если оно не используется в течение длительного периода времени.
- Если в качестве устройства отключения используется сетевой или приборный штепсель, устройство отключения должно оставаться в абсолютно рабочем состоянии.

УТИЛИЗАЦИЯ


В соответствии с европейской директивой 2002/96/ЕС все электрическое и электронное оборудование должно собираться отдельно местной системой сбора отходов. Соблюдайте местные правила и не выбрасывайте старые изделия вместе с бытовыми отходами.



Символ вспышки молнии со стрелкой, заключенный в равносторонний треугольник, предназначен для предупреждения пользователя о наличии неизолированного "опасного напряжения" внутри корпуса изделия, которое может достигать значений, достаточных, чтобы создать риск поражения электрическим током.



Восклицательный знак внутри равностороннего треугольника предназначен для предупреждения пользователя о наличии важной информации об эксплуатации (техническом обслуживании) устройства и уходе за ним, входящей в комплект поставки.

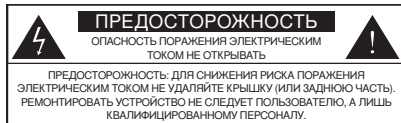

ПРАВИЛА ФКС

Вы должны учесть, что изменения и модификации, не одобренные стороной, ответственной за соответствие, могут лишить пользователя права на эксплуатацию оборудования. Данное оборудование было проверено и признано соответствующим ограничениям для цифровых устройств класса В в соответствии с частью 15 Правил ФКС.

Эти ограничения предназначены для обеспечения разумной защиты от вредных помех в жилых помещениях. Данное оборудование генерирует, использует и может излучать радиочастотную энергию, и, если оно не установлено и не используется в соответствии с инструкциями, оно может вызывать вредные помехи для радиосвязи.

Однако нет никакой гарантии, что помехи не возникнут при определенной установке. Если данное оборудование вызывает помехи для радио или телевизионного приема, что может быть определено путем включения и выключения устройства, пользователь может попытаться устранить помехи одной или несколькими из следующих мер:

- Переориентировать или переместить приемную антенну.
- Увеличить расстояние между оборудованием и приемником.
- Подключить устройство к розетке сети, отличной от той, к которой подключен приемник.
- Проконсультироваться с дилером или опытным радио/ТВ техником.

Функционирование устройства отвечает следующим двум условиям:

- 1) Это устройство не может вызывать помехи, и
- 2) Это устройство должно принимать любые помехи, включая те, которые могут вызывать сбои в работе.

GEAR4 One-Year Warranty

Disruptive Limited, who owns the GEAR4 brand, warrants this product to be free from defects in workmanship and materials at the point of sale and that when this product is used in accordance with the instructions for its use it shall continue to be free from defects, for a period of one (1) year from the date of original purchase.

Any damage or defects caused by a failure to follow the instructions which relate to this product or as the result of an accident, abuse, misuse, misapplication, product modification, faulty ancillary equipment, improper voltage or current, lightning or other acts of God, commercial non-home use, normal wear and tear, shipping damage or loss, damage to digital media players or damage caused by service performed by anyone other than Disruptive Limited are expressly excluded from the warranty stated above.

Disruptive Limited will, at its sole election, repair or replace any product that proves to be defective in either or both of workmanship or materials and which is covered by this warranty. If the product is no longer current or is out of stock, at its sole election, Disruptive Limited may replace your product with a similar product. Disruptive Limited's liability is limited to the repair or replacement, of any defective product under warranty and any incidental or consequential damages are expressly excluded to the fullest extent permitted by law. This warranty is not transferable and does not extend to users other than the person who originally purchased the product.

This warranty gives you specific legal rights in addition to the ones afforded you by the laws of your country and nor is this warranty intended nor does it operate to limit such legal rights.


Return Policy / Warranty Service

Warranty claims will only be valid when accompanied with proof of purchase to evidence that the product was purchased from an authorised dealer and that the claim is within allowed period. To make a warranty claim you must first contact Disruptive Limited by email to support@gear4.com stating your name, full postal address, telephone number, date and place of purchase and a detailed description of the problem you are experiencing and don't forget to include the name of the product and its serial number.


If the defect is covered by this warranty then you will be provided with a Return to Manufacturer Authorisation number and instructions for return shipment. Sending the product back to us under this warranty shall be at your expense, and the return **MUST** be accompanied by the original proof of purchase whilst we highly recommend that you retain a copy of this. Disruptive Limited shall not be responsible for lost or damaged products during shipment. Any product returned without the original proof of purchase will be returned without being examined or tested and such return shall be at the customer's expense.

To avoid any additional charges, all returns and exchanges must include the original packing materials, product box, all included accessories which may include, but not necessarily be limited to, power adapters or power cords, connecting cables, remote controls, adapters, inserts cards and instruction manuals. The absence of any of the aforementioned items may mean that you incur a charge for their replacement. Disruptive Limited shall not be liable for any inconvenience, or loss of time, loss of use of the product.


StreetParty Revolve controls:

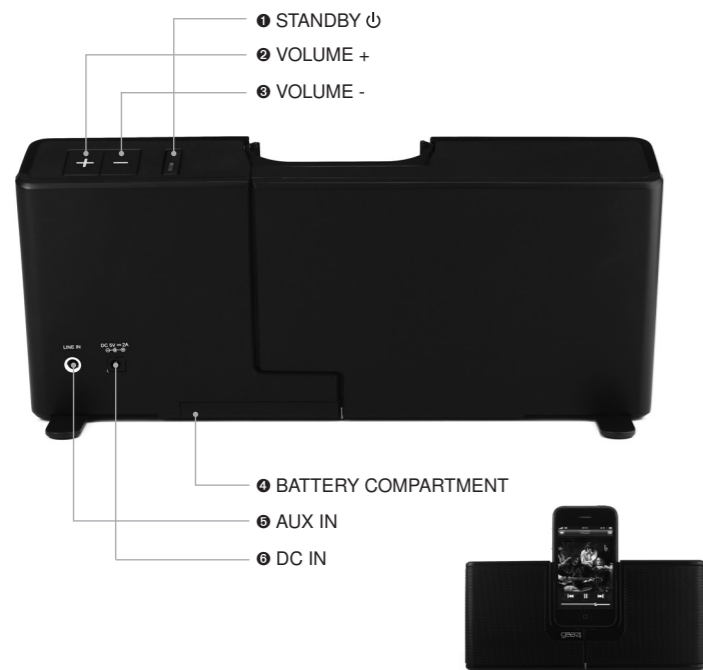

Box contents: Комплект поставки:

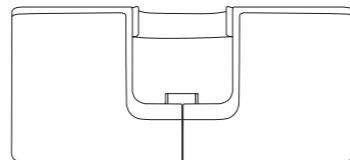

User manual
Руководство
пользователя

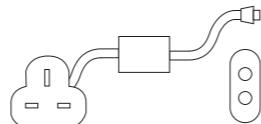

Made for
iPod iPhone

Made for iPod touch (1st, 2nd, and 3rd generation), iPod classic, iPod with video and iPod nano (1st, 2nd, 3rd, 4th, and 5th generation).
Made for iPhone 4, iPhone 3GS, iPhone 3G and iPhone.