

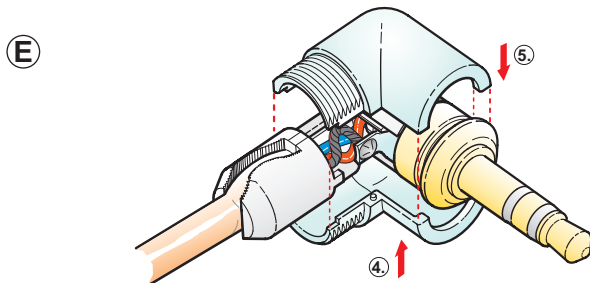
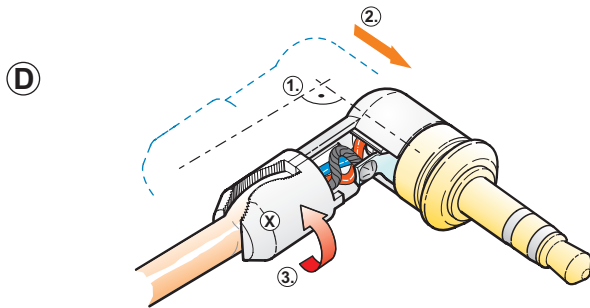
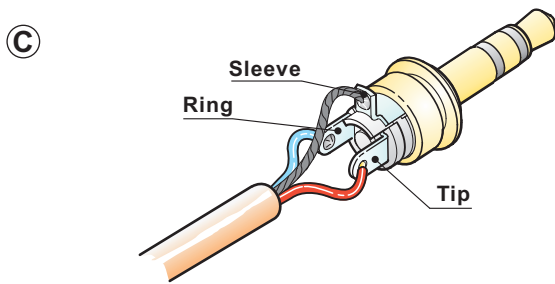


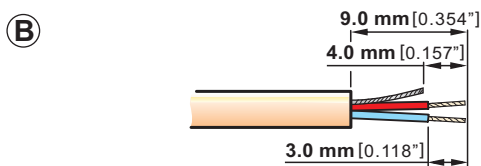

# ASSEMBLY INSTRUCTION

## NEUTRIK tinyPLUG | 3.5 mm right-angle stereo plug

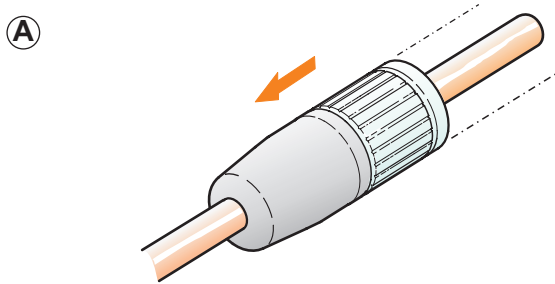

**A** Slide the boot onto the cable.

**B** Prepare cable as shown.

**C** Solder the wire ends .

**D** Assembly of strain relief:


① Bend cable by 90° towards the sleeve contact.

② Position the chuck on the connector body.

③ Close the strain relief  
(break away part (X) if cabel O.D. > 3.2 mm)

**E** Place the shell halves onto the connector body.

**F** Slide the bushing up to the thread and tighten it.

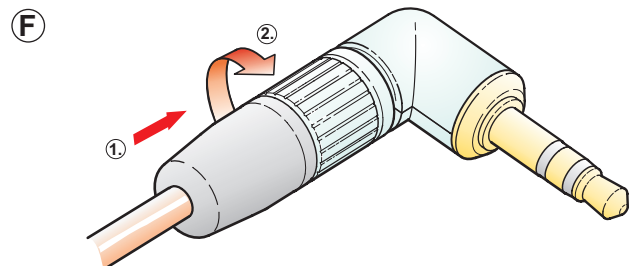

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93  
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202  
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439  
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 128 / 3102M1241 | Update: 11.03.2011 | Data subject to change without prior notice. ©2011 NEUTRIK®. ALL RIGHTS RESERVED.