



1

Level the mount and mark.

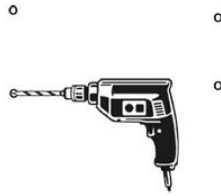


Drill the mounting holes.

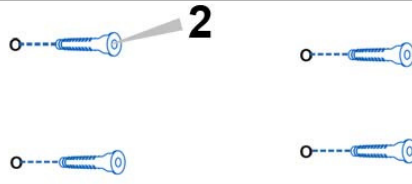

2


Insert the wall anchors\* to the wall and tap them flush with a hammer.

\* Never use wall anchors on drywall

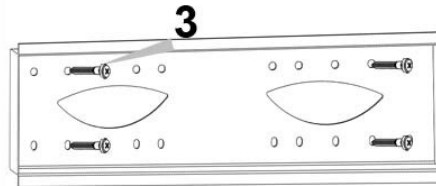

3

Fix the plate to the wall.

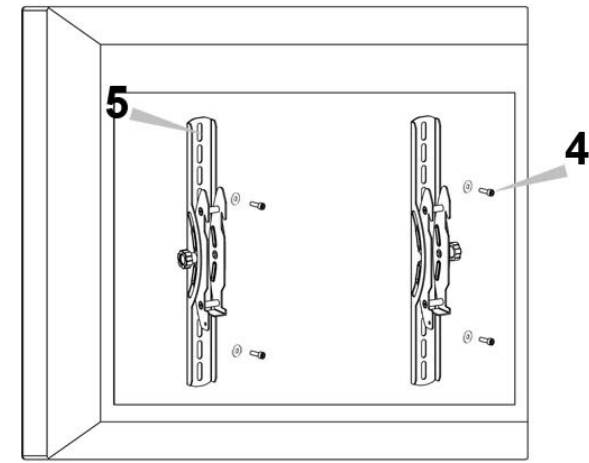


5



4

Attach the mounting rails to screen.



- Ensure that each rail mounting slot is facing down.
- Use the selected screws and washers to mount the rail to screen.

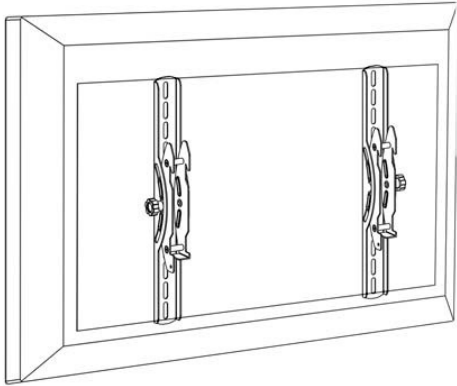

Tightly secure the mounting screws.

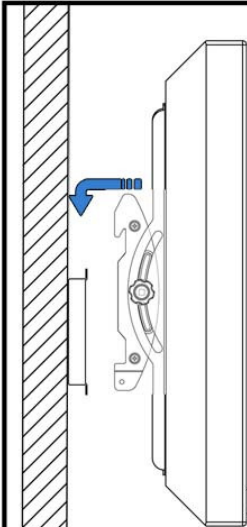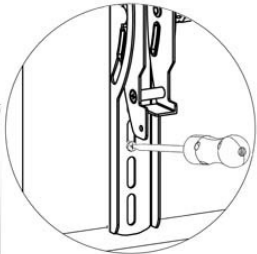

Mount screen to the wall.

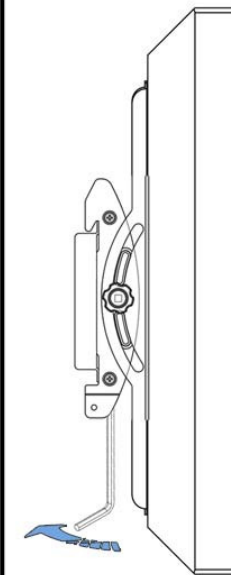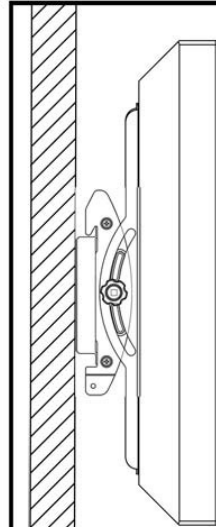


SAFETY LOCK


TILT

6


Tightly secure the safety lock using the allen key.



x1



x2



x1



x4



x4

M4



x4

M5




x4

M6



x4

M8



x4



x4

M5



x4

M6



x4

M8

