


Flexi Wal

Page 1 of 1 |

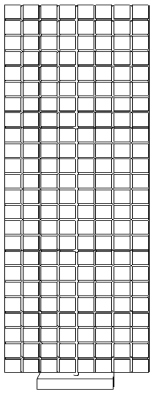


Required Apparatus:

- 9 x stainless steel and wooden rods
- 3 x wooden bases
- 9 x acoustic panels
- 12 x foam rods

STEP 1

Assemble the stainless steel rods on the wooden base like shown on the image above.

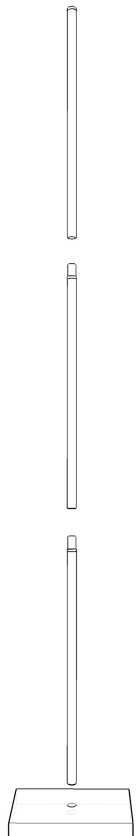

STEP 2

Carefully fit the middle opening of the acoustic panels through the stainless steel rod as shown on the image. And place the foam rods on the left and right of each panel to add stability.

